




KOMODO®

OPERATION GUIDE

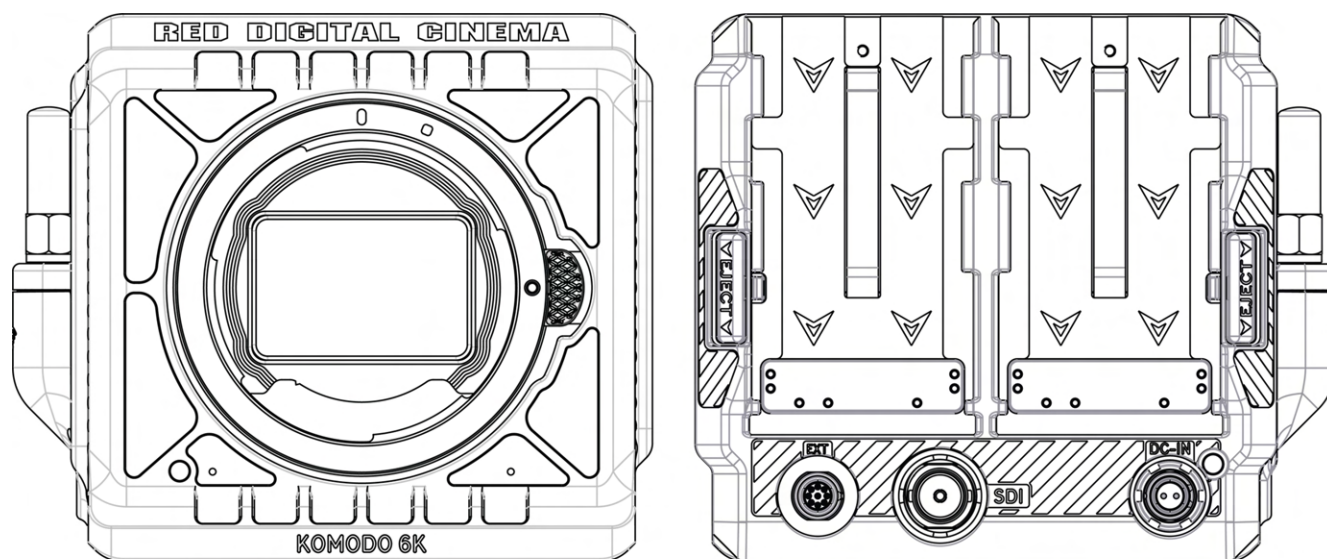

KOMODO 6K S35 | MONOCHROME | V1.7

RED.COM

TABLE OF CONTENTS

DISCLAIMER	IV	PRORES COLOR PROFILE	69
SAFETY INSTRUCTIONS	VI	PRE-RECORD	70
1. INTRODUCTION		RECORDING MODE	72
KOMODO	1	TIMELAPSE	73
2. QUICK REFERENCE		FRAME LIMIT	74
PREPARING THE CAMERA HARDWARE	4	SLATE	75
PREPARING THE CAMERA SYSTEM	4	AUDIO / TC MENU	80
CONFIGURING THE SETTINGS	4	AUDIO SOURCE	82
RECORDING	4	INTERNAL MICROPHONE	83
PROCESSING FOOTAGE	4	EXTERNAL AUDIO	84
3. CAMERA COMPONENTS		HEADPHONE	85
CAMERA BODY	5	TIMECODE SOURCE	86
CAMERA BODY CONTROLS AND FEATURES	5	TIMECODE DISPLAY MODE	88
FRONT	5	MONITORING MENU	89
TOP	6	LCD	90
LEFT	7	SDI	92
RIGHT	8	LIVE STREAM	101
BACK	9	TOOLS	102
BOTTOM	10	GUIDES	110
CAMERA BODY LEDS	11	MEDIA MENU	117
LENSES AND ADAPTERS	15	EJECT	117
COMPATIBLE LENSES	16	MEDIA INFO	118
COMPATIBLE MOUNT ADAPTERS	16	SECURE FORMAT	118
ATTACHING LENSES	16	PRESETS MENU	122
REMOVING LENSES	16	CREATE PRESET	122
LCD TOUCHSCREEN	17	ON MEDIA PRESETS	124
STATUS BAR	21	IN CAMERA PRESETS	124
STATUS PAGE	25	AUTOFOCUS MENU	125
MONITORING TOOLS	26	ENABLE	125
HISTOGRAM	30	MODE	126
AUDIO TOOLS	31	SIZE	126
PLAYBACK	33	POSITION	126
4. MENUS		COMMUNICATION MENU	128
IMAGE / LUT MENU	38	CAMERA	129
ISO	39	CONNECTIONS	130
SHUTTER	40	CLIENTS & SERVICES	148
WHITE BALANCE	42	CLOUD UPLOAD	151
ND	45	SYSTEM SETTINGS MENU	156
OUTPUT COLOR SPACE	46	DATE / TIME	157
OUTPUT TONE MAP	46	LENS	159
HIGHLIGHT ROLL-OFF	47	POWER	162
DISPLAY PRESET	48	SENSOR	164
3D LUT	49	INDICATORS	165
CDL	51	GPO FUNCTION	167
FILM GRADE AND VIDEO GRADE	52	STATUS SETTINGS	168
EXPOSURE ADJUST	57	SYSTEM STATUS	172
PROJECT SETTINGS MENU	58	LANGUAGE MENU	174
FORMAT	59	MAINTENANCE MENU	174
RECORDING FRAME RATE	63	CALIBRATE	175
PROJECT TIME BASE	64	CALIBRATION	176
FILE FORMAT	64	SAVE LOG	177
R3D QUALITY	67	RESET DEFAULTS	178
PRORES RESOLUTION	68	FACTORY RESET	178
PRORES CODEC	69	UPGRADE	179

5. HOW TO

WI-FI CONFIGURATION	180
CONNECTING WIRELESSLY TO AN EXISTING	
WI-FI NETWORK	180
KOMODO LINK ADAPTOR	184
ANDROID CONFIGURATION	184
APPLE CONFIGURATION	190
NETWORK CONFIGURATION	197
FTPS CONFIGURATION	200
CAMERA SET-UP	201
SOFTWARE SET-UP (FILEZILLA)	202
ADDITIONAL INFORMATION	203
MEDIA MANAGEMENT	204
EJECTING (UNMOUNTING) MEDIA	204
INSERTING THE MEDIA	206
SECURE FORMAT	208
MEDIA INFORMATION	209
FILE SYSTEM	210
CLIP NAMING CONVENTION	210
CLIP METADATA	210
MEDIA BEST PRACTICES	211
RED MONITOR INTERFACE CABLE	212
MONITORING	213
ONBOARD LCD TOUCHSCREEN	213
SDI OUTPUT TO A MONITOR	214
RED CONTROL	216
KOMODO LINK ADAPTOR	217
EXPOSURE	218
FALSE COLOR EXPOSURE TOOLS	220
FOCUS	221
FOCUS PEAKING MODE	221
EDGE PEAKING MODE	221
PEAKING PEAKING MODE	221
TIMECODE	222
TIME OF DAY	222
EDGECODE	223
ZEBRA MODES	225
ZEBRA OVERVIEW	225
PRE-RECORDING CONTENT	226
CALIBRATING THE SENSOR	227
WHEN TO CALIBRATE THE SENSOR	227
UPGRADING THE FIRMWARE	227
VERIFYING THE FIRMWARE VERSION	227
UPGRADING THE FIRMWARE	227
UPGRADING THE DSMC3™ RED® TOUCH	
7.0" LCD FIRMWARE	230
UPDATING AUTOMATICALLY THROUGH THE	
CAMERA	230
UPDATING MANUALLY THROUGH SMALLHD	230
SYSTEM MAINTENANCE	231
EXTERIOR SURFACES	231
STORAGE	231
ONBOARD LCD SCREEN	232
WATER DAMAGE	232

6. TROUBLESHOOTING

GENERAL TROUBLESHOOTING TIPS	233
CONTACT SUPPORT	233
STATUS ICONS	234

A. MECHANICAL DRAWINGS

FRONT VIEW	236
BACK VIEW	237
RIGHT SIDE VIEW	237
LEFT SIDE VIEW	238
TOP VIEW	239
BOTTOM VIEW	239
EXTENSION PORT	240
9-PIN 0B ODU AUXILIARY PORT PINOUT	240
DC-INPUT	241
SPECIFICATIONS	241
ODU 0B 2-PIN CONNECTOR	241
CTRL (RS-232 CONTROL)	242
SPECIFICATIONS	242
ODU 00B 4-PIN CONNECTOR	242

B. TECHNICAL SPECIFICATIONS 243**C. ACCESSORIES**

BATTERIES	246
REDVOLT BP	246
CANON BP-955	247
CANON BP-975	247
RED PRO CFAST 2.0 MEDIA	248
RED CFAST 2.0 READER	248
KOMODO-X™ RF TO PL WITH ELECTRONIC	
ND ADAPTER PACK	249
KOMODO POWER ADAPTOR	249
KOMODO LINK ADAPTOR	250
OUTRIGGER HANDLE	250
KOMODO® WING GRIP	251
KOMODO EXPANDER MODULE	251
RED CONTROL APPS	252
RED CONTROL	252
RED CONTROL PRO	253

DISCLAIMER

RED® has made every effort to provide clear and accurate information in this document, which is provided solely for the user's information. While thought to be accurate, the information in this document is provided strictly "as is" and RED will not be held responsible for issues arising from typographical errors or user's interpretation of the language used herein that is different from that intended by RED. All information is subject to change as a result of changes in local, federal or other applicable laws.

RED reserves the right to revise this document and make changes from time to time in the content hereof without obligation to notify any person of such revisions or changes. In no event shall RED, its employees or authorized agents be liable to you for any damages or losses, direct or indirect, arising from the use of any technical or operational information contained in this document.

This document was generated on 8/8/2023. To see earlier versions of this document, submit a Support ticket at <https://support.red.com>. For comments or questions about content in this document, send a detailed email to OpsGuides@red.com.

COPYRIGHT NOTICE

COPYRIGHT© 2023 RED.COM, LLC

All trademarks, trade names, logos, icons, images, written material, code, and product names used in association with the accompanying products are the copyrights, trademarks, or other intellectual property owned and controlled exclusively by RED.COM, LLC. For a comprehensive list, see www.red.com/trademarks.

TRADEMARK DISCLAIMER

All other company, brand, and product names are trademarks or registered trademarks of their respective holders. RED has no affiliation to, is not associated with or sponsored by, and has no express rights in third-party trademarks. Adobe and Adobe Premiere Pro are registered trademarks of Adobe Systems Incorporated. DaVinci and DaVinci Resolve are registered trademarks of Blackmagic Design in the U.S. and other countries. Leica is a registered trademark of Leica Microsystems. Canon is a registered trademark of Canon, U.S.A. Apple, iOS, Macintosh, Final Cut Pro, and QuickTime are registered trademarks of Apple Inc. in the U.S. and other countries. Windex is a registered trademark of S. C. Johnson & Son, Inc. Windows is a registered trademark of Microsoft Corporation. Avid is a registered trademark of Avid Technology, Inc. FileZilla is a registered trademark of its respective owners. Nuke™ is a trademark of The Foundry Visionmongers Ltd. SCRATCH is a registered trademark ® of ASSIMILATE, 2006. SCRATCH SCAFFOLDS, SCRATCH EXTENSIONS, and SCRATCH Digital Intermediate Process Solution are all trademarks and registered trademarks of ASSIMILATE, 2006. All rights reserved. Autodesk, the Autodesk logo, Flame are registered trademarks or trademarks of Autodesk, Inc., and/or its subsidiaries and/or affiliates in the USA and/or other countries.

COMPLIANCE STATEMENTS

INDUSTRIAL CANADA EMISSION COMPLIANCE STATEMENTS

This device complies with Industry Canada license-exempt RSS standards RSS 139 and RSS 210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

To comply with FCC and Industry Canada RF exposure limits for general population/ uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of 70 mm from all persons and operating in conjunction with any other antenna or

transmitter, except in accordance with FCC multi-transmitter product procedures.

Other user manual statements may apply.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Pour se conformer aux limites d'exposition aux RF de la FCC et d'industries Canada pour la population générale/ exposition non contrôlée, l'antenne(s) utilisée pour ce transmetteur doit être installée pour fournir une distance de séparation d'au moins 70 mm de toutes les personnes et fonctionnant conjointement avec une autre antenne ou émetteur, sauf en conformité avec les procédures de produits multi-émetteur FCC.

Autres d'éclarations manuel de l'utilisateur peuvent s'appliquer.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENTS



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial

environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

To maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION: Exposure to Radio Frequency Radiation.

The device shall be used in such a manner that the potential for human contact is minimized.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.



CAUTION: Regulations of the FCC and FAA prohibit airborne operation of radio-frequency wireless devices because their signals could interfere with critical aircraft instruments.



CAUTION: If the device is changed or modified without permission from RED, the user may void his or her authority to operate the equipment.

AUSTRALIA AND NEW ZEALAND STATEMENTS

RED declares that the radio equipment described in this document complies with the following international standards:

- IEC 62368-1 – Product Safety
 - ETSI EN 300 328 – Technical requirement for radio equipment
- RED declares digital devices described in this document comply with the following Australian and New Zealand standards:
- AS/NZS CISPR 32 – Electromagnetic Interference
 - AS/NZS 61000.3.2 – Power Line Harmonics
 - AS/NZS 61000.3.3 – Power Line Flicker

SOUTH KOREA STATEMENTS

	1. Equipment Name/Model Name: 특정소출력무선기기 (무선데이터통신시스템용 무선기기) / KOMODO 6K, KOMODO ST
	2. Registration No.: R-R-DV5-2020KMD000
	3. Applicant Name: ㈜ 디브이인사이드
	4. Manufacture Date: 2020
	5. Manufacturer/Country of Origin: RED Digital Cinema, LLC / USA, Mexico

JAPAN STATEMENTS

This equipment contains specified radio equipment that has been certified to the Technical Regulation Conformity Certification under the Radio Law.

本機器は、電波法に基づく技術基準適合証明等を受けた特定無線デバイスを使用しております。



EUROPEAN UNION COMPLIANCE STATEMENTS




RED declares that the radio equipment described in this document complies with the EMC Directive (2014/30/EU) and the Low Voltage Directive (2014/35/EU) issued by the Commission of the European Community.

Compliance with this directive implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 62368-1 (IEC 62368-1) – Product Safety
- ETSI EN 300 328 Technical requirement for radio equipment
- ETSI EN 301 489 General EMC requirements for radio equipment
- EN 55032 (CISPR 32) Electromagnetic Compatibility
- EN 55035 (CISPR 35) Immunity Requirements
- EN 61000-3-2 (IEC 61000-3-2) Harmonic Current Emissions
- EN 61000-3-3 (IEC 61000-3-3) Voltage changes, voltage fluctuations and flicker
- EU 2015/863 RoHS Directive

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

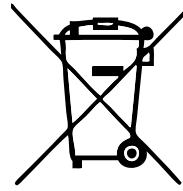

The Waste Electrical and Electronic Equipment (WEEE) mark applies only to countries within the European Union (EU) and Norway. This symbol, on the product and accompanying documents, means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may

be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation. For business users in the European Union, if you wish to discard electrical and electronic equipment, contact your dealer or supplier for further information.

RESPONSIBLE PARTY

RED Digital Cinema
94 Icon
Foothill Ranch, CA 92610
USA

SAFETY INSTRUCTIONS

- This equipment is intended to be used by instructed personnel and is not intended to be used by children.
- DO NOT use the camera or accessories near water. Avoid exposing your camera to moisture. The unit is not waterproof, so contact with water could cause permanent damage to the unit as well as electric shock and serious injury to the user. DO NOT use the camera in the rain or under other conditions with high moisture without appropriate protection, and immediately remove power source if camera or accessories are exposed to moisture.



WARNING: To reduce the risk of fire or electric shock, do not expose the camera to rain or moisture.

- DO NOT point the camera directly into extreme light sources such as the sun or lasers. Permanent damage to optical path or sensor may occur, which is not covered by manufacturer's warranty.
- DO NOT expose your camera to excessive vibration or impact (shock). Be careful not to drop your camera. Internal mechanisms may be damaged by severe shock. Mechanical alignment of optical elements may be affected by excessive vibration.
- **ELECTROMAGNETIC INTERFERENCE:** The use of devices using radio or other communication waves may result in the malfunction or interference with the unit and/or with audio and video signals.
- Clean only using a dry cloth. When cleaning your camera, remember that it is not waterproof and moisture can damage electronic circuitry. DO NOT rinse or immerse any element of the camera, lens or other accessory, keep them dry at all times. DO NOT use soaps, detergents, ammonia, alkaline cleaners, and abrasive cleaning compounds or solvents. These substances may damage lens coatings and electronic circuitry.
- Maintain sufficient ventilation—DO NOT block any ventilation openings or obstruct cooling fan airflow.



CAUTION: Proper camera ventilation requires a minimum 0.5" (1.25 cm) clearance between the camera ventilation openings and external surfaces. Verify that objects that can block the fan intake and exhaust ports do not impede airflow. Failure to permit adequate airflow may result in overheating of the camera, degraded operation, and in extreme situations, damage to the camera.



WARNING: Media cards can become very hot during prolonged recording sessions. When ejecting the media card, let it cool before touching it with bare fingers.

- DO NOT operate or store near any heat sources such as radiators, heat registers, stoves, or any other apparatuses that produce heat. Store in a protected, level and ventilated place. Avoid exposure to temperature extremes, damp, severe vibration, strong magnetic fields, direct sunlight or local heat sources during storage. Remove any batteries from the camera before storage. Recommended storage and usage temperatures for your camera, lenses and other accessories are:
 - Operating range: 32° F to 104° F (0° C to 40° C)
 - Storage range: -4° F to 122° F (-20° C to 50° C)
- If there are any performance issues with your camera or accessories when operating within this temperature range, submit a support ticket to <https://support.red.com>.

- DO NOT bypass the third prong of the grounding-type plug on the power cord of the included power adaptor. A grounding-type plug has two blades and a third "grounding" prong. The third prong is provided for your safety. You must connect the plug to an outlet with a protective earth connection. If the grounding-type plug does not fit into your outlet, do not attempt to modify the plug or outlet, consult a qualified electrician.
- Protect all power cords from being pinched, walked on, or driven over by a vehicle. Replace any power cords suspected of sustaining damage due to crushing or other forms physical damage.



CAUTION: Install this camera in a proper support system that can handle the entire weight of the camera and the accessories. Secure the camera by using the 1/4-20 and/or the 3/8-16 mounting points located on the bottom of the camera. Always verify that the screws are tightened properly. When the camera is not properly attached, or is placed on an unstable surface, the camera can fall and cause injury or be damaged.



CAUTION: Products marked with this symbol are Class 2 devices. These double insulated devices are not provided with a grounding type plug.



CAUTION: The power cord plug for the included power adaptor is used as the power disconnect. To disconnect all power from the power adaptor, unplug the power cord plug from the wall outlet. During use, the power cord plug should remain easily accessible at all times.

- Lithium-ion batteries may be subject to special handling requirements pursuant to federal and local laws. Refer to specific shipping instructions included with your battery regarding proper transport of your battery. Do not handle your battery if it is damaged or leaking. Disposal of batteries must be in accordance with local environmental regulations. For example, California law requires that all rechargeable batteries must be recycled by an authorized recycle center. Storing batteries fully charged or in high temperature conditions may permanently reduce the life of the battery. Available battery capacity may also be temporarily lessened after storage in low temperature conditions.



WARNING: DO NOT expose the battery to excessive heat.



CAUTION: Refer all service and repair to qualified RED service personnel. To reduce the risk of electric shock, and damage to the camera or accessories, DO NOT attempt to perform any servicing other than any procedures that are recommended in the operating instructions.



INDOOR USE ONLY: This device is designed primarily for indoor use.

- El aparato no debe quedar expuesto a goteo o salpicaduras por líquidos.

BATTERY STORAGE AND HANDLING



WARNING: Failure to read, understand, and follow these instructions may result in overheating, chemical leakage, smoke emission, fire, or other potentially harmful results.



WARNING: Only replace the battery with a battery of the same type, or with a battery that is equivalent.

- Read and adhere to all safety instructions provided by the manufacturer of the batteries.

- Always follow proper battery handling and storage practices. Improper handling and failure to abide by proper storage instructions may cause permanent damage to batteries, or degrade battery charge holding capacity. Improper handling practices or failure to comply with instructions may also put you at risk.
- Lithium-Ion batteries, like the REDVOLT Micro-V, self-discharge over time. When storing for long periods of time, store batteries separately from the camera or charger and remember to charge batteries to a capacity level of 40% to 60%. If batteries will be stored for long periods of time, RED recommends that you check the charge level at least once every six (6) months, and recharge batteries to a capacity level of 40% to 60%.
- When not in use, remove the battery from the camera or charger and store the battery in a cool, dry place. Avoid extreme hot temperatures (such as inside a hot car), corrosive gas, and direct sunlight. The optimal storage temperature for batteries is between -4° F to 68° F (-20° C to 20° C).
- If the battery leaks and the electrolyte reaches the eyes, do not rub them. Instead, rinse the eyes with clean running water and immediately seek medical attention. Failure to do this may result in eye injury.



WARNING: Batteries stored in a discharged state for long periods of time may self-discharge and lose the ability to hold a charge.



WARNING: If recharging operation fails to complete even after a specified recharging time has elapsed, immediately stop further recharging.

- DO NOT store batteries in a fully charged state for extended periods of time.
- DO NOT store batteries in a fully discharged state for extended periods of time.
- DO NOT store batteries in the camera or in a charger for extended periods of time.
- DO NOT use batteries for purposes other than their intended use.
- DO NOT store batteries in extreme hot or cold temperatures.
- DO NOT store batteries in direct sunlight.
- DO NOT disassemble or modify the battery.
- DO NOT overcharge batteries. Overcharging may increase internal temperature beyond the recommended limits and cause permanent damage to the battery.
- DO NOT connect the positive (+) and negative (-) terminals to a metal object such as a wire.
- DO NOT transport or store the battery together with metal objects such as jewelry, hairpins, etc. as they may generate heat if they come into contact with the battery.
- DO NOT discard the battery into fire or heat.
- DO NOT store, use, or recharge the battery near a heat source such as a fire or a heater.
- DO NOT allow the battery to get wet.
- DO NOT pierce the battery with pointed or other sharp objects.
- DO NOT step on, throw, or strike the battery with a hammer.
- DO NOT use a battery that appears to be deformed or damaged.
- DO NOT directly solder the battery.
- DO NOT put the battery into a microwave oven or a pressurized container.
- DO NOT use or subject the battery to intense sunlight or hot temperatures such as in a car in hot weather.
- DO NOT use it in a location where static electricity may be present.
- DO NOT exceed the recharging temperature range of 32° F to 104° F (0° C to 40° C).
- Store the battery in a location where children cannot reach it.
- If the battery leaks or gives off a bad odor, discontinue use immediately.
- If the battery gives off an odor, generates heat, becomes discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger and discontinue use.
- If electrolyte begins leaking from the battery and comes into contact with your skin or clothing, immediately wash it away with running water. Failure to do this may result in skin inflammation.

1. INTRODUCTION



Figure: KOMODO camera

KOMODO

KOMODO® 6K is the latest breakthrough product in RED's long line of innovative image capture technology. The newest entrant into the RED lineup is a compact, all-in-one, and highly powerful cinema camera. It features RED's cinema grade image quality, color science, and sensor technology in a portable form factor cinematographers can take anywhere and adapt to any shooting scenario.

The KOMODO is available with either a color or monochrome 6K S35 global shutter CMOS sensor. This sensor breaks new technical ground by retaining wide dynamic range and delivering unmatched RED imagery, without compromising creative or technical features. KOMODO includes a built-in Canon RF-style mount allowing users the flexibility to use RF-type lenses and several lens Adaptors, such as EF-type, PL, and Leica M mount.

The KOMODO records using R3D or ProRes formats written to a CFast 2.0 media card. The RED KOMODO is powered by REDVOLT BP batteries or a power cable. Control the KOMODO features with the **LCD Touchscreen**, or you can use the screen to watch playback.

QUICK REFERENCE

Refer to the **Quick Reference** section to get familiar with this guide and the camera.

R3D FILE FORMAT AND REDCODE

All videos and frames are recorded to the R3D® file format. The R3D file format was developed by RED to provide an efficient and manageable RAW video data format that promotes advanced post-production editing capabilities. In the R3D file format, the digital image received from the sensor is formatted as a pixel-defect corrected (but in all other aspects unprocessed) 16-bit per pixel RAW data frame. Each RAW frame, or sequence of RAW frames in a clip, is compressed using proprietary REDCODE® RAW compression, then stored to media.

RAW data is recorded independently of any RGB domain color processing such as ISO, White Balance, or other RGB color space settings. Instead, color parameters are saved as reference metadata; that is, color is not burned into the recorded RAW data. This innovative recording technique promotes flexibility in RGB color processing. It allows you to defer color correction to post-production, or to adjust the image color in the field, without changing the recorded RAW data image quality or dynamic range.

REDCODE is a compression codec that reduces R3D RAW files down to a manageable size, allowing the media to record longer. The ability to compress RAW data is one of the significant technological advances that RED has brought to the motion picture industry.

GLOBAL SHUTTER

This camera employs global shutter technology. This technology exposes all of the sensor's pixels in each frame simultaneously, unlike a rolling shutter that exposes lines of pixels (each with a delay) causing image artifacts on fast-moving objects. Global shutter technology not only improves the visual appearance of this camera's images, it also eliminates tracking and matte-painting distortions during post production.

IMAGE PROCESSING PIPELINE

This camera uses RED's Image Processing Pipeline 2 (IPP2). In IPP2, the advanced RED color space (REDWideGamutRGB) allows the camera to use every color that the sensor can generate up to the clipping threshold. Then the camera encodes the image using Log3G10, a gamma curve that retains extreme highlight and shadow detail. Using the advanced color space and gamma curve, RED IPP2 allows you to grade and make color adjustments in post-production, instead of in-camera. IPP2 also allows the camera to use a [CDL](#) for grading. For more information about IPP2, refer to the [RED IPP2](#) support page.

SHOOT FOR VIDEO AND STILL

High resolution video, such as the digital footage captured by the camera, has surpassed the detail necessary to produce professional full-sized prints. Because the camera is able to record RAW video at high frame rates and resolution, this camera is ideally suited to capture video and still images simultaneously while still preserving the full flexibility that RAW still photographers have come to expect.

POST-PRODUCTION

Many non-linear editing systems (NLEs) can open and edit RED footage, allowing full RAW control and flexibility without any need to re-transcode. Each NLE version may have specific compatibility requirements, such as camera firmware version or camera type. Before shooting, make sure you check all of the compatibility requirements.

You can open and/or edit R3D files by using one of the following products:

- **REDCINE-X PRO:** RED's proprietary application. Download [REDCINE-X PRO for Windows](#) or [REDCINE-X PRO for Mac](#) from www.red.com/downloads.
- **Adobe Premiere Pro**
- **Avid Media Composer**
- **DaVinci Resolve**
- **Final Cut Pro X:** Requires you to download the [RED Apple Workflow Installer](#) from www.red.com/downloads.
- **Foundry Nuke**
- **Assimilate Scratch**
- **AutoDesk Flame**
- **ColorFront Transkoder** (beta for latest support)
- **Pomfort Silverstack**

NOTE: Third-party applications may have limited compatibility with R3D files. Third-party developers must use the most recent [R3D SDK](#) to offer compatibility with the latest RED firmware.

POST-PRODUCTION WITH REDCINE-X PRO

REDCINE-X PRO is a professional one-light coloring tool set, equipped with an integrated time line, and with a collection of post effects software. REDCINE-X PRO provides the ideal environment to review recorded footage, edit metadata, organize projects, and prepare your R3D files. You can use REDCINE-X PRO or any of the compatible third-party NLEs to edit R3D files.

ADDITIONAL RESOURCES

- **RED.com:** Visit the [official RED website](#) for the latest information about RED products.
- **RED Downloads:** Go to [RED Downloads](#) to download the latest firmware, operation guides, and post-production software.
- **RED 101 Articles:** RED offers [in-depth technical articles](#) about RED cameras, post-production, and digital cinematography.
- **RED TECH Videos:** RED offers [videos](#) about understanding and using RED cameras.
- **RED Support:** Visit the [RED SUPPORT site](#) for support articles or to file a support ticket.

2. QUICK REFERENCE

Congratulations new RED KOMODO camera owner. This quick reference topic helps you get familiar with this guide and the **Camera Body**. It includes links to topics about configuring the camera to fit your recording requirements, and for learning the basic operation of the camera.

PREPARING THE CAMERA HARDWARE

Prepare the camera hardware for recording by:

- Installing compatible **Lenses and Adapters**
- **Inserting the Media**
- Connecting a power source (refer to **Power** or **KOMODO Power Adaptor**)
- **Turning on the camera**

PREPARING THE CAMERA SYSTEM

Configure the camera settings to prepare for recording (refer to the **System Settings Menu**).

CONFIGURING THE SETTINGS

- Configuring the camera system settings
- **Upgrading the Firmware**
- Calibrating the camera using the **Calibrate** feature
- Formatting the media (refer to **Secure Format**)
- Specifying the desired recording resolution (refer to **Format**)
- Configuring the **Recording Frame Rate** and **Project Time Base**
- Setting the exposure (refer to **Shutter**)
- Configuring the monitoring tools and reviewing the monitored image (refer to the **Monitoring Menu**)
- Reviewing the camera status (refer to **System Status**)

RECORDING

Start recording your project.

- Record by pressing the REC button on the **Camera Body** or **Outrigger Handle**
- Record by using the **LCD Touchscreen**
- Record by using an external trigger (refer to **Extension Port** and **KOMODO Expander Module**)
- Record by using USB-C (refer to **KOMODO Link Adaptor**)
- Record by using Wi-Fi (refer to the **Communication Menu**)

PROCESSING FOOTAGE

Perform post-production using any of the standard applications.

- Adobe® Premiere® Pro
- Avid® Media Composer®
- DaVinci Resolve®
- Final Cut Pro X®

3. CAMERA COMPONENTS

CAMERA BODY

This section describes the **Front**, **Top**, **Left**, **Right**, **Back**, and **Bottom** of the camera, and identifies the controls, buttons, **Camera Body LEDs**, and the lens mount on the body.

CAMERA BODY CONTROLS AND FEATURES

This section describes the controls and features of the camera.

FRONT



Figure: Camera Body Front Controls and Features

#	ITEM	DESCRIPTION
1	Lens mount	Lens mount for RF type lenses and adaptors (refer to Lenses and Adapters)
2	Mic 1	Left Internal Microphone channel
3	Mic 2	Right Internal Microphone channel
4	Tally Light	Tally light (refer to Camera Body LEDs and Indicators)

TOP



Figure: Camera Body Top Controls and Features

#	ITEM	DESCRIPTION
1	LCD Touchscreen	Camera LCD Touchscreen
2	MENU (BACK) Button	Menu button, Back button
3	Up Arrow (LOCK) Button	Navigates up in the menu and locks/unlocks the UI when pressed along with the other Lock button
4	Down Arrow (LOCK) Button	Navigates down in the menu and locks/unlocks the UI when pressed along with the other Lock button
5	Select Button	Selects the highlighted menu item
6	Playback Button	Opens the Playback screen
7	1/4-20 Mounting Holes	1/4-20 mounting holes for optional accessories (refer to Outrigger Handle and KOMODO Link Adaptor)
8	Accessory Port	Connection port for accessories (refer to Outrigger Handle and KOMODO Link Adaptor)

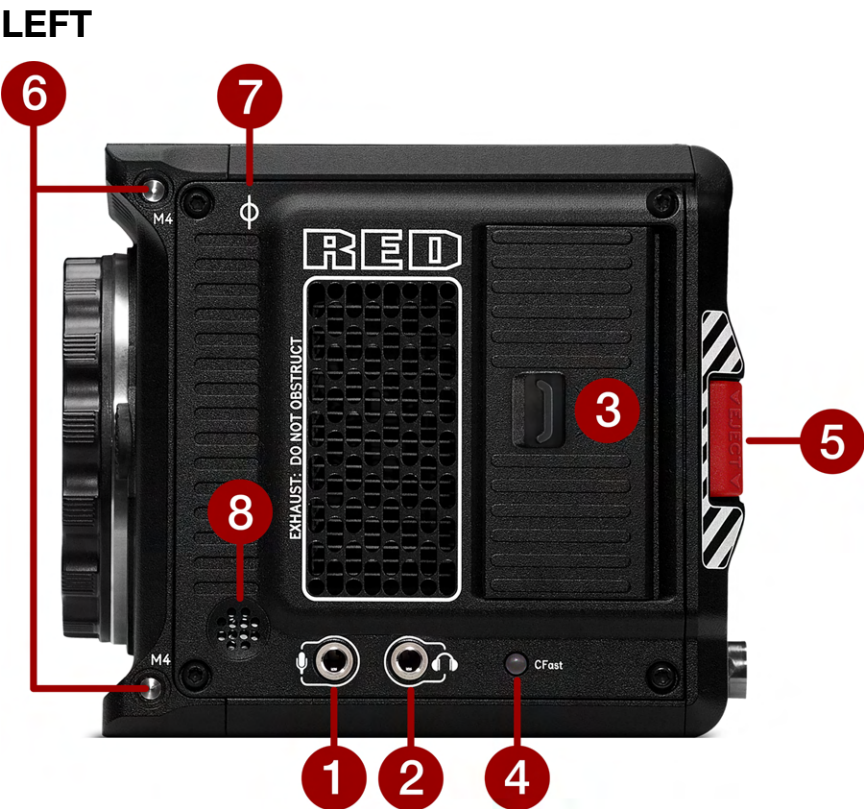


Figure: Camera Body Left Controls and Features

#	ITEM	DESCRIPTION
1	External Mic Jack	3.5 mm stereo microphone input
2	Headphone Jack	3.5 mm stereo headphone output
3	Media Bay	CFast 2.0 media bay
4	CFast LED	CFast status indicator (refer to Camera Body LEDs)
5	EJECT Button	Left battery release button
6	M4 Mounting Holes	Two (2) M4 mounting points for accessories
7	Focus Plane	Focus plane indicator symbol
8	Beep Speaker	Camera beep speaker

RIGHT

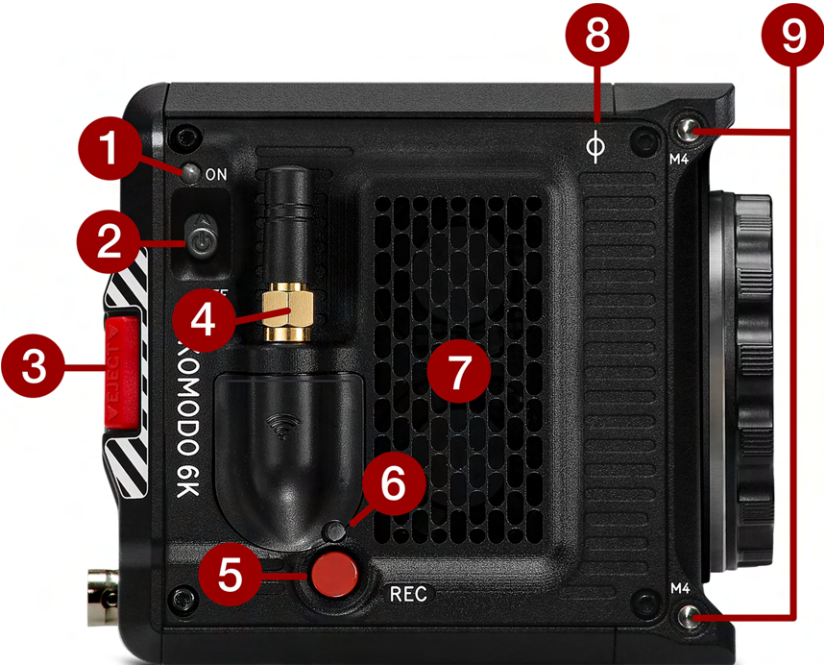


Figure: Camera Body Right Controls and Features

#	ITEM	DESCRIPTION
1	Power LED	Displays the camera ready status (refer to Camera Body LEDs)
2	ON/OFF Switch	Slide up to turn on the camera and slide down to turn off the camera
3	EJECT Button	Right battery release button
4	Wireless Antenna	Wi-Fi antenna mounted to a female RP-SMA connector. Supports dual band 2.4 GHz or 5 GHz
5	REC button	Press and release the REC button to toggle between record start and stop
6	Record LED	Displays the camera recording status (refer to Camera Body LEDs)
7	Air Intake	Air intake for thermal management
8	Focus Plane	Focus plane indicator symbol
9	M4 Mounting Holes	Two (2) M4 mounting points for accessories

BACK



Figure: Camera Body Rear Controls and Features

#	ITEM	DESCRIPTION
1	Battery mounts	Two mounts for the batteries (refer to Batteries)
2	Eject buttons	Right and left battery release buttons
3	9-pin Extension Port	9-pin 0B ODU port (refer to KOMODO Expander Module)
4	12G- SDI port	Full-size 12G-SDI BNC port for SDI monitor connection ^{1,2}
5	2-pin DC-Input port	2-pin 0B ODU for DC-IN with wide input voltage support (7-17 Volts)
6	DC-IN/Battery LED	Displays the camera power status (refer to DC/Battery LED)

1. Use certified 12G-SDI cables.

2. **WARNING:** Always connect the accessories' DC power cable (or batteries) before connecting the BNC SDI cable. Always remove the BNC SDI cable before removing the accessories' DC power cable (or batteries). For more information, refer to [Preventing Damage to SDI Outputs](#).

BOTTOM



Figure: Camera Body Bottom Controls and Features

#	ITEM	DESCRIPTION
1	Mounting Points	One (1) 1/4"-20 mounting hole and one (1) 3/8"-16 mounting hole (refer to KOMODO Expander Module)
2	Registration Points	Indented alignment points for the KOMODO Expander Module
3	Service Port	For RED service only - DO NOT REMOVE

CAMERA BODY LEDS

FRONT LED



Figure: KOMODO 6K LED, Front

#	ITEM	COLOR	DESCRIPTION
1	Tally Indicator LED	Red	When enabled, this LED is ON when the camera is recording. For information about enabling this LED, refer to Indicators .

LEFT SIDE LED



Figure: KOMODO 6K LED, Left Side


#	ITEM	COLOR/FLASHING	DESCRIPTION
1	CFast Media LED	Off	No media mounted
		Green	Preview; media mounted with > 10% of media space available
		Amber	Recording finalizing or playback mode
		Amber flashing slow	Formatting media
		Red flashing slow	Media mounted with >5% and <= 10% of media space available
		Red flashing fast	Media mounted with <= 5% of media space available
		Red	Recording

RIGHT SIDE LEDS



Figure: KOMODO 6K LED, Right Side

#	ITEM	COLOR/FLASHING	DESCRIPTION
1	Power Status (ON)	Off	Camera OFF
		Amber	Camera booting
		Green	Camera ON
		Amber flashing	Camera on; 5 to 10 min of battery time available
		Red flashing	Camera on; < 5 min of battery time available
		Red	Camera shutting down
2	Record Status (REC)	Off	No media present
		Green	Ready to record
		Red	Recording
		Amber	Finalizing
		Red flashing slow	Media mounted with >5% and <= 10% of media space available
		Red flashing fast	Media mounted with <= 5% of media space available
	Power and Record	Both flashing green	Firmware update in progress
		Both flashing red	Firmware update error (refer to Upgrading the Firmware)

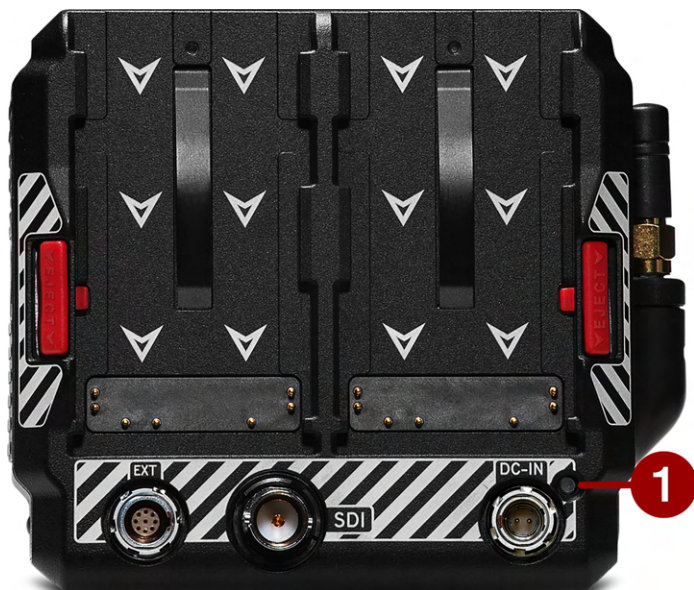DC/BATTERY LED*Figure: KOMODO 6K, DC/Battery LED*

#	ITEM	COLOR	DESCRIPTION
1	DC-IN	Green	DC-IN is present and / or the battery is fully charged
		Flashing Amber	Communicating with, and evaluating the battery
		Amber	Charging connected batteries
		Red	Error charging the batteries

LENSES AND ADAPTERS

This section lists the compatible lenses and adapters for the camera. It also provides the steps for **Attaching Lenses** and **Removing Lenses**.

For more information on a specific lens or adapter, refer to the original manufacturer's instructions.

WARNING: When the camera is not in use, protect lenses and the camera sensor by attaching the lens caps and camera mount cap.



Figure: Camera with mount cap installed.

Incompatible lenses may not register on the camera UI, display any UI lens information, or enable menu controls. The camera can control compatible lenses electronically, including the following features:

- Iris - The UI menu is enabled and the camera can control the lens Iris
- Autofocus - The UI menu is enabled for lenses that support autofocus
- Image Stabilization - The UI indicates that image stabilization is present
- Control Ring - The UI menu is enabled and the camera can use the control ring

For more information, refer to the **Lens** menu.

COMPATIBLE LENSES

The latest RED-tested and approved lenses are listed on the KOMODO section of [RED Support](#).

LENS WEIGHT AND LENS SUPPORT

Use a lens support system when mounting heavy or long lenses to your camera.

When mounting a heavy or long lens, ensure that the full weight of the lens is never directly on the camera or lens mount. Mount the lens to the support system first, and then carefully mount the lens to the camera.

COMPATIBLE MOUNT ADAPTERS

RED tested the following adapters and determined that they are compatible with the camera:

- KOMODO RF to PL and RF to PL with ND Adapters
- Canon Mount Adapter EF-EOS R
- Canon Drop-In Filter Mount Adapter EF-EOS R with Variable ND Filter / Clear Filter / Circular Polarizer

ATTACHING LENSES

1. Remove the mount cap from the camera.
2. Remove the mount cap from the mount end of the lens.
3. Align the red dots and insert the lens in the camera.
4. Turn the lens clockwise until it clicks in place.
5. Store the mount caps.

REMOVING LENSES

1. Press and hold the lens release button on the camera. While holding the lens release button, turn the lens counter-clockwise until it stops and remove it from the camera.
2. Align the red dot on the camera mount cap with the red dot on the camera and attach the mount cap to the camera.
3. Turn the camera mount cap clockwise until it clicks in place.
4. Align the red dot on the lens mount cap with the red dot on the lens and attach the mount cap to the lens.
5. Turn the lens mount cap clockwise until it clicks in place.
6. Store the lens with the caps attached to both ends.

LCD TOUCHSCREEN

 


This section describes the structure and layout of the graphical user interface (GUI) for the LCD touchscreen. Advanced GUI menu controls enable convenient access to menus, camera features, and critical camera information.

NOTE: After 1 hour of inactivity, the touchscreen will go to sleep. Tap the touchscreen or touch any button to wake the touchscreen. The touchscreen will not sleep while the camera is recording.


The LCD Touchscreen home page contains the following features:

STATUS BAR




The **Status Bar** contains the button for displaying the Home screen and Menu screen. It also contains status icons for various camera settings and inputs.

When you tap the Home/Menu toggle button (RED logo), the camera toggles the display between the menu page and the home page:

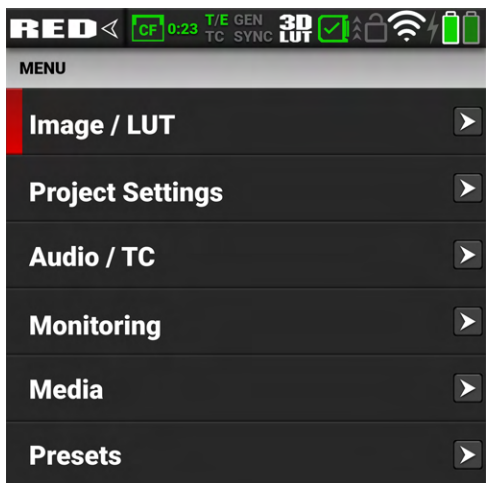


When you tap the Status bar icons the **Status Page** displays:

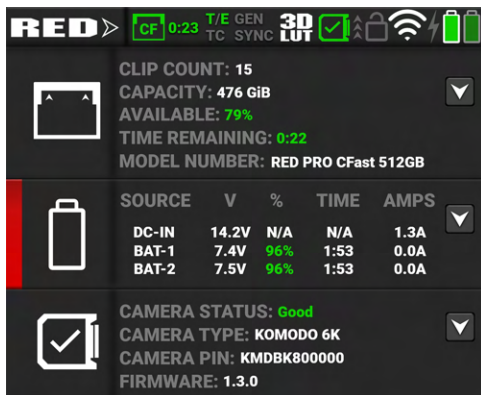


EXPOSURE

The Exposure section of the LCD home page displays the RGB exposure levels for the camera.

Exposure Meter

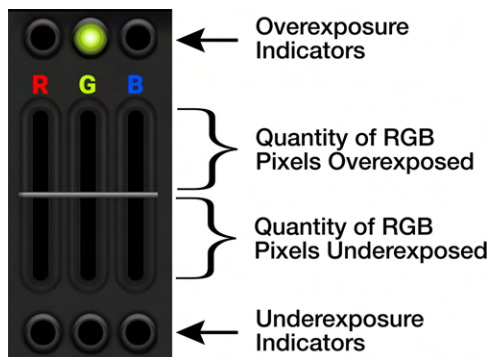

Overexposed Example

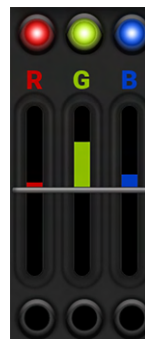

Underexposed Example



Balanced Example



RGB Exposure displays the pixel exposure quantity of the separate RGB channels and indicates when a channel is underexposed or overexposed. This meter measures the raw image data regardless of the ISO and LUT settings.

The top and bottom RGB lights illuminate when a small number of pixels on the sensor are overexposed or underexposed. This indicates that a small bright or dark area is in the image.


The level bars show the levels of overexposed and underexposed RGB pixels on the sensor. Adjust the settings on the camera to compensate.

Tap the Exposure section to toggle between this display and the **Monitoring Tools** page display.

MEDIA / HISTOGRAM



The Media section of the LCD home page displays the Timecode or Edgecode, clip ID, clip duration, resolution/format, and frame rate for the camera. Tap the Media section to toggle between this display and the Histogram display.

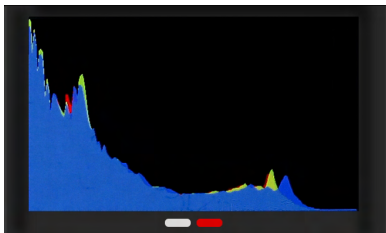

The Histogram section of the LCD home page displays the image color histogram. Tap this area to toggle between this display and the Media display. For more information, refer to [Histogram](#).

AUDIO



The Audio section of the LCD home page displays the audio levels for the camera. Tap the Audio section to toggle between this display and the [Audio Tools](#) display.

The Audio VU meters display the audio levels in decibel (dB) for the selected channels. Refer to the Audio / TC Menu section for more information about the audio channels.

In this example, channel 2 displays the VU meter clipping at maximum dB.

CAMERA DESIGNATION AND REC BUTTON



The Camera Designation and Record button on the LCD touchscreen home page displays the camera letter assigned to the camera (refer to [Slate](#) and [Camera ID](#)). You can tap this area to start pre-recording, and to start and stop recording.

 
Pre-recording:



Recording:



QUICK SETTINGS



The Quick Settings section of the LCD home page displays the Quick Settings buttons for changing the most often used camera settings. These settings include **Recording Frame Rate**, **ISO**, **IRIS** (refer to **Lens**), **Shutter**, and **White Balance**.



Tap on a Quick Setting button to change the settings.

Swipe the setting left or right to make a selection.

Tap Edit to manually enter a value.

Tap List to manage which values display in this tool.

Tap on the Quick Setting button to close the selection screen.

Tap and hold the Shutter button to quickly toggle between Time and Angle settings.

Tap and hold the White Balance (WB) button to quickly switch between Kelvin and Presets.

BUTTON NAVIGATION

Pressing the Menu button next to the LCD touchscreen opens the main menu page. You can select the desired menu items by using the Up, Down, and Select (SEL) buttons. Pressing the Menu button also navigates backwards (BACK) from submenus in the menu tree.

Pressing the Up arrow and the Down arrow simultaneously locks/unlocks the touchscreen and the menu buttons. The Lock icon in the Status bar displays the lock status. The REC button is not locked and it functions normally.

Pressing the Playback button starts and stops playback (refer to **Playback** for more information).

Home Screen



Menu Screen



STATUS BAR

The top of the LCD screen displays the camera status bar.



The Status Bar contains the following button and icons:

- **RED >** Home / Menu Button
- **CF 0:14** Media Status Icon
- **T/E** Temperature / Exposure Icon
- **TC** Timecode Icon
- **GEN** Genlock Icon
- **SYNC** SYNC Icon
- **3D LUT** 3D LUT Icon
- **✓** Camera Status Icon
- **↑↑** FTPS Activity Icon
- **🔒** LCD Lock Icon
- **📶** Wi-Fi Icon
- **⚡** DC-In Icon
- **🔋** Battery Icon

HOME / MENU BUTTON




This button toggles the LCD display between the Home screen and the Menu screen. The arrow on the button changes direction when toggled.

Home Screen:



Menu Screen:

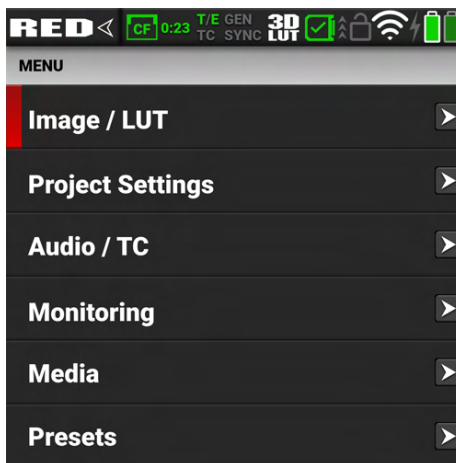

MEDIA STATUS ICON



This icon displays the status of the CFast 2.0 media card, and it displays the recording time remaining for the current camera settings.

The status displayed includes:



Good



Missing



Incompatible

CAMERA STATUS ICON



This icon indicates the state of the camera hardware. The different icons and their corresponding status include:



Good



Overheating Warning



Overheating



Shutting Down

FTPS ACTIVITY ICON



This icon indicates the state of FTPS data transfer.



Gray indicates that the FTPS is not transferring data.



Green indicates that the camera is transferring FTPS data.

TEMPERATURE / EXPOSURE ICON



This icon displays the temperature (T) and exposure (E) calibration indicators.

- When T is yellow or red, it indicates that the camera requires sensor re-calibration.
- When E is yellow or red, it indicates that the camera requires sensor re-calibration.

Refer to [Calibrating the Sensor](#).

LCD LOCK ICON



This icon indicates the state of the LCD Lock. The states include:



Gray and open indicates that the camera LCD is unlocked.



White and closed indicates that the camera LCD is locked.

TIMECODE ICON



This icon indicates the state of the Timecode generator connection.



Gray indicates that no Timecode generator signal is detected.



Green indicates that the Timecode source is connected and jammed.



Red indicates that the Timecode source is connected and not jammed.



White indicates that the Timecode source is jammed and not connected.



Yellow indicates that the Timecode source is cross-jammed (at a different [Project Time Base](#)).

WI-FI ICON



This icon indicates the state of Wi-Fi connection.



Gray and empty indicates that no Wi-Fi signal is detected.



White bars indicate that Wi-Fi signal is detected (Infrastructure).



White antenna indicates that Wi-Fi signal is broadcasting (Ad-hoc).

GENLOCK ICON



This icon indicates the state of the Genlock connection.



Gray indicates that no Genlock signal is detected.



Green indicates that the camera is receiving and is locked to a Genlock signal.



Red indicates that the camera is receiving and is not locked to a Genlock signal.

SYNC ICON



This icon indicates that the Timecode and Genlock signals are synchronized to the camera's frames per second (FPS) settings.



Gray indicates that no synchronization is detected.



Green indicates that the camera's sensor is synchronized with Timecode and that the camera's output is synchronized with Genlock.



Yellow indicates that the camera's sensor is **NOT** synchronized with Timecode and that the camera's output is synchronized with a single camera or a Genlock signal.

DC-IN ICON



This icon indicates the state of DC power connection.



Gray indicates that no DC power is connected.



Green indicates that the camera is receiving DC power.

3D LUT ICON



This icon indicates the activation status of 3D LUTs.



Gray indicates that no 3D LUTs are in use.



White indicates that the camera is using a 3D LUT.

BATTERY ICON



This icon indicates the state of the battery connection and charge level.



Gray indicates that no battery is connected.



White indicates that the battery is connected and green shows the relative level of charge remaining.



Yellow indicates 10 minutes of power remaining.



Red indicates less than 5 minutes of power remaining.



Gray question mark indicates no communication with the battery and no power.




White question mark indicates no communication with the battery and power.



Gray exclamation point indicates error communicating with the battery and no power.

STATUS PAGE


The Status page contains camera status information and shortcuts to the associated camera menus:

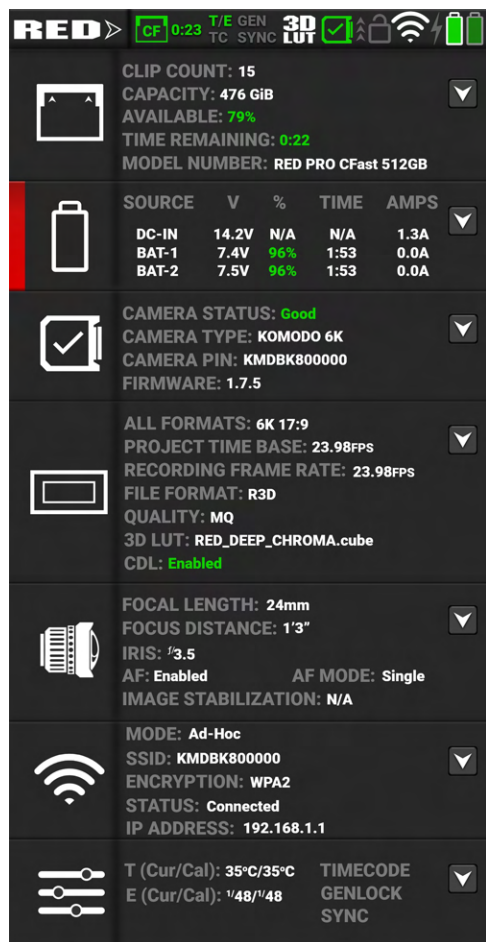


The camera status and menu shortcuts include:

ITEM	DETAILS
Media	Displays the media status and a link to the Media Menu
Power	Displays the power status and a link to the Power settings menu
System Status	Displays the camera temperature status and a link to the System Status menu
Project Settings	Displays the project status and a link to the Project Settings Menu
Lens	Displays the lens status and a link to the Lens settings menu
Wi-Fi	Displays the communication status and a link to the Wi-Fi settings menu
Maintenance	Displays the Temperature and Exposure calibration, the external connection status, and a link to the Maintenance Menu

MONITORING TOOLS

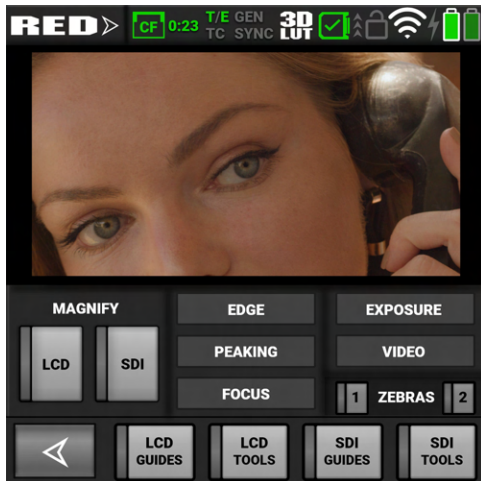

Open the Monitoring tools by tapping on the Exposure section of the LCD home page.

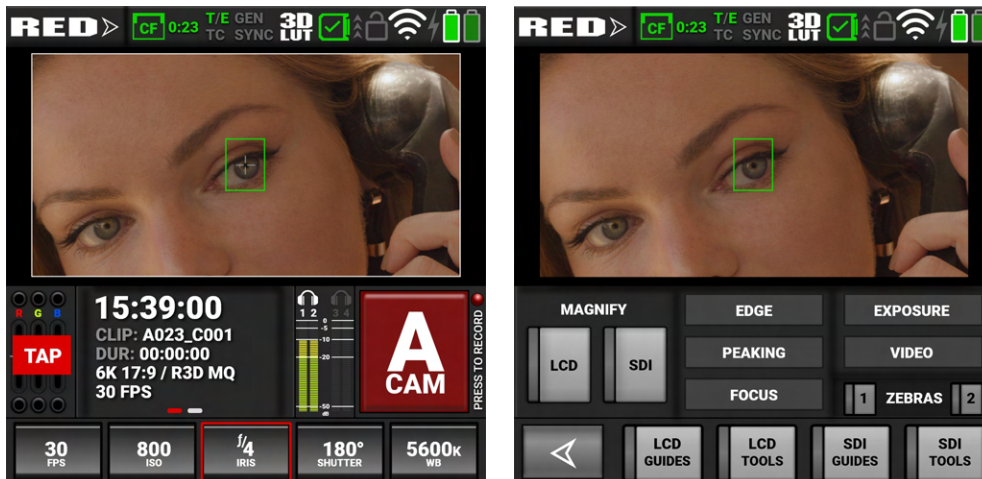


Return to the LCD home page by tapping the arrow button .

The Monitoring tools provide an easy way to toggle many of the monitoring features on and off.

When the features are selected, the buttons indicate the selection.

ONBOARD LCD SWITCHES

The LCD switches allow you to view or hide the enabled LCD monitor Guides and Tools on the LCD screen.

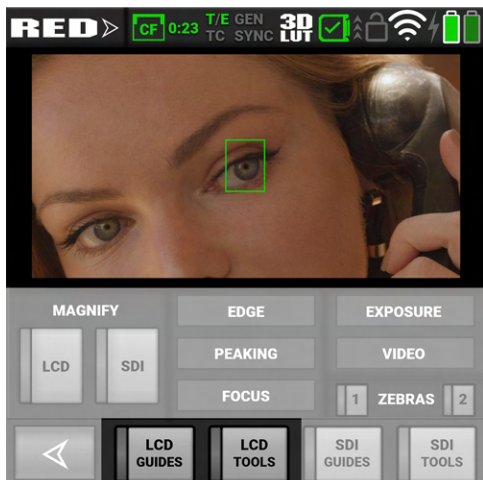


When the switches are selected, the gray bar turns green on the left side of the switch.

The LCD Guides switch displays the Monitoring **Guides** (frame guides and center guide) on the LCD.

The LCD Tools switch displays the Monitoring **Tools** (false color, peaking, zebra) on the LCD and on Live Stream.

SDI SWITCHES

The SDI switches allow you to view or hide the enabled SDI monitor Guides and Tools on the LCD screen.

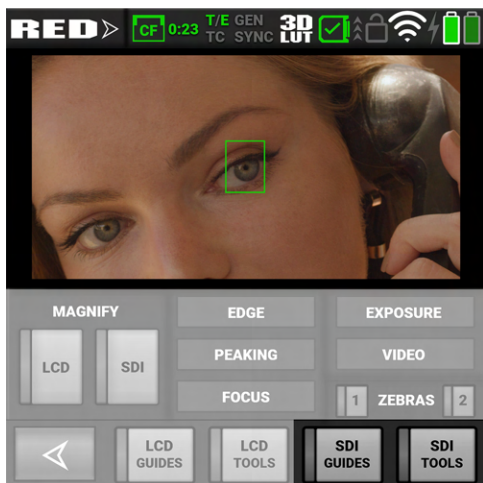


When the switches are selected, the gray bar turns green on the left side of the switch.

The SDI Guides switch displays the Monitoring **Guides** (frame guides and center guide) on the SDI output.

The SDI Tools switch displays the Monitoring **Tools** (false color, peaking, zebra) on the SDI output.


MAGNIFY

The Magnify section allows you to enable or disable magnification on the camera's LCD and the SDI monitor output. When the switches are selected, the gray bar turns green on the left side of the switch.

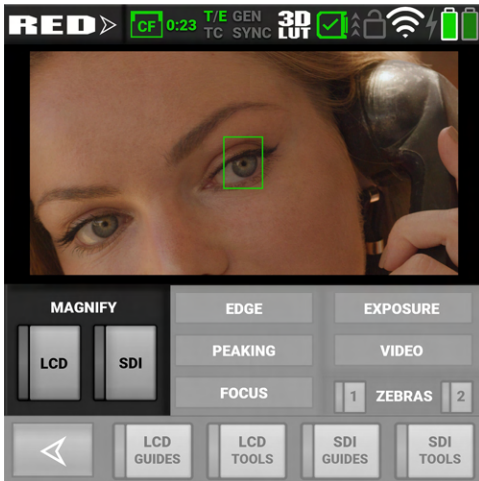

FOCUS


The Focus section allows you to enable or disable one of the focus tools. The focus tool button you select will turn red.

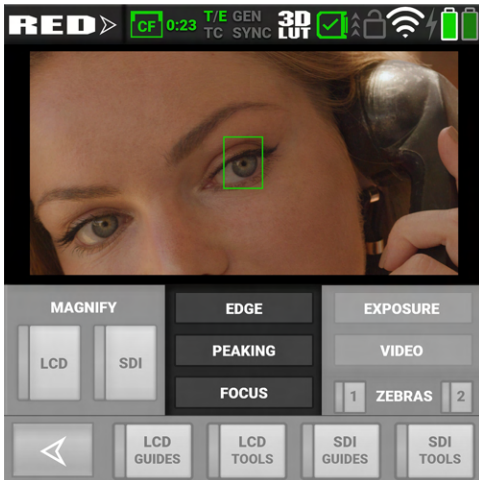

For information about using the Focus tools, refer to [Tools](#).

EXPOSURE


The Exposure section allows you to enable or disable one of the exposure tools. The Exposure tool button you select will turn red.

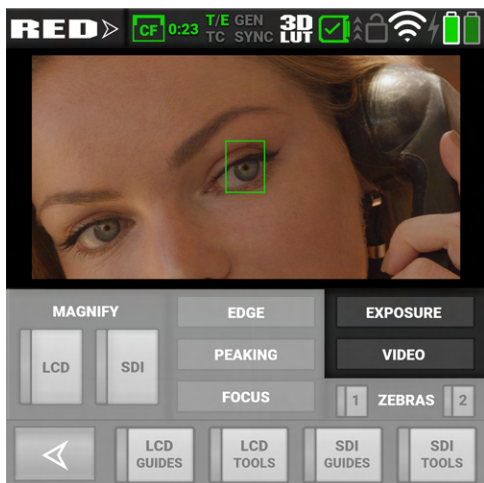

For information about using the Exposure tools, refer to [Tools](#).

ZEBRA


The Zebra section allows you to enable or disable the Zebra 1 and Zebra 2 modes. When the modes are selected, the gray bar turns green on the left side of the switch.

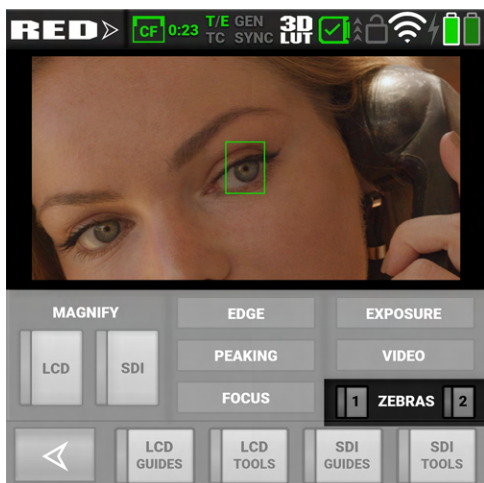

For information about using the two Zebra modes, refer to [Zebra 1](#) and [Zebra 2](#).

HISTOGRAM

NOTE: The Histogram feature is disabled on Monochrome cameras.

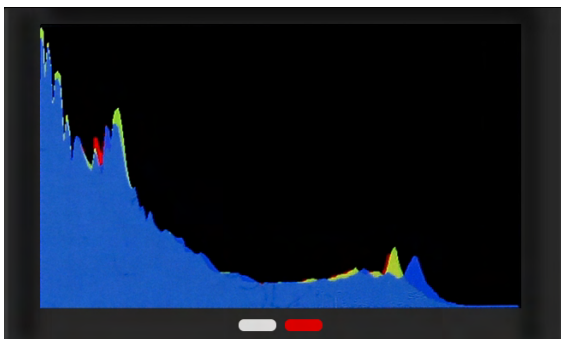


Tap the histogram area to toggle between the Histogram display and the Media display.




The Histogram area of the LCD home page displays an RGB exposure distribution histogram of the final image as it appears on screen. The histogram takes into account exposure elements such as ISO, LUTs, and white balance.

The histogram displays the darkest image elements at the far left, the midtones in the middle, and the lightest image elements at the far right. This provides a quick visual tool you can use to determine your overall image exposure levels.

Overexposed Example

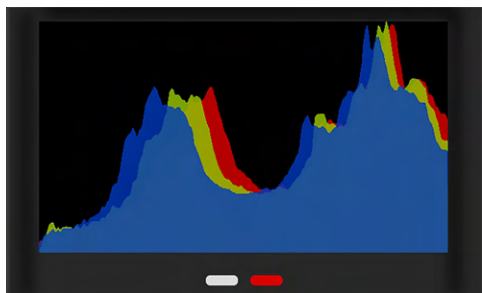


Underexposed Example

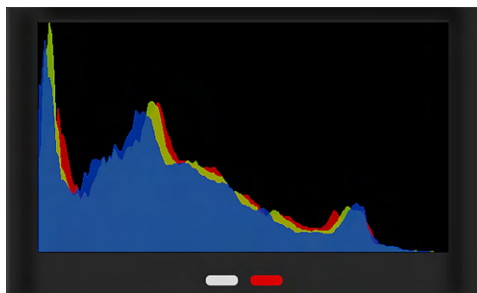

AUDIO TOOLS



Open the Audio tools by tapping on the Audio section of the LCD home page.

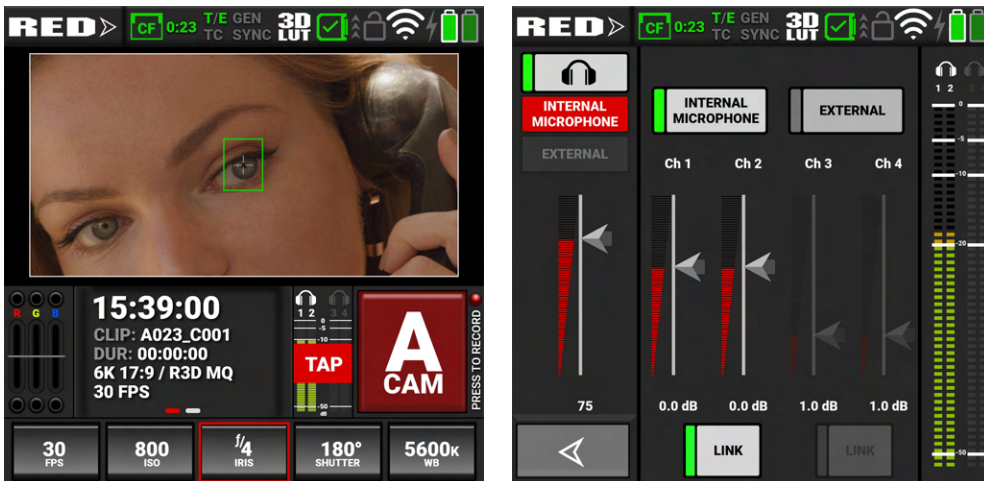

Return to the LCD home page by tapping the arrow .

The Audio tools provide an easy way to control many of the audio features.

When the features are selected, the buttons indicate the selection.

HEADPHONE

The headphone section allows you to enable/disable the headphone output, to select input from Internal Microphone, or External, and to adjust the headphone volume with a slider.




AUDIO SOURCE

The Audio Source section allows you to select the audio source the camera will record to the clip. You can select Internal Microphone, External, both, or none. Use the sliders to adjust the gain for each channel. You can use the Link button to link channels 1 and 2, or to link channels 3 and 4. This allows you to adjust both of the internal or external channels together.




AUDIO VU METER

The Audio VU Meter section displays the audio input received by the camera from the four channels.

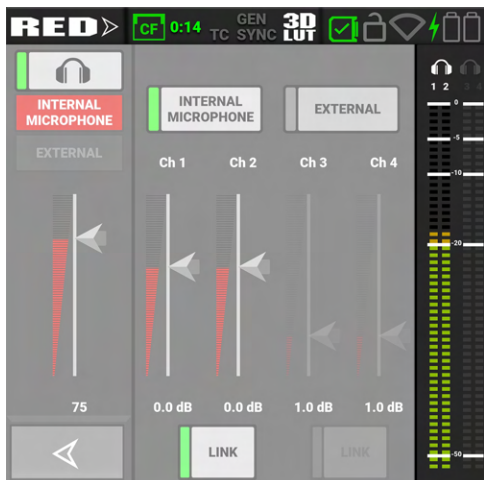


As the input increases, the level indicator changes from green to yellow to orange to red. When the audio input clips, the channel number at the top of the VU meter turns red:

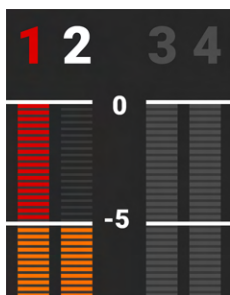

PLAYBACK

When you press on the Playback button, the LCD Touchscreen displays the Playback screen.

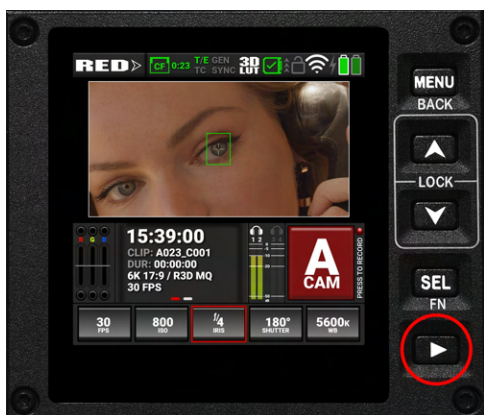

To close the Playback screen, press the Playback button.

NOTE: When you open playback, it disables many of the menu settings.


PLAYBACK SCREEN



The Playback screen displays the clip image along with the following:


- Clip Slider
- RGB Exposure
- Histogram
- Audio VU Meters
- Clip Information
- Playback Screen Buttons

CLIP SLIDER

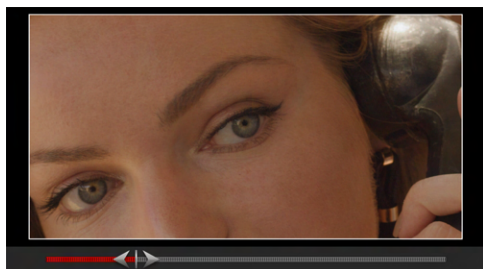


Use your finger to move forward and backward through the frames by swiping the image to the left and the right. The Clip Slider shows where in the timeline the displayed frame is located in the clip.

RGB EXPOSURE

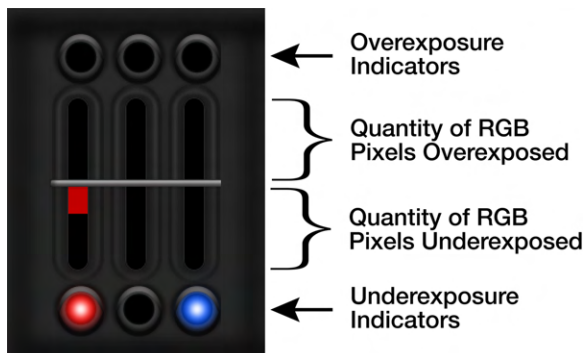


RGB Exposure displays the exposure levels of the separate RGB channels and indicates when a channel is underexposed or overexposed. This meter measures the raw image data regardless of the ISO and LUT settings.

HISTOGRAM

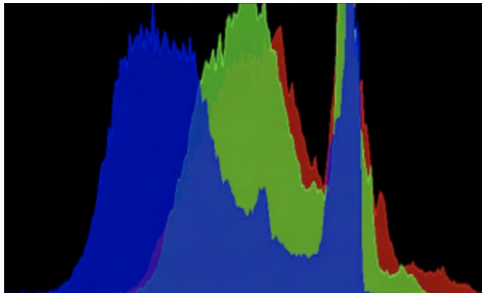


The histogram displays the darkest image elements at the far left, the midtones in the middle, and the lightest image elements at the far right. This gives you a quick way to view your overall image exposure levels.

AUDIO VU METERS

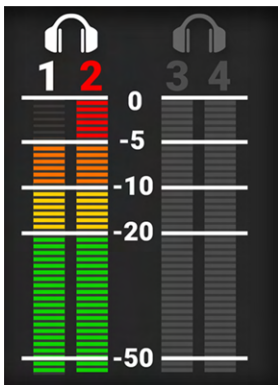


The Audio VU meters display the audio levels in the played clip.

CLIP INFORMATION

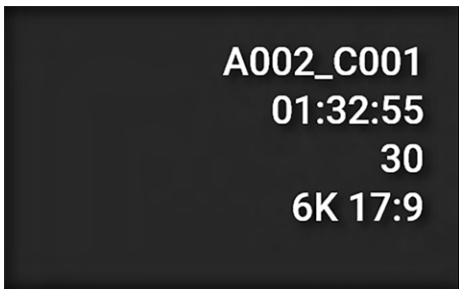

The Clip Information displays the name, duration, time base, and format of the clip.

 PLAYBACK SCREEN BUTTONS




With the Playback screen buttons you can view the Clip list, move one clip back, move one frame back, play/pause, move one frame forward, and move one clip forward.



CLIP LIST

The Clip List button displays the list of clips recorded on the media card.

Each clip displays the first frame of the clip, the clip information, and the clip file format.

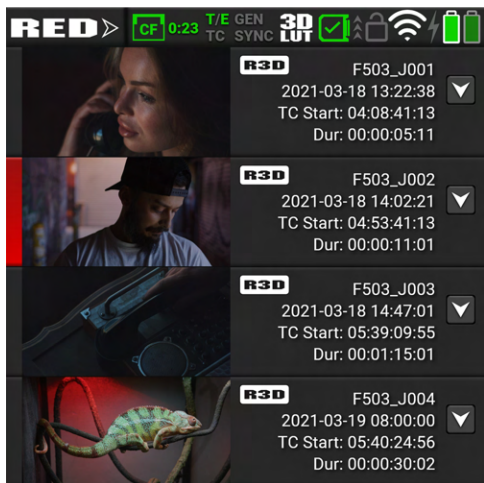

Swipe up and down to scroll through the list of clips. Tap the down arrow to open the clip information screen.

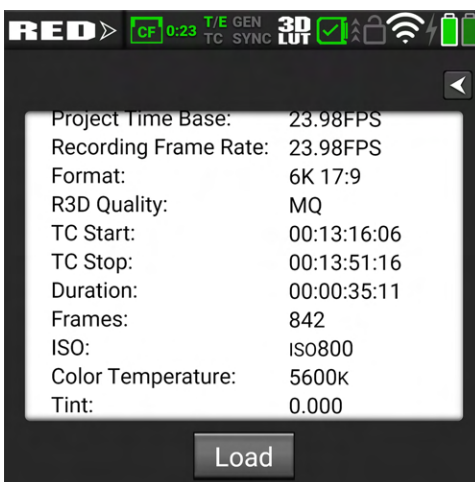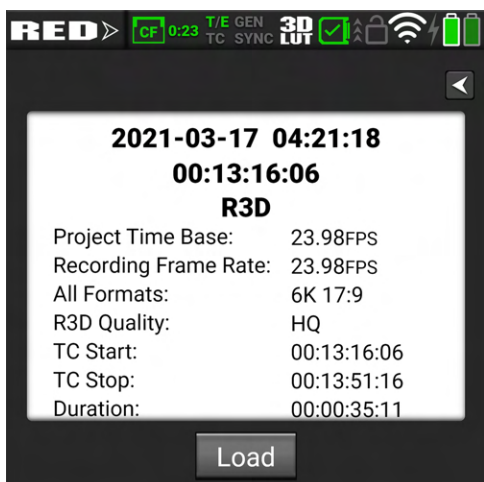

When you tap the Load button, the camera loads the clip to the Playback screen.

4. MENUS


This section describes the menus and sub-menus for the camera. To access the menus, navigate to a menu item from the **LCD Touchscreen**.

MENUS	DETAILS
Image / LUT Menu	ISO, Shutter, White Balance, Output Color Space, Output Tone Map, Highlight Roll-Off, Display Preset, 3D LUT, CDL, Exposure Adjust
Project Settings Menu	Format, Recording Frame Rate, Project Time Base, File Format, R3D Quality, ProRes Resolution, ProRes Codec, ProRes Color Profile, Pre-Record, Recording Mode, Timelapse, Frame Limit, Slate
Audio / TC Menu	Audio Source, Internal Mic, External Audio, Headphone, Timecode Source, Auto-Jam Toggle, Jam Timecode to TOD, Manual Timecode, Timecode Display Mode
Monitoring Menu	LCD, SDI, Live Stream, Tools, Guides
Media Menu	Eject, Media Info, Secure Format
Presets Menu	Create Preset, On Media, In Camera
Autofocus Menu	Enable AF, Mode, Size, Position, Start AF
Communication Menu	Camera Name, Connections (Wi-Fi, Serial, KOMODO Link), Clients & Services (FTPS, PTP), Cloud Upload (Frame.io, AWS S3)
System Settings Menu	Date / Time, Licenses, Lens, Power, Sensor, Indicators, GPO, Status Settings, System Status
Language Menu	English, Chinese, French, German, Japanese, Spanish
Maintenance Menu	Calibrate, Calibration, Save Log, Reset Defaults, Factory Reset, Upgrade FW

IMAGE / LUT MENU

The Image / LUT menu contains the settings you use to configure your image.

From the Onboard LCD touchscreen menu, tap Image / LUT:

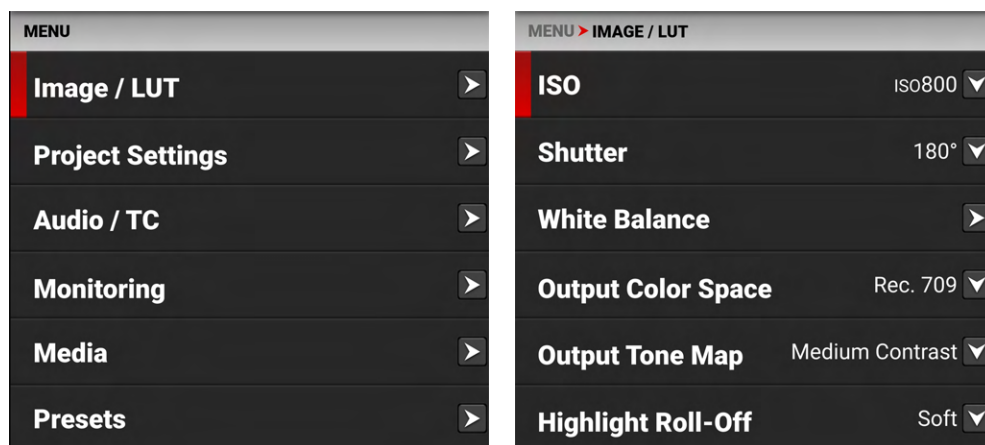


Use the Image / LUT menu to configure the camera's image and lookup table (LUT) settings:

ITEM	DETAILS
ISO	Adjusts the image's brightness in the monitoring path
Shutter	Adjusts the amount of time the sensor is exposed to light
White Balance	Adjusts the colors to compensate for the light source temperature
ND	When attached, you can adjust the ND value for the RF to PL Adapter w/ Electronic ND
Filter Name	When attached, this displays the name of the PL filter.
Output Color Space	Adjusts on-set working color space
Output Tone Map	Adjusts the image contrast
Highlight Roll-Off	Adjusts image highlight compression
Display Preset	Select the displayed preview image gamma for the SDI port
3D LUT	Manage the camera's look up tables (LUTs).
CDL	Opens the Color Decision List (CDL) menu
Exposure Adjust	Manually fine-tunes the midtone exposure level

ISO

Use the ISO setting to adjust the image's exposure in the monitoring path.

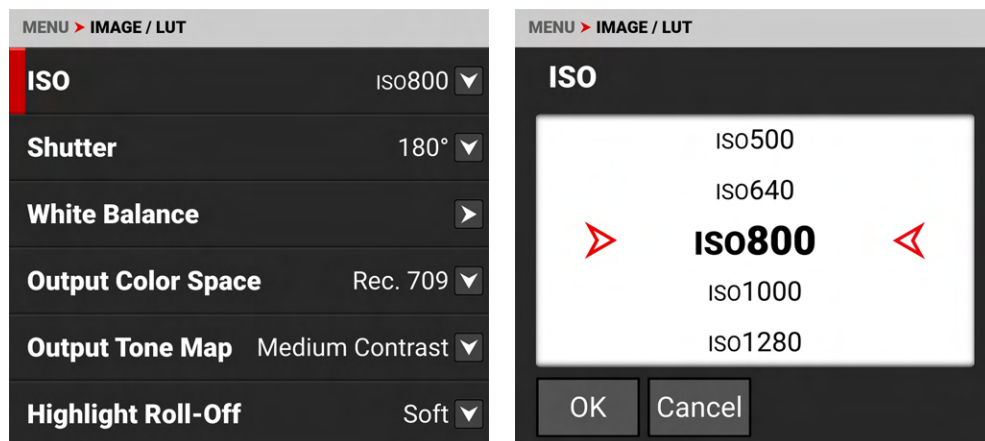

The ISO range is ISO 250 to ISO 12,800. The default ISO is ISO 800 for color and ISO 2000 for Monochrome.

Higher ISO values create brighter images in the monitor path, and lower ISO values create darker images in the monitor path.


When you record, the ISO settings are stored as metadata and you can adjust them non-destructively in post-processing with REDCINE-X PRO or other editing tools that support R3D files.

RED recommends setting the ISO to the default of 800, then adjusting the aperture and lighting to match. You can adjust the ISO later for fine-tuning.


NOTE: When you set the File Format to ProRes, the ISO is baked-in the image.

SHUTTER

Use Shutter to select the exposure time (shutter speed / shutter angle). The camera allows you to change the shutter settings while recording.

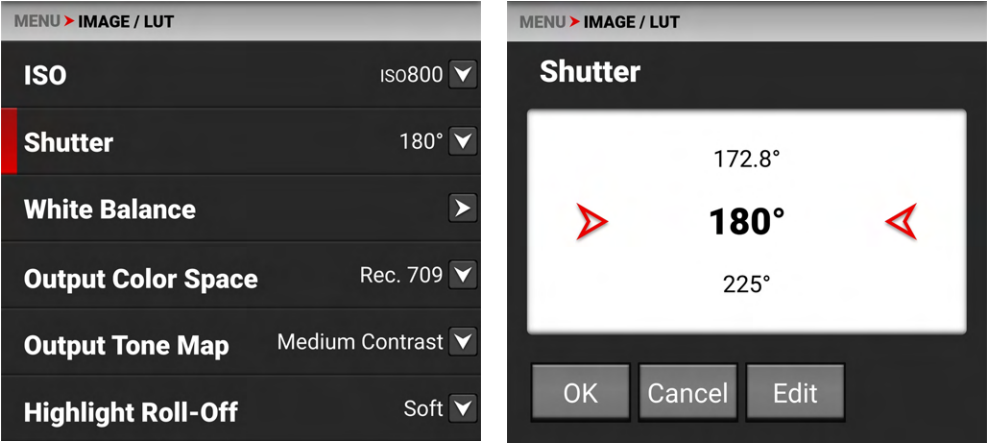

You can switch between Angle and Time settings by holding down the Onboard LCD Shutter quick setting button on the main menu, or by changing the Shutter Display mode in the [Status Settings](#) menu. You can tap Edit to change the Shutter menu values manually.

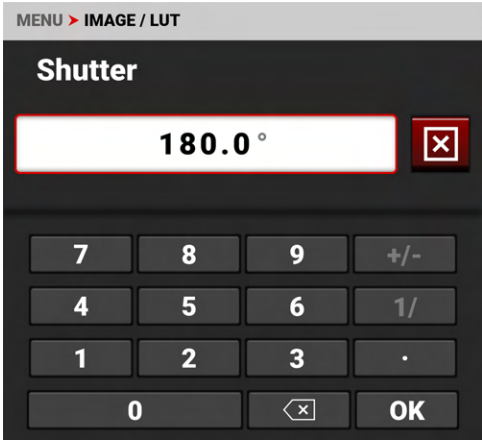

SHUTTER ANGLE

Enter the exposure value as a shutter angle (xx°). The shutter angle range is 1° to 360°. The default shutter angle is 180°. Click Edit to enter an exact shutter angle or shutter speed.

EXPOSURE CONVERSIONS

The table below lists common shutter angle and shutter speed equivalents. The calculations in the table use a recording frame rate of 23.98 fps.

SHUTTER ANGLE (°)	SHUTTER SPEED (1/XX SEC)	SHUTTER ANGLE (°)	SHUTTER SPEED (1/XX SEC)
360°	1/23.98	105°	1/82.20
288°	1/29.97	90°	1/95.90
270°	1/31.97	72°	1/119.88
240°	1/35.96	45°	1/191.81
225°	1/38.36	22.5°	1/383.62
180°	1/47.95	11.2°	1/770.66
172.8°	1/49.95	8.6°	1/1003.65
144°	1/59.94	4°	1/2157.84
135°	1/63.95	1°	1/8000 (max)
120°	1/71.93		

SHUTTER SPEED

Enter the exposure value as a shutter speed (1/xx sec).

The slowest shutter speed is 1/(recording frame rate). For example, if the recording frame rate is 23.98 fps, the slowest available shutter speed is 1/23.98 sec. The fastest shutter speed is 1/8000 sec. The default shutter speed is 1/47.95 sec.

CONVERT SHUTTER SPEED TO SHUTTER ANGLE

Shutter Angle = (Shutter Speed x Frame Rate x 360)

Example: $(1/47.95 \times 23.98 \times 360) = 180$

CONVERT SHUTTER ANGLE TO SHUTTER SPEED


Shutter Speed = $1/(\text{Frame Rate} \times 360/\text{Angle})$

Example: $1/(23.98 \times 360/180) = 1/47.95$

WHITE BALANCE

Use the White Balance menu to adjust the **Color Temperature**, **Color Temperature Presets**, **Tint** and execute the **Auto White Balance**.

NOTE: Color temperature is disabled on Monochrome cameras.

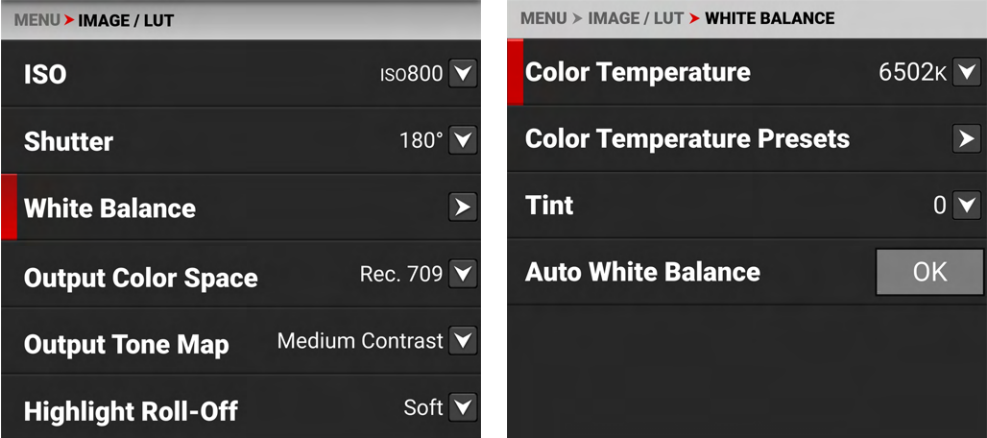

You can switch between Kelvin and Presets by holding down the Onboard LCD WB quick setting button on the main menu, or by changing the White Balance List mode in the **Status Settings** menu. When shooting in R3D format, the camera stores white balance as metadata, which you can adjust non-destructively in post-production after filming.

Use the White Balance menu to configure the color temperature and tint settings for your image:


ITEMS	DETAILS
Color Temperature	Image color temperature correction
Color Temperature Presets	Tap a button to select a preset color temperature
Tint	Adjust magenta-green color component
Auto White Balance	The camera automatically sets the color temperature and tint

NOTE: When you set the File Format to ProRes, White Balance is baked-in the image.

COLOR TEMPERATURE

Use Color Temperature to adjust the image's color temperature in Kelvin units (K) or by selecting presets.


NOTE: Color temperature is disabled on Monochrome cameras.

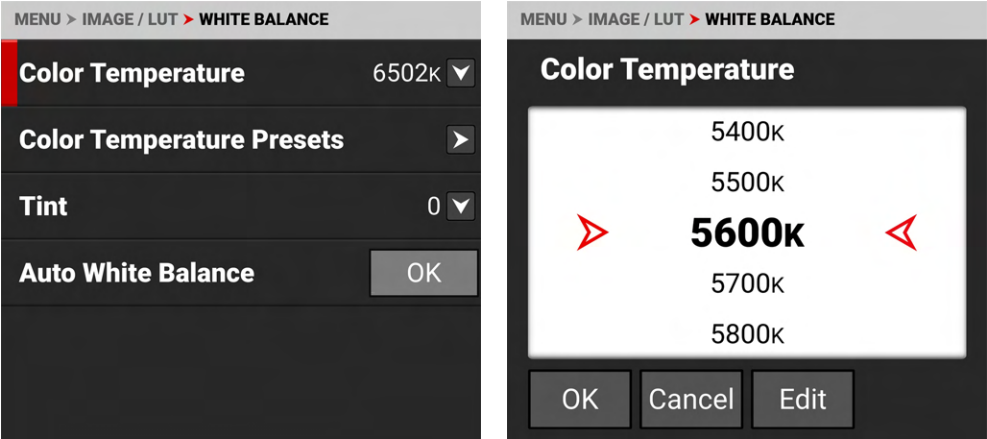

When the image's light source color temperature is warm, you can compensate by setting the camera to a warmer color temperature. When the image's light source color temperature is cool, you can compensate by setting the camera to a cooler temperature.

The color temperature range is 1,700 K to 10,000 K. The default color temperature is 5600 K.


When the White Balance List Mode (refer to **Status Settings**) is set to Presets, the Color Temperature menu list uses the preset temperatures instead of the Kelvin temperatures.

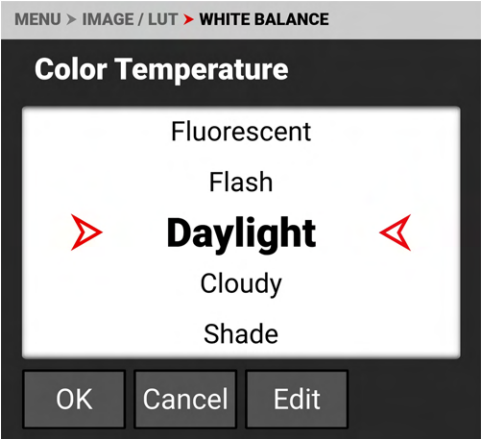

COLOR TEMPERATURE PRESETS

Use Color Temperature Presets to select a pre-configured color temperature.

NOTE: Color temperature is disabled on Monochrome cameras.

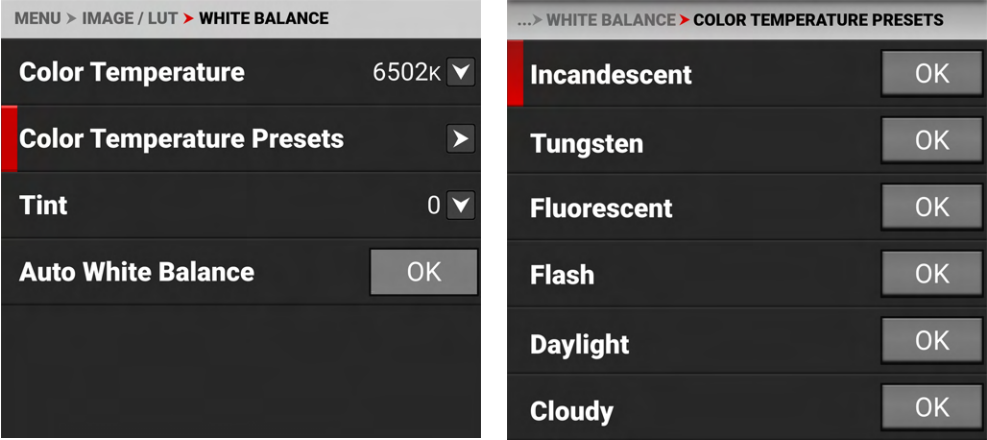

The color temperature presets you can select include:


ITEMS	DETAILS	ITEMS	DETAILS
Incandescent	2800 K	Daylight	5600 K
Tungsten	3200 K	Cloudy	7500 K
Fluorescent	4500 K	Shade	9000 K
Flash	5500 K		

TINT


Use Tint to adjust the image's color tint.

NOTE: Tint is disabled on Monochrome cameras.

Color temperature calculations assume a pure light source that may not be true in the specific scene the camera is imaging. To compensate for any residual colorcast, the Tint setting adjusts the RGB color balance with a compensating magenta-green color component.

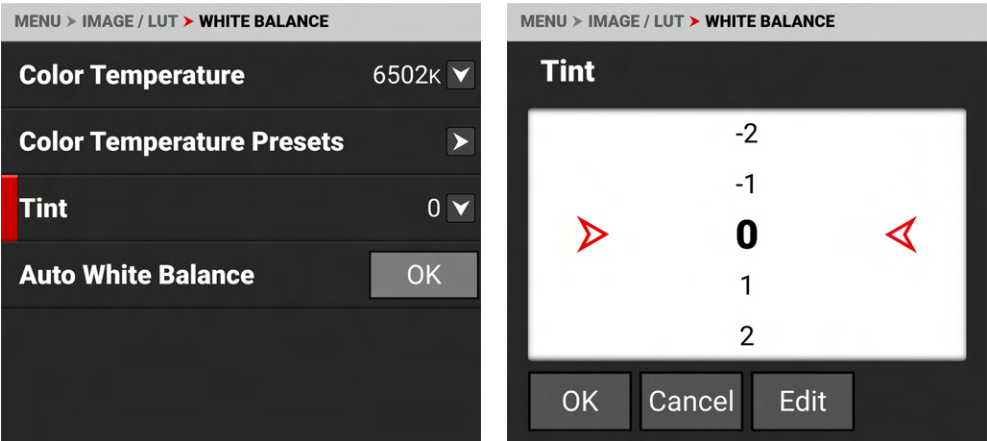


Tint range is -100 to 100. The default Tint setting is 0.
Use Edit to open the keypad screen where you can enter a specific Tint value.

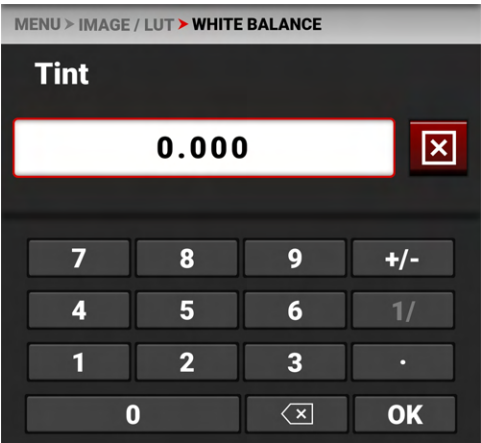

AUTO WHITE BALANCE

Use Auto White Balance to use the camera's automatic white balance adjustment.

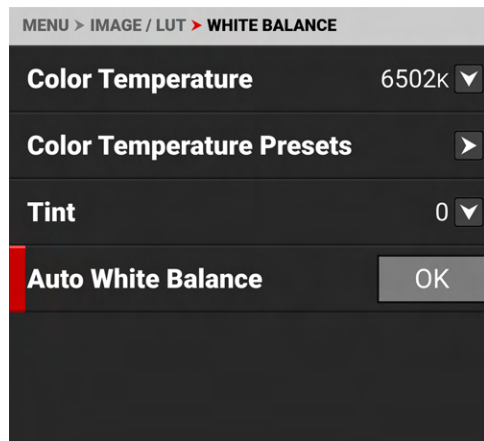

When shooting in R3D format, the camera stores white balance as metadata, which you can adjust non-destructively in post-production after filming.


To use Auto White Balance:

1. Place an 18% gray chart in the center of the image under the correct exposure.
2. From the **White Balance** menu tap OK next to **Auto White Balance**.
3. The camera automatically sets the color temperature and tint settings.

NOTE: Place the chart in the same location as your subject, and illuminate it with the same lighting. Make sure that you center the chart, and that it fills at least 25% of the sensor area.

ND


When the RF to PL Adapter w/ Electronic ND is attached, and the Electronic ND filter is inserted, you can use this menu to select the density of the ND filter.

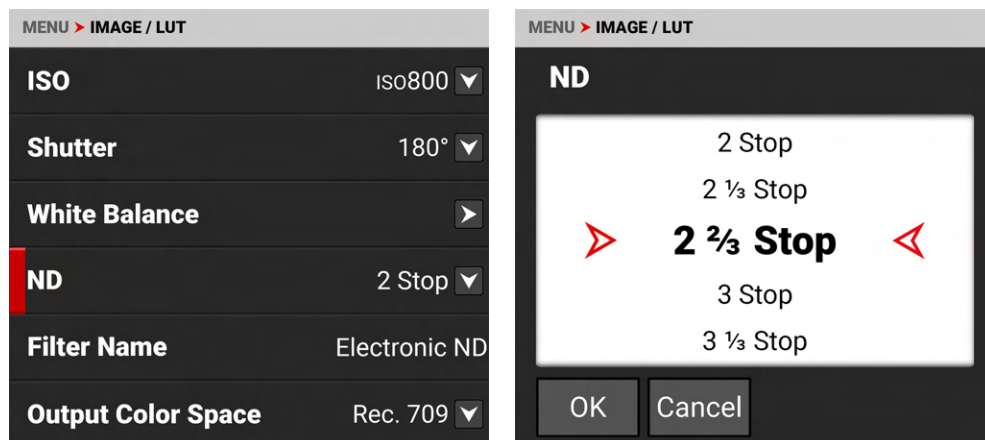

The ND filter range is 2-7 stops or 0.6 to 2.1 density. From the Status Settings menu, you can use the ND Display Mode submenu to select Stops or Density units, and you can use the ND Increments submenu to select the size of the ND increments displayed on the camera (refer to [Status Settings](#) for more information).

OUTPUT COLOR SPACE

Use Output Color Space to select the desired color space associated with the clip. When the camera file format is R3D, it saves this color space as metadata, which you can adjust in post-processing. When the camera uses the ProRes file format, and the ProRes Color Profile is Image/LUT, the camera bakes the color space in the resulting image.

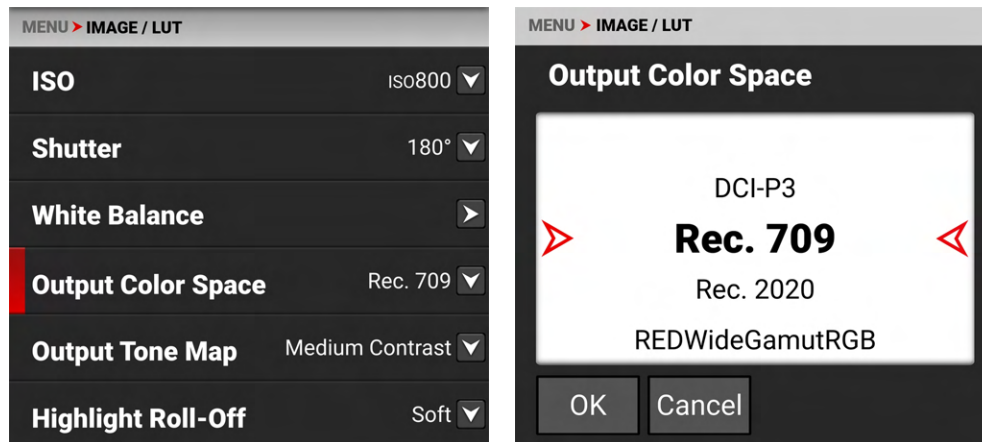


The Output Color Space selections include:

- DCI-P3 - Digital Cinema Initiatives theater projector standard color space
- Rec. 709 - Standard Color Space for HDTV (default)
- Rec. 2020 - Standard Color Space for UHD and HDR
- REDWideGamutRGB - Color space encompassing all of the colors the RED camera can generate without clipping.

OUTPUT TONE MAP

Use Output Tone Map to adjust the image contrast when displaying the camera output.

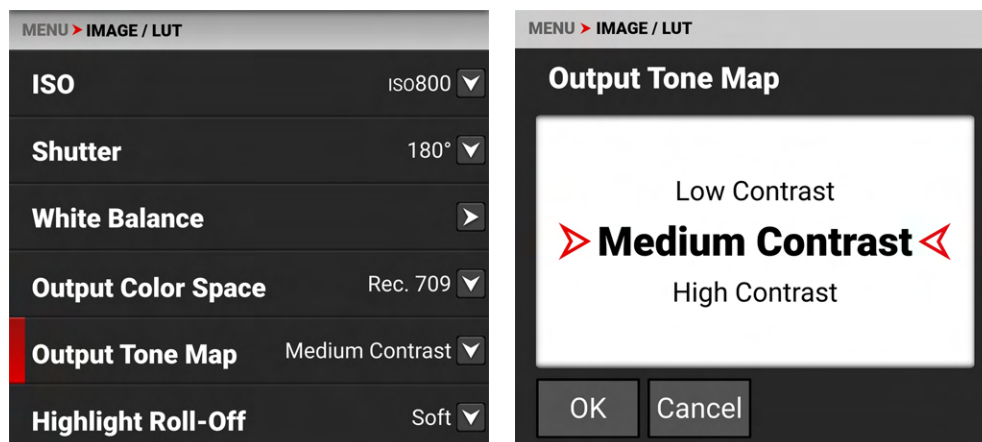


When shooting in R3D format, the camera stores this as metadata, which you can adjust non-destructively in post-production after filming.

The Output Tone Map selections include:

- Low Contrast - Low contrast is applied to the image
- Medium Contrast - Medium contrast is applied to the image (default)
- High Contrast - High contrast is applied to the image.

HIGHLIGHT ROLL-OFF

Use Highlight Roll-Off to select the desired highlight compression to use when displaying the camera output.

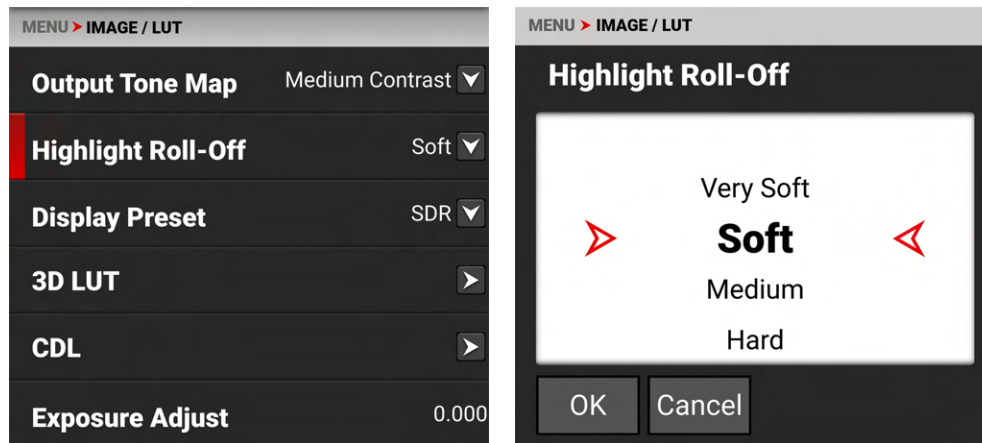


When shooting in R3D format, the camera stores this as metadata, which you can adjust non-destructively in post-production after filming.

The Highlight Roll-Off selections include:

- Very Soft - The lightest compression is applied to the image highlights
- Soft - Soft compression is applied to the image highlights (default)
- Medium - Medium compression is applied to the image highlights
- Hard - The highest compression is applied to the image highlights.

DISPLAY PRESET

Use Display Preset to select the gamma of the displayed preview image for the SDI port:

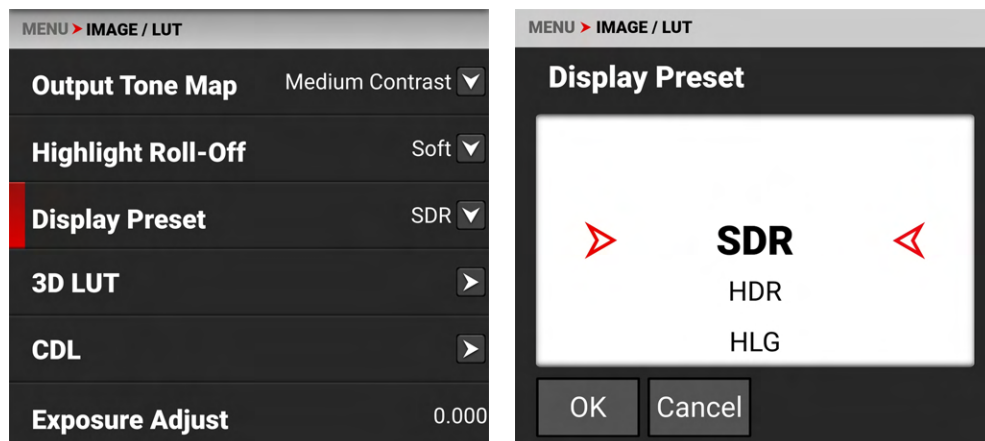

When shooting in R3D format, the camera stores this as metadata, which you can adjust non-destructively in post-production after filming.

The Display Preset allows you to select the gamma for the camera preview and monitor output.

Each monitor is designed to display using a specific gamma. Most monitors use SDR. However, some support HDR and HLG gamma signals. Select the display preset that works best with your monitor.

The selections are:

- SDR - Standard Dynamic Range (default)
- HDR - High Dynamic Range
- HLG - Hybrid Log-Gamma


Standard-dynamic-range (SDR) video describes images or video using a conventional gamma curve signal.

High-dynamic-range (HDR) video images are recorded using the SMPTE-2084 PQ curve. This technology captures and outputs a greater range of luminance than images recorded using standard-dynamic-range (SDR) methods.


Hybrid log-gamma (HLG) delivers HDR resolution without the need for metadata. This allows HLG to display well on SDR and HDR monitors.

3D LUT

Use the 3D LUT menu to apply and manage the camera's Look-Up Tables (LUTs).

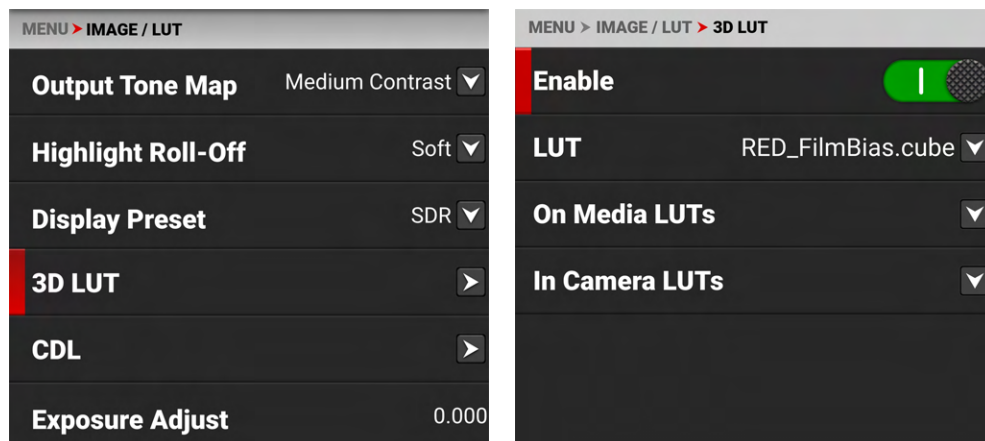

LUT

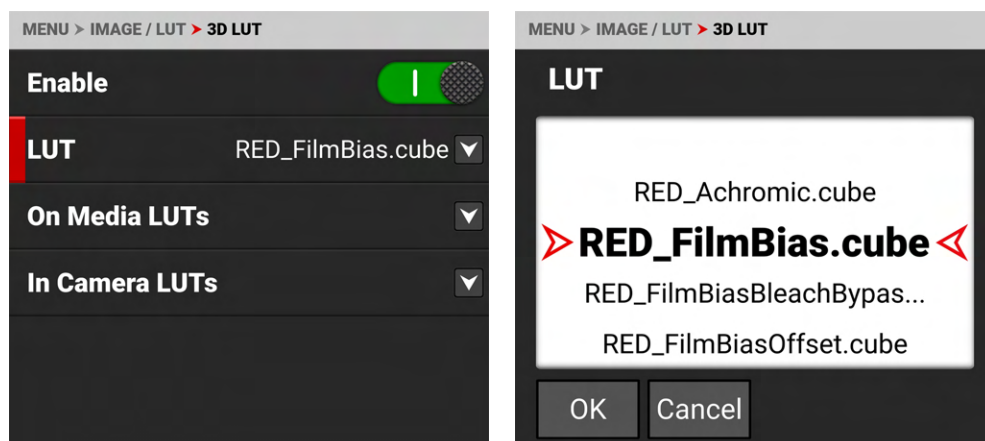

When you are recording in the ProRes format, you can choose to irreversibly encode (bake) the 3D LUT into the recorded file. For more information, refer to the [ProRes Color Profile](#) section.

When you are recording in the R3D format, this LUT will be saved along with each clip on which it is activated during recording. The output file name format for the LUT is clip_*LUT Name*.cube.


The LUT is non-destructive, and it is reversible, when recording in the R3D format.

To apply a 3D LUT, follow the instructions below:

1. Go to **MENU > IMAGE / LUT > 3D LUT > LUT**.
2. Select a LUT from the **LUT** list.

ON MEDIA LUTS

To import 3D LUTs from media, go to **MENU > IMAGE / LUT > 3D LUT > On Media LUTs**.

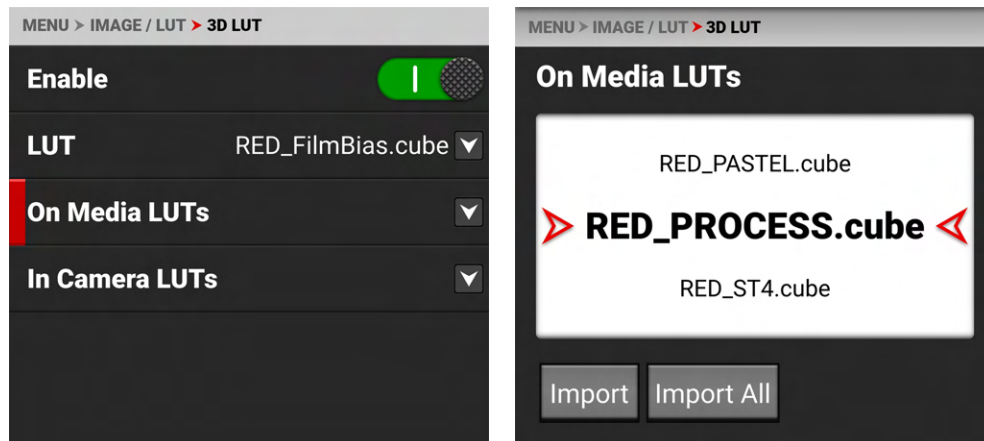

3D LUTs can be imported from media to the camera. When importing 3D LUTs from media to the camera, the 3D LUTs must be saved on the root path of your media, in a folder titled "luts." The camera only supports 33x33x33 LUTs.


From On Media LUTs, you can:

- Import the selected 3D LUT from the media to the camera
- Import all 3D LUTs from the media to the camera.

When you copy LUTs from a computer to the media, make sure that the card reader is not set to read only.

IN CAMERA LUTS

To export and delete 3D LUTs stored in the camera, go to **MENU > IMAGE / LUT > 3D LUT > In Camera LUTs**.

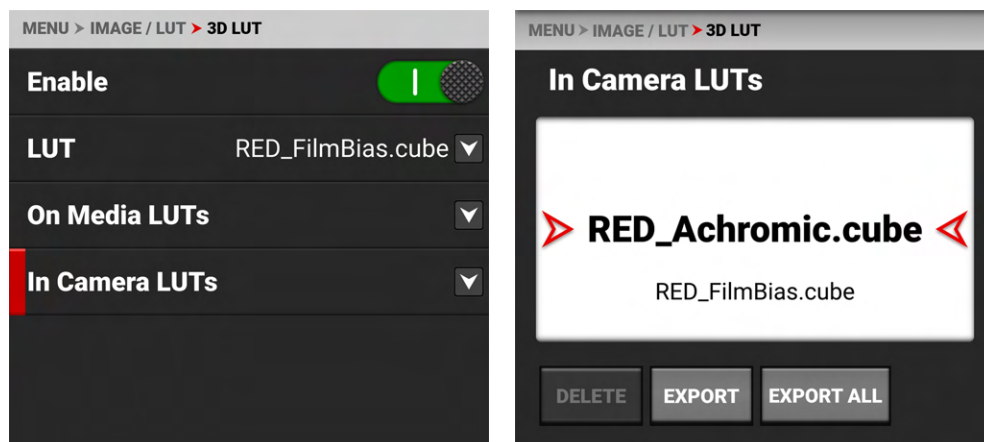

You can export 3D LUTs stored on the camera, to media, to use on other cameras. When you export 3D LUTs from the camera to media, the 3D LUTs are saved to a folder on the media called "luts."

NOTE: When a LUT is active during record, the camera will automatically save the LUT along with the recorded clip.


From In Camera LUTs you can:

- Delete a selected 3D LUT from the camera
- Export a selected 3D LUT from the camera to the media
- Export all 3D LUTs from the camera to the media.

CDL

The Color Decision List (CDL) allows you to define the look of the camera's colors in your project.

NOTE: The CDL menu is disabled on Monochrome cameras.

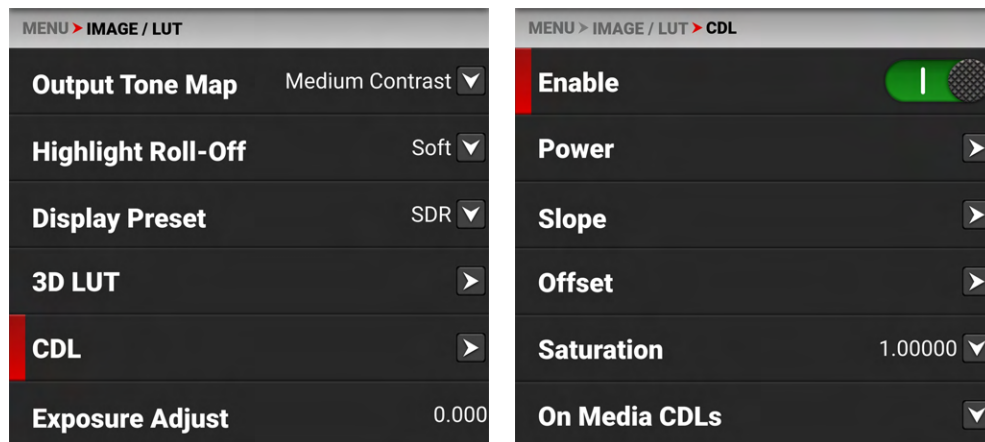

Use the CDL menu to:

- Enable the CDLs
- Configure **CDL Power**
- Configure **CDL Slope**
- Configure **CDL Offset**
- Configure **CDL Saturation**

MANAGE CDLS

Use the CDLs menu to import and export CDLs.

CDLs can be stored on the camera or transferred to media to be shared with other cameras. When exporting CDLs from camera to media, the CDLs are saved to a folder on the media called “cdls”. When importing CDLs from media to the camera, the CDLs must be stored on the media in a folder called “cdls.”

When you record with a CDL in ProRes format, the CDL is baked-in with the ProRes file. When you record with a CDL in R3D format, the camera automatically saves the CDL file along with the R3D files.

To export selected CDLs from the camera to the media, refer to the **In Camera CDLs** section.

To import selected CDLs from the media to the camera, refer to the **On Media CDL** section.

CDL OVERVIEW

A Color Decision List (CDL) is a metadata file format developed by the American Society of Cinematographers (ASC) to exchange standard color correction information between post production tools. This non-destructive color adjustment layer simplifies the versioning of looks by updating simple metadata without the need to re-transfer the image data.

CDLs are very common in VFX workflows because the VFX artist needs both the ungraded shot and the intended look. The ungraded shot allows the artist to comp in truly linear light, and the intended look is needed to confirm that the individual plates still hold together after the grade is applied.

SLOPE, OFFSET AND POWER

The three CDL tone curve parameters are Slope, Offset and Power. These algorithms allow the camera to modify the recorded image.

- Slope multiplies the incoming data
- Offset is sum of the incoming data
- Power is a power function to the incoming data

These three relate to Gain, Lift, and Gamma in the following ways:

- Slope = Gain
Gain Adjusts highlights.
- Offset = Lift
Lift Increases the value of dark colors.
- Power = Gamma
Gamma adjusts midtones.

These three relate to each other in the following ways:

Slope= input x slope

Offset= (input x slope) + offset

Power= ((input x slope) + offset) ^ power

The formula for ASC CDL color correction is:

$$out = ((i \times s) + o)^p$$

where

- out* is the color graded pixel code value
- i* is the input pixel code value (0=black, 1=white)
- s* is slope (any number 0 or greater, nominal value is 1.0)
- o* is offset (any number, nominal value is 0)
- p* is power (any number greater than 0, nominal value is 1.0)

The formula is applied to the three color values for each pixel using the corresponding slope, offset, and power numbers for each color channel.

SATURATION

A fourth parameter “Saturation” is achieved by converting the *out* data in a Luma and Chroma component. The Chroma Signal is then multiplied by the “Saturation” parameter.

FILM GRADE AND VIDEO GRADE


With Slope and Offset you can produce both a Film Grade “Exposure” and “Contrast” and a Video Grade “Lift” and “Gain.”

- Exposure is achieved by Offset
- Contrast is achieved by a combination of Offset and Slope
- Gain is achieved by Slope
- Lift is achieved by a combination of Offset and Slope
- Gamma is achieved by Power

CDL POWER


The CDL Power settings control the power of the Red, Green, and Blue, color data.

NOTE: The CDL options are disabled on Monochrome cameras.

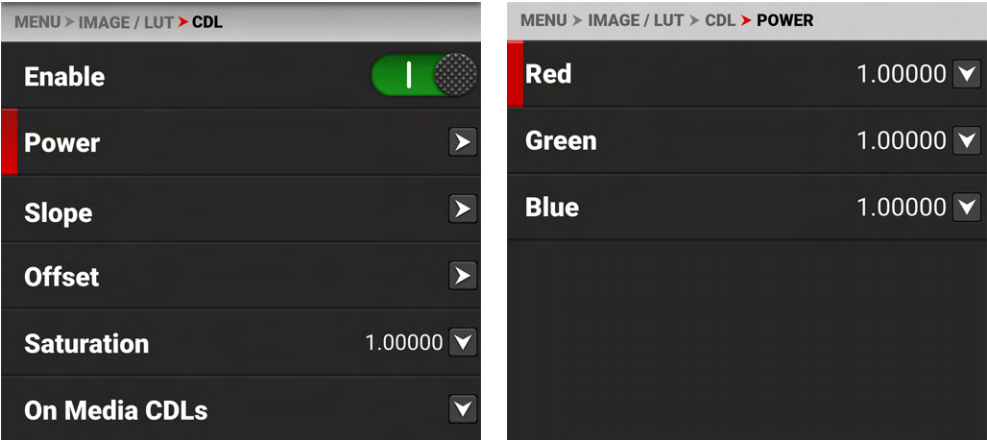

Use the CDL Power menu to adjust the power of the Red, Green, and Blue CDL data.

CDL POWER SETTINGS

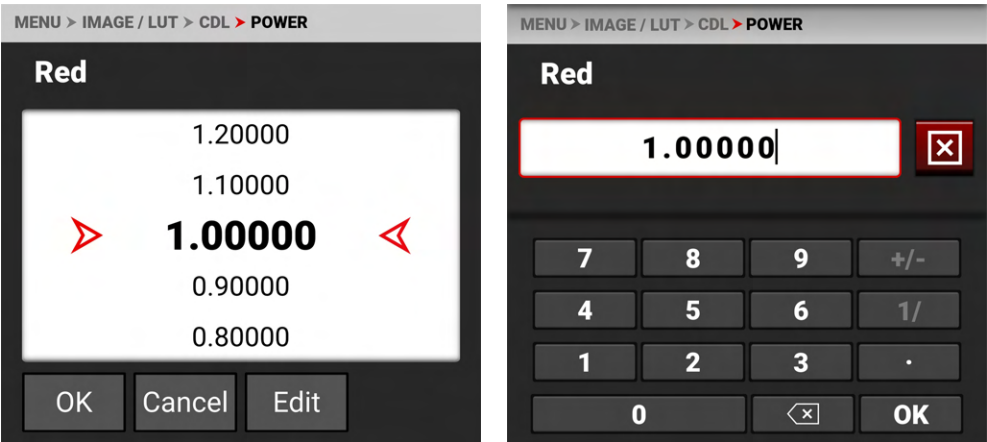


The CDL Power settings range from 0.00000 to 4.00000. The default CDL Power setting for each color is 1.00000. The Edit button opens the keypad where you can enter a specific CDL Power value.

CDL SLOPE


The CDL Slope settings multiply the incoming RGB data.

NOTE: The CDL options are disabled on Monochrome cameras.

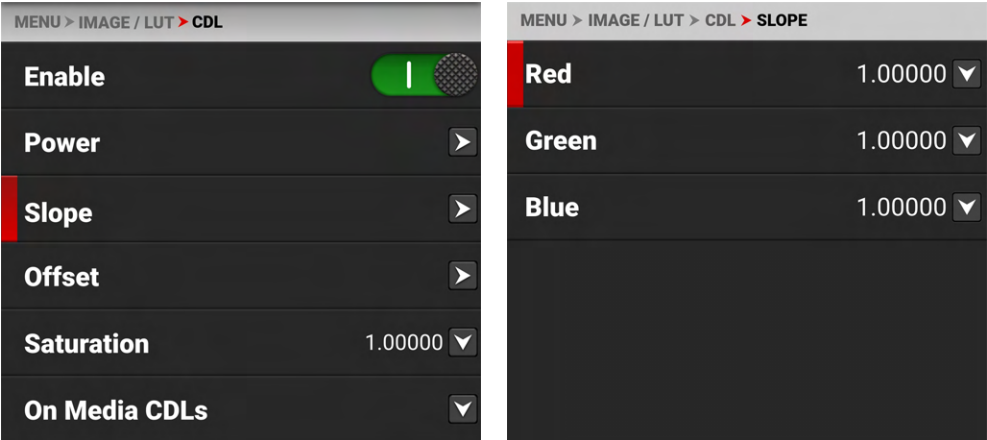

Use the CDL Slope menu to set the slope of the Red, Green, and Blue signals.

SLOPE SETTINGS

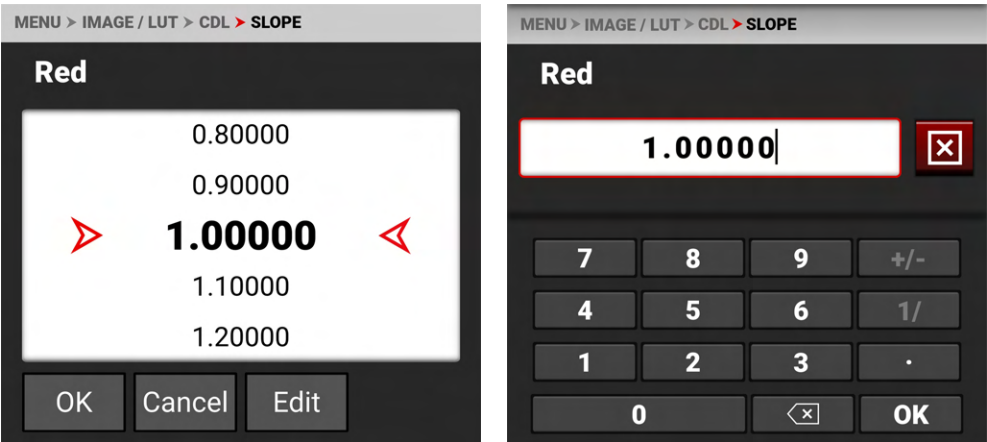


The CDL Slope settings range from 0.00000 to 2.00000. The default CDL Slope settings are 1.00000. The Edit button opens a keypad where you can enter a specific CDL Slope value.

CDL OFFSET

The CDL Offset settings control the offset of the RGB color data.


NOTE: The CDL options are disabled on Monochrome cameras.

The Camera LCD Menu for CDL Offset:

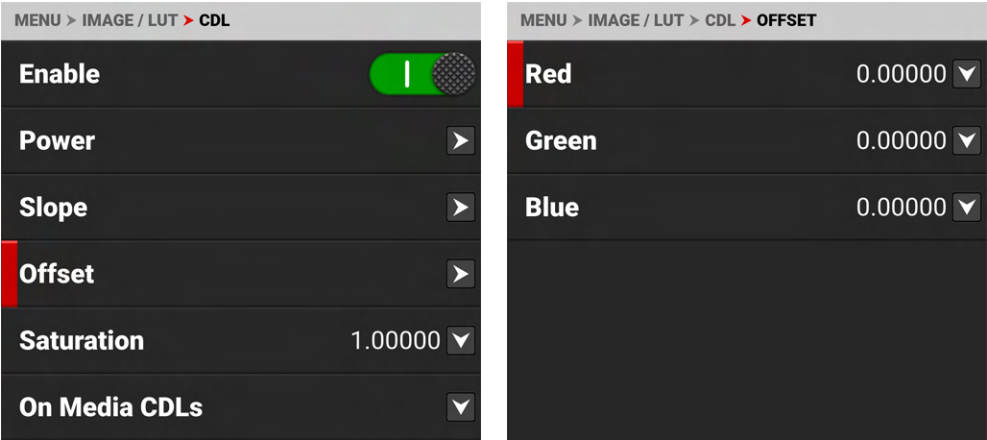


Use the CDL Offset menu to adjust the offset of the **CDL Slope** for the Red, Green, and Blue CDL data.

RED GREEN AND BLUE OFFSETS

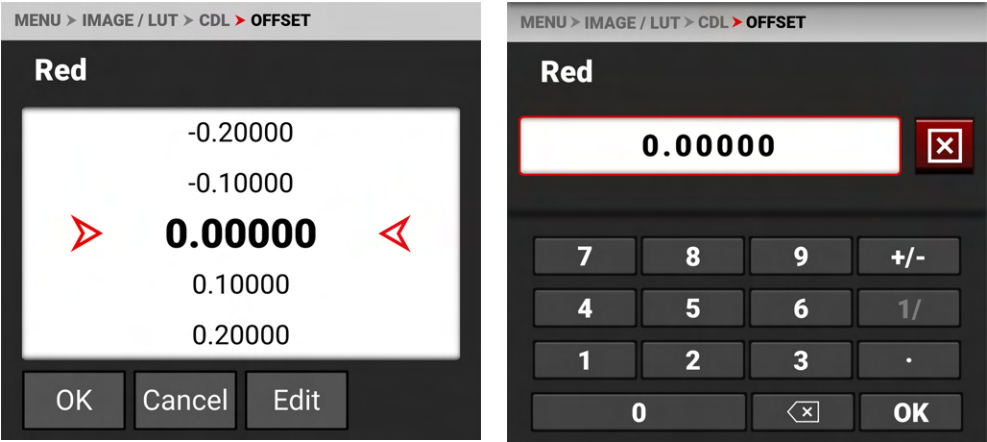


These CDL Offset settings range from -1.00000 to 1.00000. The default CDL Offset setting for each is 0.00000. The Edit button opens the keypad, where you can enter a specific CDL Offset value.

CDL SATURATION

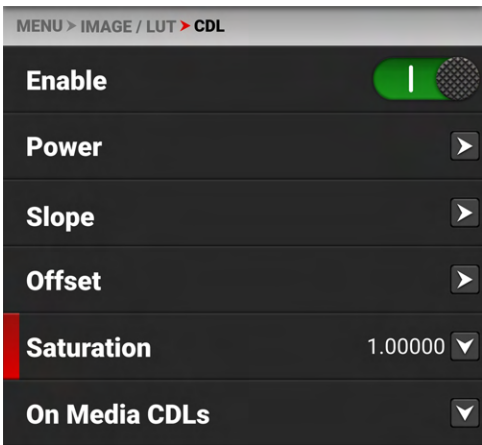

The CDL Saturation settings control the intensity of the color data.

NOTE: The CDL options are disabled on Monochrome cameras.
Use the CDL Saturation menu to adjust the intensity of the image color.

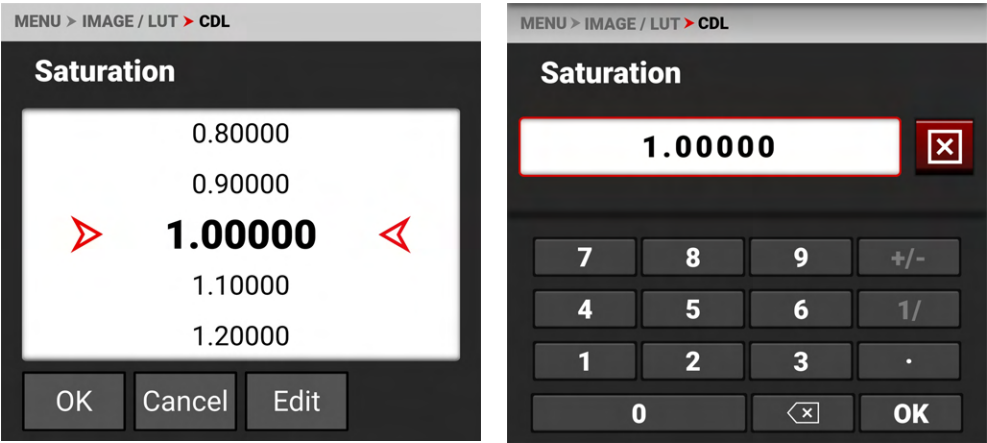


The CDL Saturation settings range from 0.00000 to 4.00000. The default CDL Saturation setting is 1.00000. The Edit button opens a keypad where you can enter a specific CDL Saturation value.

ON MEDIA CDL

Use On Media CDLs to import CDLs from the media to the camera.

NOTE: The CDL options are disabled on Monochrome cameras.

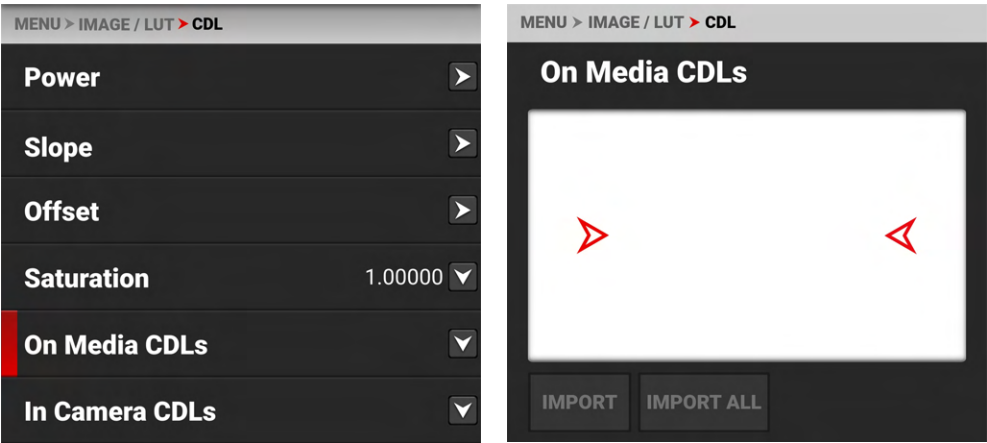

When importing CDLs from media to the camera, the CDLs are saved to a folder on the camera called “cdls”.


From On Media CDLs you can import a selected CDL from the media to the camera, or you can import all of the CDLs from the media to the camera.

When you copy CDLs from a computer to the media, make sure that the card reader is not set to Read Only.

IN CAMERA CDLS

Use In Camera CDLs to export CDLs from the camera to the media. You can also select which stored CDL you want to apply to the camera.

NOTE: The CDL options are disabled on Monochrome cameras.

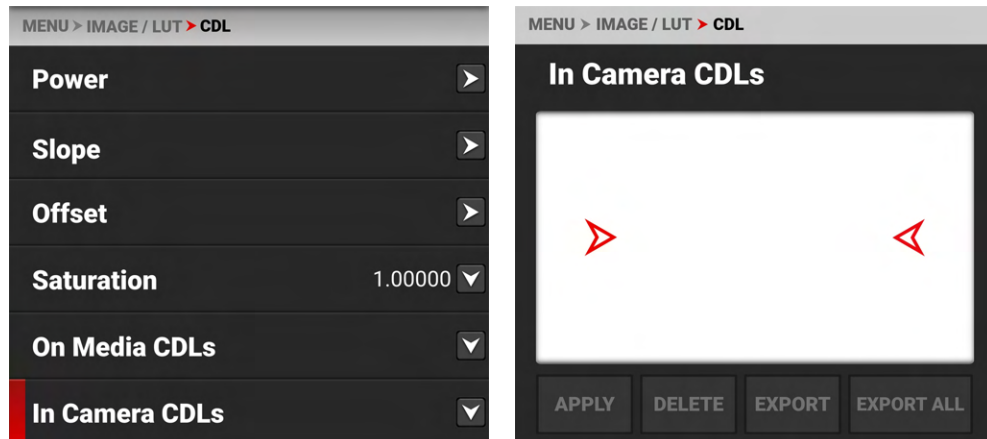


When exporting CDLs from the camera to the media, the CDLs are saved to a folder on the media called “cdls.”

From In Camera CDLs, you can apply the selected CDL to the camera, delete the selected CDL from the camera, export the selected CDL from the camera to the media, or export all of the CDLs from the camera to the media.

EXPOSURE ADJUST

Use Exposure Adjust to manually fine-tune the midtone exposure level.

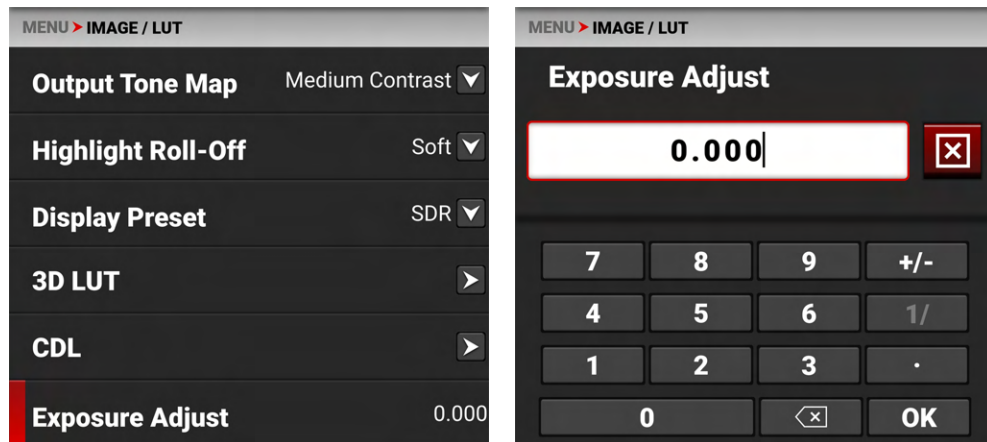


The Exposure Adjust range is –8.000 to 8.000. The default is 0.000.

Exposure Adjust allows you to adjust the midtone exposure levels while preserving the highlights and shadows, even when changed substantially. The Exposure Adjust setting is expressed in terms of relative exposure value (EV), where each unit represents a 1-stop change in midtone exposure level.

PROJECT SETTINGS MENU

The Project Settings menu contains the camera's main recording configuration settings.
From the Onboard LCD touchscreen menu, tap Project Settings:

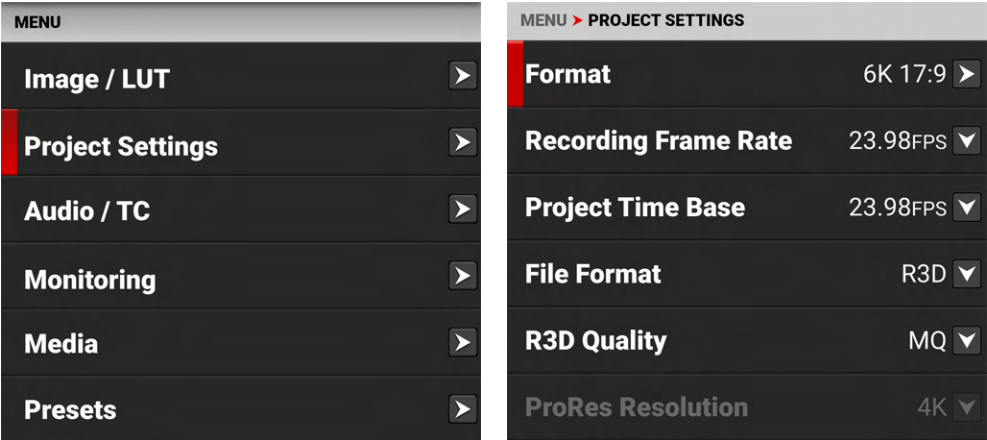


Use the Project Settings menu to configure the recording settings:

ITEMS	DETAILS
Format	Size of the area captured by the sensor
Recording Frame Rate	Frames recorded per second
Project Time Base	Image playback rate
File Format	R3D or ProRes file formats
R3D Quality	Compression level of the recorded image file
ProRes Resolution	Resolution of the recorded ProRes image file
ProRes Codec	ProRes codec selection
ProRes Color Profile	RWG / Log3G10 or Image / LUT settings
Pre-Record	Enable and configure a pre-record clip
Recording Mode	Select Motion or Timelapse mode
Timelapse	Interval Time and Frames per Interval
Frame Limit	Enable, Frames, and Playback Duration
Slate	Enter the Camera ID, Camera Position, Camera Operator, Scene, Shot, Take, Production, Director, DoP, and Unit

FORMAT

Use the Format setting to designate how much of the sensor the camera should use to capture images.

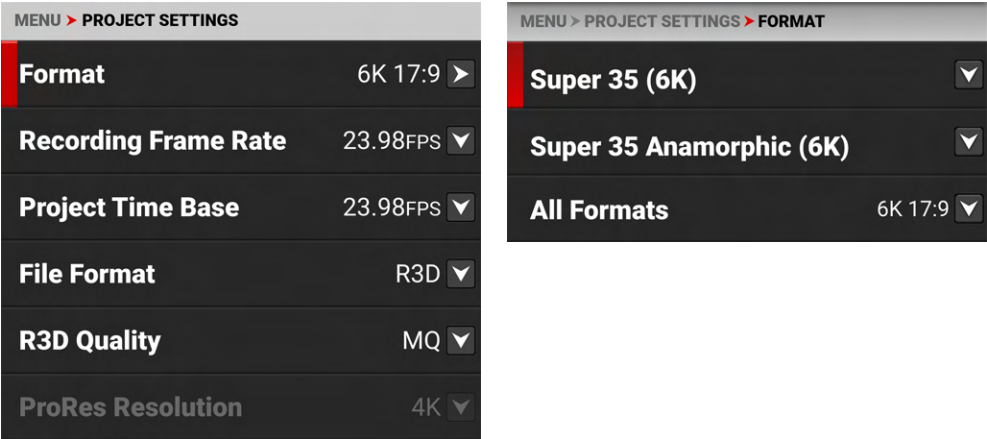


Use the Format menu to configure the camera's sensor capture area settings:

ITEMS	DETAILS
Super 35 (6K)	Select from Super 35 sensor capture areas
Super 35 Anamorphic (6K)	Select from Super 35 anamorphic sensor capture areas
All Formats	Select from all sensor capture areas

The available aspect ratios are determined by the selected resolution. The default format setting is 6K 17:9. When you lower the resolution in the Format menu, only a portion of the sensor is used. The camera does not downscale from the 6K 17:9 format when recording RAW.

SUPER 35 (6K)

Use the Super 35 (6K) format setting to designate how much of the sensor the camera should use to capture images.

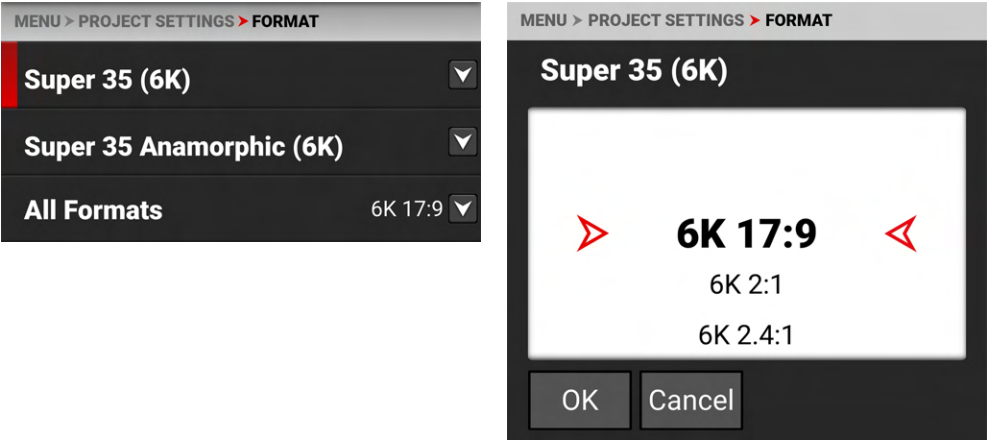

The available aspect ratios are determined by the selected resolution.

When you lower the resolution on the camera, only a portion of the sensor is used. The camera does not downscale from the 6K 17:9 format when recording RAW.


SUPER 35 (6K) FORMAT SPECIFICATIONS

This table contains the dimensions of the sensor area in Pixels and in Millimeters used by each Super 35 (6K) format. The default format is 6K 17:9.

FORMAT	DIMENSION (PIXELS)		DIMENSIONS (MM)		
	Width	Height	Width	Height	Diagonal
6K 17:9	6144	3240	27.03	14.26	30.56
6K 2:1	6144	3072	27.03	13.52	30.22
6K 2.4:1	6144	2592	27.03	11.40	29.34
6K 16:9	5760	3240	25.34	14.26	29.08
6K 1:1	3240	3240	14.26	14.26	20.17

SUPER 35 ANAMORPHIC (6K)

Use the Super 35 Anamorphic Format setting to designate how much of the sensor the camera should use to capture images.

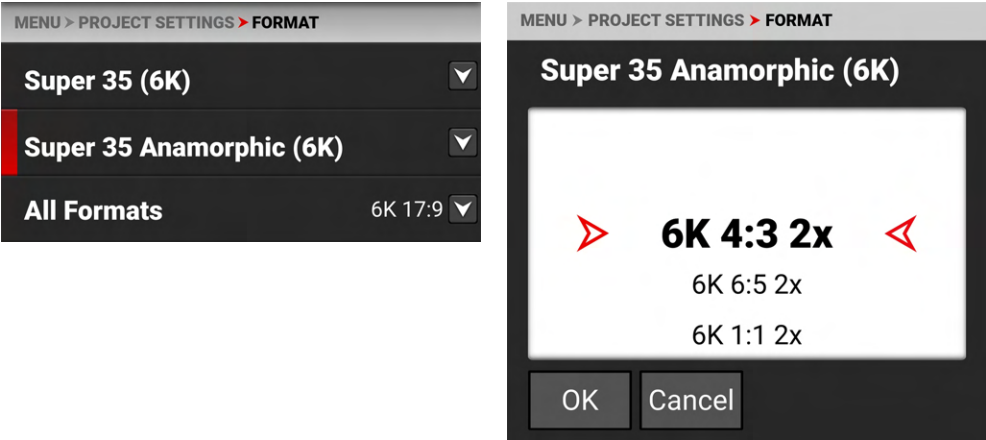

The available aspect ratios are determined by the selected resolution.

When you lower the resolution on the camera, only a portion of the sensor is used. The camera does not downscale from the 6K 17:9 format when recording RAW.

SUPER 35 ANAMORPHIC (6K) FORMAT SPECIFICATIONS


This table contains the effective dimensions of the sensor area in Pixels and in Millimeters used by each Super 35 Anamorphic (6K) format.

The default setting is 6K 4:3 2x.

FORMAT	DIMENSION (PIXELS)		DIMENSION DE-SQUEEZED (PIXELS)		DIMENSIONS (MM)		
	WIDTH	HEIGHT	WIDTH	HEIGHT	WIDTH	HEIGHT	DIAGONAL
6K 4:3 2x	4320	3240	8640	3240	19.01	14.26	23.76
6K 6:5 2x	3888	3240	7776	3240	17.11	14.26	22.27
6K 1:1 2x	3240	3240	6480	3240	14.26	14.26	20.17
6K 3:2 1.8x	4860	3240	8748	3240	21.38	14.26	25.70
6K 4:3 1.8x	4320	3240	7776	3240	19.01	14.26	23.76
6K 3:2 1.6x	4860	3240	7776	3240	21.38	14.26	25.70
6K 16:9 1.5x	5760	3240	8640	3240	25.34	14.26	29.08
6K 17:9 1.3x	6144	3240	8192	3240	27.03	14.26	30.56
6K 17:9 1.25x	6144	3240	7680	3240	27.03	14.26	30.56

ALL FORMATS

Use the All Formats setting to select from all of the possible formats to designate how much of the sensor the camera should use to capture images.

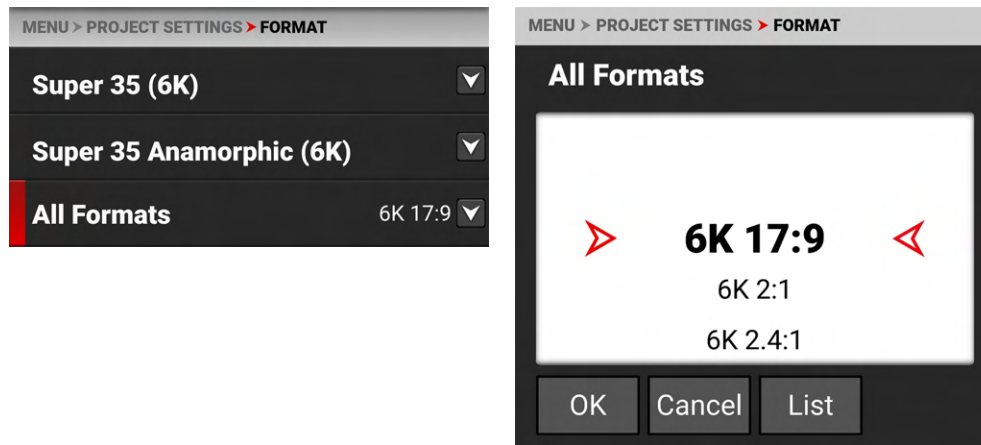

The available aspect ratios are determined by the selected resolution.

When you lower the resolution on the camera, only a portion of the sensor is used. The camera does not downscale from the 6K 17:9 format when recording RAW.


FORMAT SPECIFICATIONS

This table contains the dimensions of the sensor area in Pixels and in Millimeters used by all of the camera formats. The default setting is 6K 17:9.

FORMAT	DIMENSION (PIXELS)		DIMENSIONS (MM)		
	WIDTH	HEIGHT	WIDTH	HEIGHT	DIAGONAL
6K 17:9	6144	3240	27.03	14.26	30.56
6K 2:1	6144	3072	27.03	13.52	30.22
6K 2.4:1	6144	2574	27.03	11.32	29.30
6K 16:9	5760	3240	25.34	14.26	29.08
6K 4:3 2x	4320	3240	18.61	14.26	23.45
6K 6:5 2x	3888	3240	17.11	14.26	22.27
6K 3:2 1.8x	4860	3240	21.38	14.26	25.70
6K 4:3 1.8x	4320	3240	19.01	14.26	23.76
6K 3:2 1.6x	4860	3240	21.38	14.26	25.70
6K 16:9 1.5x	5760	3240	25.34	14.26	29.08
6K 17:9 1.3x	6144	3240	27.03	14.26	30.56
6K 17:9 1.25x	6144	3240	27.03	14.26	30.56
5K 17:9	5120	2700	22.53	11.88	25.47
4K 17:9	4096	2160	18.02	9.50	20.37
4K 16:9	3840	2160	16.90	9.50	19.39
2K 17:9	2048	1080	9.01	4.75	10.19


RECORDING FRAME RATE

Use Recording Frame Rate to select the recording frame rate (also referred to as the capture frame rate).

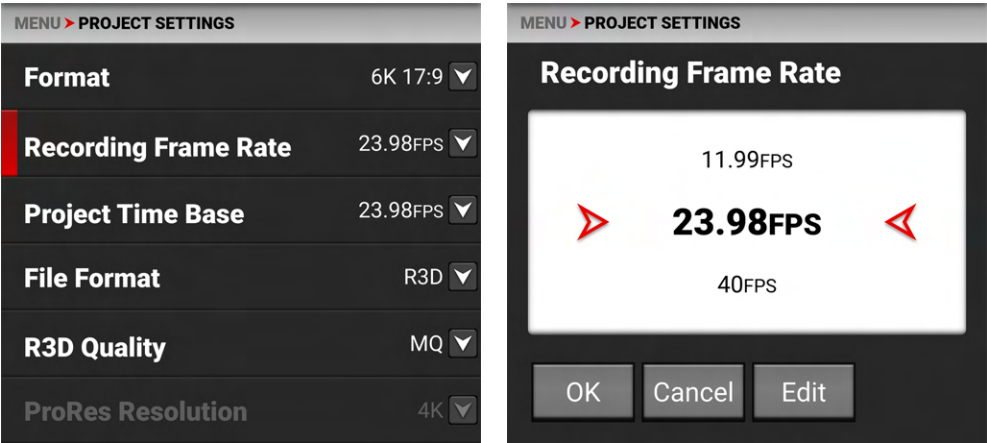


The recording frame rate is the number of frames per second (FPS) that are recorded. The recording frame rate is different from the project time base, which is the rate at which the footage will be played back. Lower values than the project time base will result in under-cranking (fast motion playback) and values larger than the project time base will result in over-cranking (slow motion playback).

You can tap **EDIT** to change the Recording Frame Rate menu values manually.

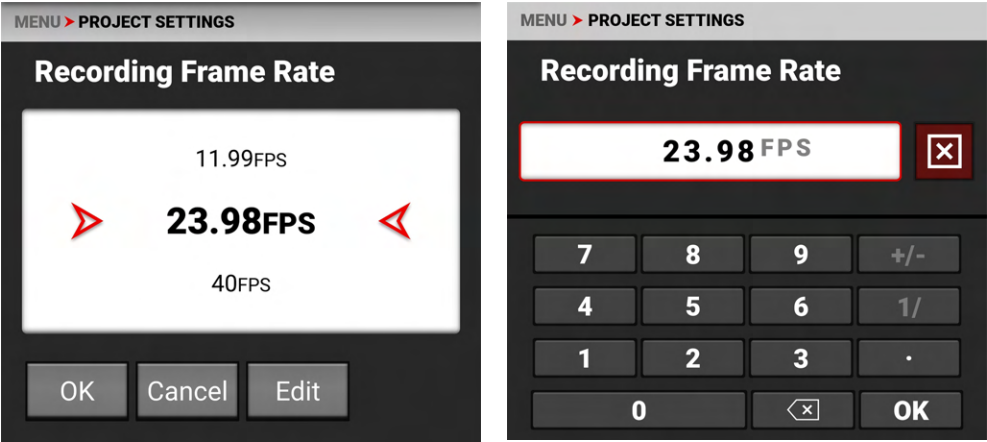


The maximum frame rate for each format is determined by **Project Time Base** and **Format**. When you select a Project Time Base, the camera automatically selects a matching Recording Frame Rate and an R3D Quality (when possible). You must change the Recording Frame Rate and R3D Quality after the Project Time Base to select a different setting.

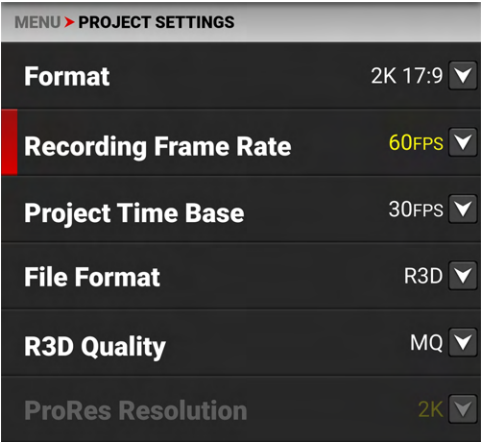

A Recording Frame Rate highlighted in **yellow** will result in playback occurring at a different frame rate than the original recording, and will record varispeed audio.

PROJECT TIME BASE

Use the Project Time Base setting to choose the playback rate for the recorded footage.

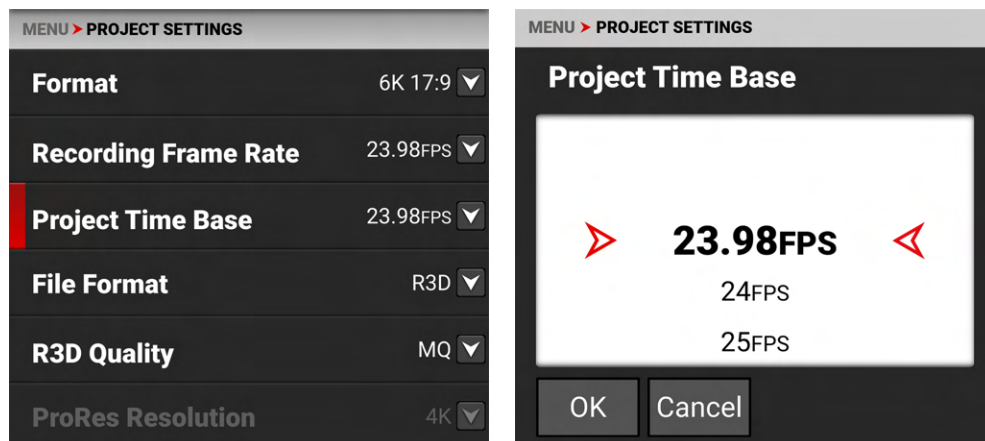

The following project time bases are available:

- 23.98 FPS (Default)
- 24.00 FPS
- 25.00 FPS
- 29.97 FPS
- 30.00 FPS
- 50.00 FPS
- 59.94 FPS
- 60.00 FPS


When you select the Project Time Base, it changes the Recording Frame Rate to the same setting (when possible).

When you change the Format, the Recording Frame Rate and Project Time Base do not automatically update. You must select the Project Time Base after you change the Format setting.


NOTE: When the Recording Frame Rate is set to a higher speed than the Project Time Base setting, audio is recorded as varispeed audio (refer to [Audio / TC Menu](#)).

FILE FORMAT

Use File Format to select the format that the camera uses to record image files.

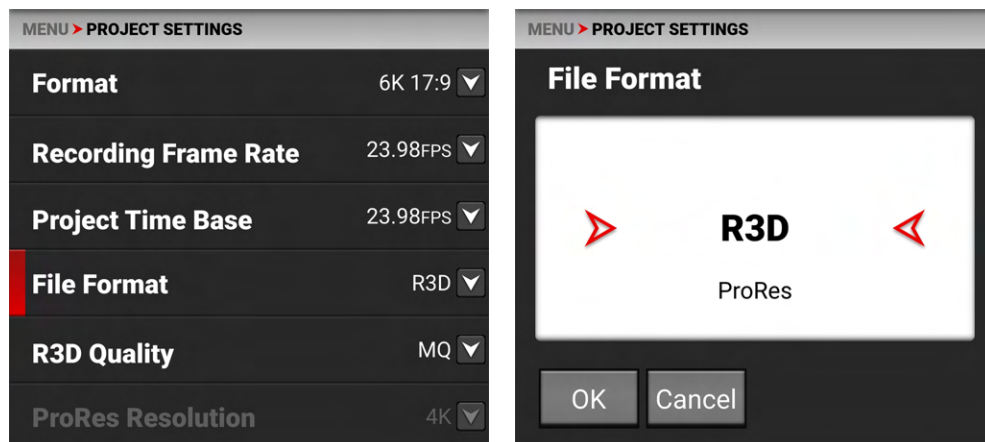

When you change the file format, a message warns you that the camera must be rebooted to complete the change:

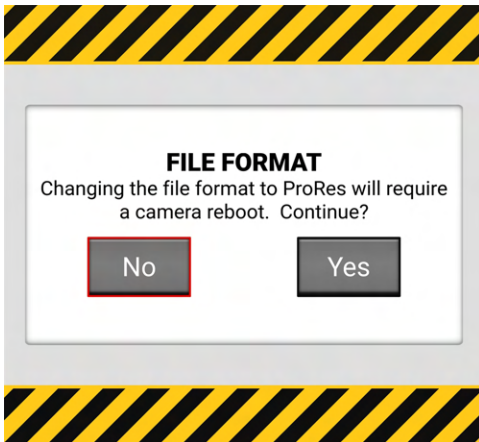

R3D REDCODE FILE FORMAT

The RED R3D file format records images in a compressed RAW format. In comparison to Apple ProRes, REDCODE RAW data does not bake in image settings like ISO, saturation, or LUTs, allowing more flexibility in post-processing workflows without reducing image quality or dynamic range. Instead R3D files store the image settings as Metadata. You can open and process R3D files with REDCINE-X PRO or with non-linear editing (NLE) software that supports the RED SDK.

R3D is the camera's default file format.

APPLE PRORES FORMAT

This section provides general information about recording Apple ProRes files with the camera, including:

- The maximum recording frame rate in ProRes is 120 frames per second (FPS).
- QuickTime files have the same metadata as the REDCODE RAW files. The metadata is per clip, and not per frame.
- You can select a **Format** from the **Project Settings Menu** and the camera will scale it to the target resolution you select in **ProRes Resolution**.
- Recording 4K ProRes files requires 4K and above formats in 17:9. When in ProRes, formats below 4K will automatically be recorded as 2K or HD.
- For more information about Apple ProRes, including the data rates for each codec, refer to the **Apple ProRes White Paper**.

APPLE PRORES DESCRIPTION

The table below describes each supported Apple ProRes codec.


NAME	CHROMA SAMPLING	DATA RATE
ProRes 422 HQ	Y' C _b C _r 4:2:2	754 Mbps at 4K 17:9 and 24 FPS
ProRes 422	Y' C _b C _r 4:2:2	503 Mbps at 4K 17:9 and 24 FPS
ProRes 422 LT	Y' C _b C _r 4:2:2	350 Mbps at 4K 17:9 and 24 FPS

FILE STRUCTURE OF RECORDED APPLE PRORES FILES

When you record using R3D + ProRes Proxy, this is the file structure of the recorded files on the media:


- .RDM Folder
 - .RDC Folder
 - .mov
 - .R3D
 - .rtn (RED Thumbnail file)

NOTE: The camera creates multiple .mov files, similar to how the camera creates multiple R3D files.

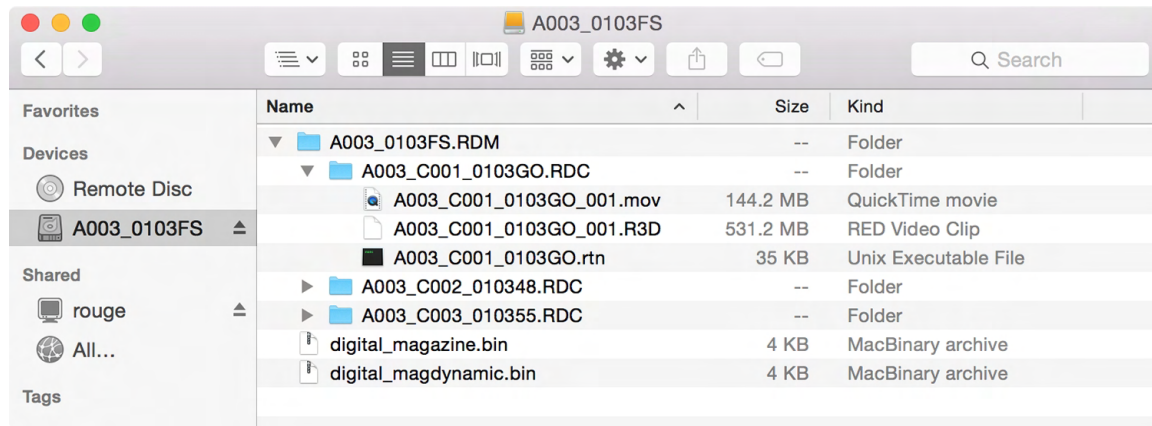


When you record using ProRes format, this is the file structure of the recorded files on the media:

- .RDM Folder
 - .RDC Folder
 - .mov

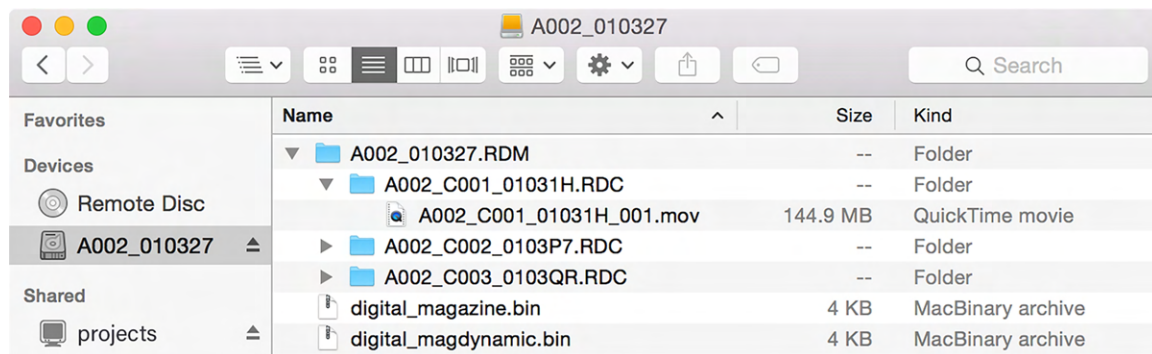

R3D QUALITY

Use R3D Quality to select the R3D data rate the camera uses to record the image files.

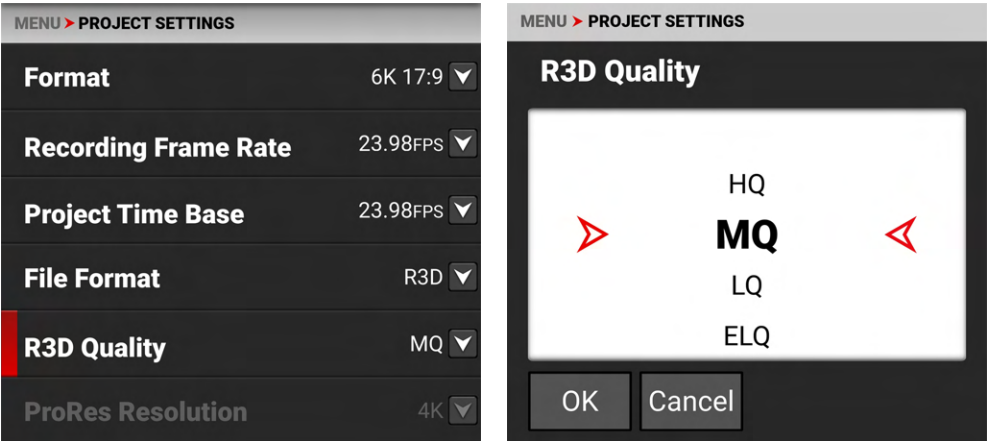


- The R3D Quality selections include:
- HQ - High data rate and less recording time
 - MQ - Medium data rate (default) and longer recording time
 - LQ - Low data rate and long recording time
 - ELQ - Lowest data rate and longest recording time

For high complexity scenes, VFX, and stills from motion workflows, RED recommends the HQ setting. For cinema (non-VFX) and high-end TV, RED recommends the MQ setting. For TV, online content, documentary and interviews, RED recommends the LQ setting. ELQ compression mode provides nearly 50% more recording time than LQ, and RED recommends using ELQ for scenes where the complexity is low or the final delivery resolution is lower than the acquisition resolution (downsampling).

R3D QUALITY DATA RATES				
FORMAT	24P HQ	24P MQ	24P LQ	24P ELQ
6K 17:9	239 MB/s	168 MB/s	105 MB/s	65 MB/s

PRORES RESOLUTION

When you enable ProRes as the **File Format** you can select the ProRes resolution.

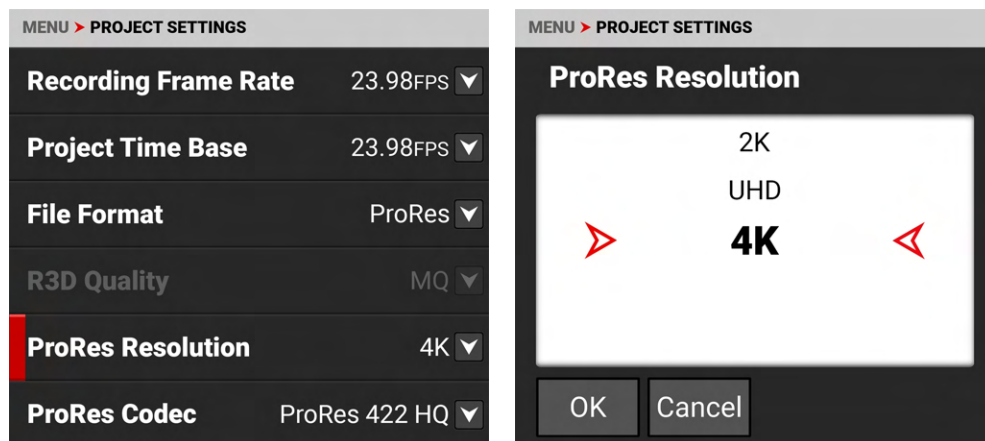


The ProRes Resolution selections include:

- HD (16:9)
- 2K (17:9)
- UHD (16:9)
- 4K (17:9, default).

The camera will downscale to achieve the selected ProRes resolution when the aspect ratios of your format and ProRes resolution do not match. It is recommended to shoot 4K or 2K ProRes when the format is 17:9, and to shoot UHD or HD when the format is 16:9.

PRORES CODEC

When you enable ProRes as the **File Format** you can select the ProRes Codec.

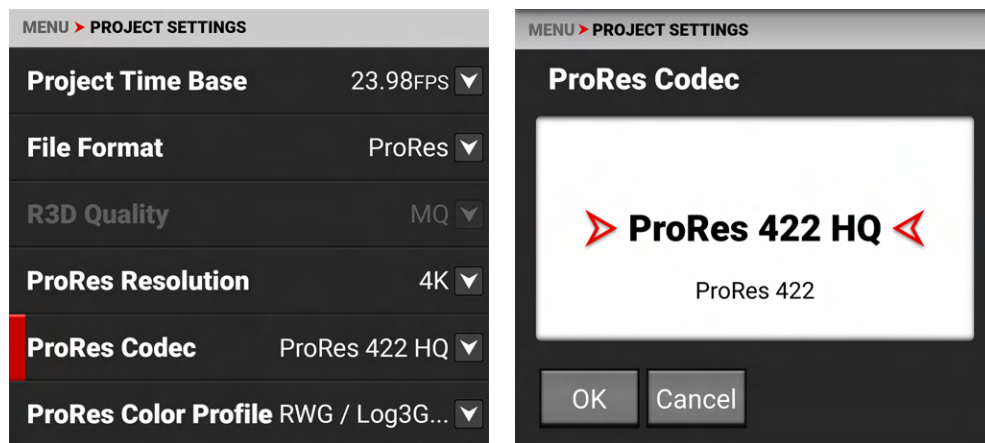


The ProRes Codec selections include:

- ProRes 422 HQ
- ProRes 422
- ProRes 422 LT

NOTE: Some ProRes codec selections are not available in all frame rates.

PRORES COLOR PROFILE

When you enable ProRes as the **File Format** you can select the color profile.

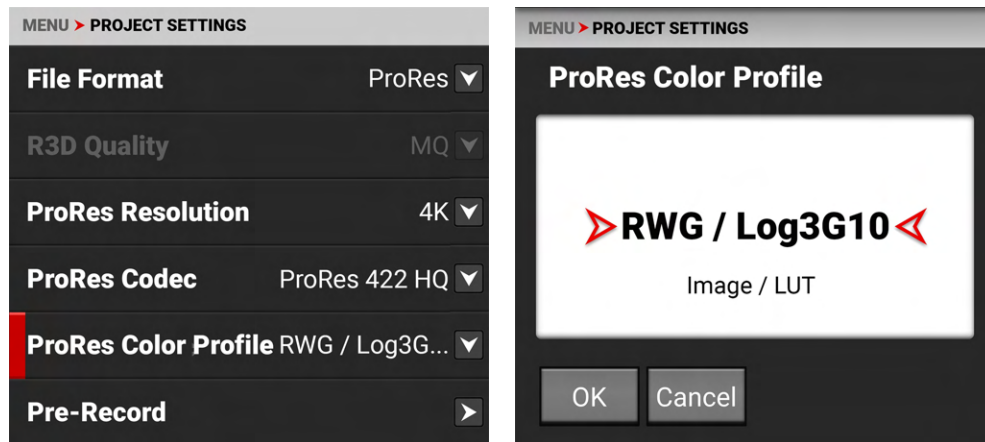


The ProRes Color Profile settings include:

- RWG/Log3G10 - REDWideGamutRGB color space and Log3G10 gamma curve
- Image / LUT - Applies all Image / LUT settings for **Output Color Space**, **Display Preset**, **3D LUT**, and **CDL**.

NOTE: All ProRes Color Profile settings bake in both the ISO and the White Balance settings.


PRE-RECORD

Use the Pre-Record menu to enable or disable Pre-Record, and to adjust the length of the Pre-Recorded clip.

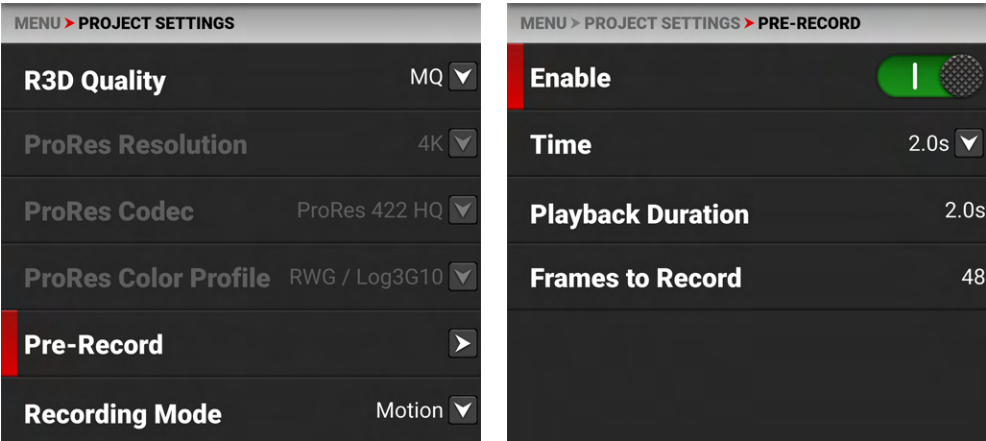

Pre-Record allows you to continually capture images to a small amount of memory while waiting to begin recording. This allows you to capture unexpected events such as, a whale breaching the water, or an athlete scoring a goal. When you finish recording, the pre-recorded clip is added to the beginning of the recording.

You can set the Pre-Record clip to record from half a second up to 30 seconds, depending on the format, file type, resolution, and quality. The default setting is 2 seconds at the default Project Time Base of 23.98 FPS.

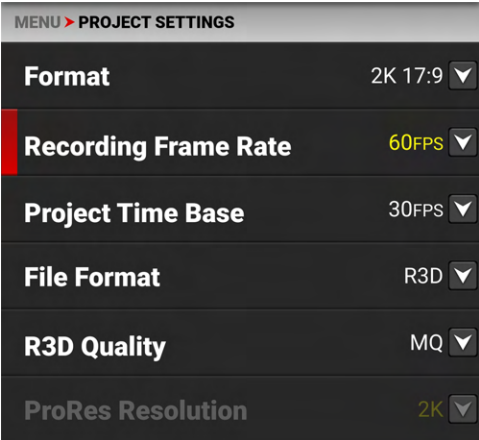

When the selected pre-record time is not possible in the selected format, the closest time available will be shown in yellow.

For more information, refer to [Pre-Recording Content](#).


ENABLE

Select Enable to toggle Pre-Record on and off.




TIME

Select Time to choose or enter the number of seconds to pre-record.

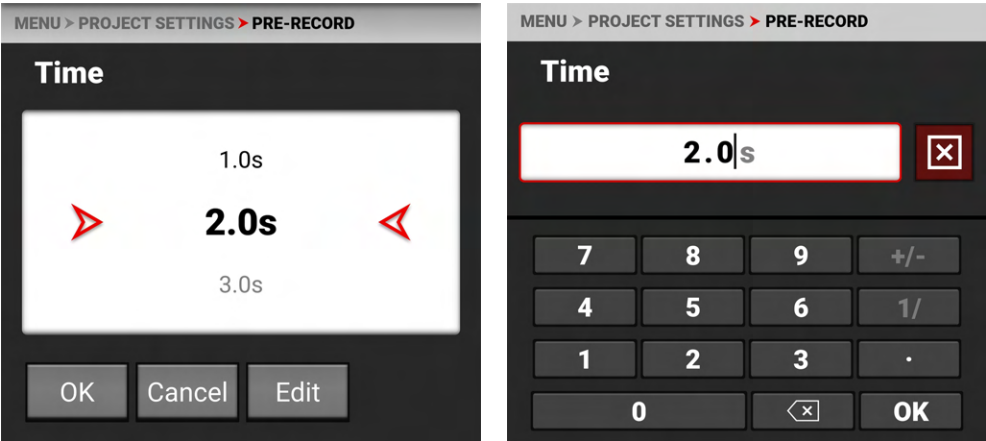


When you select a Time value larger than the current settings allow, the camera changes the Time value to the maximum value it can support and highlights the value in yellow.

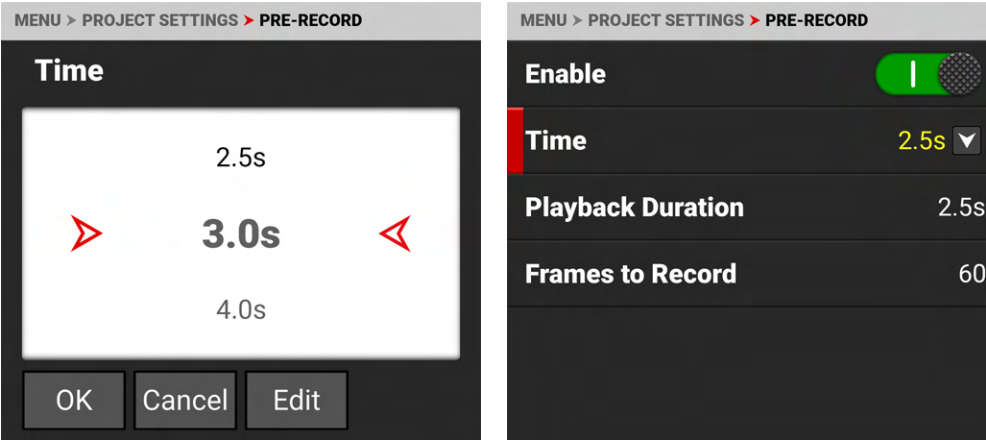


PLAYBACK DURATION

Playback Duration displays the duration in seconds that the pre-record clip will last in playback.

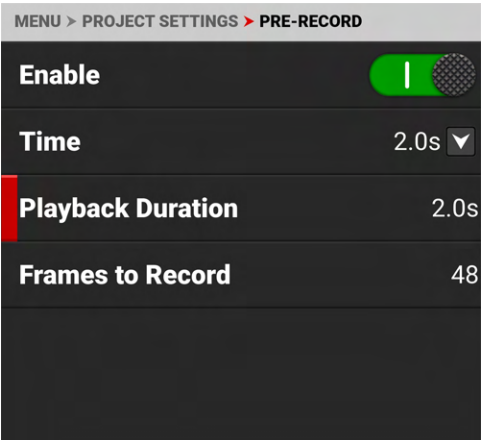



FRAMES TO RECORD

Frames to Record displays the number of frames the pre-recorded clip will contain at the current settings.

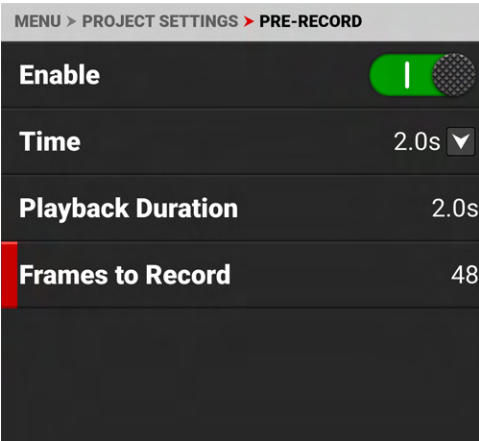

RECORDING MODE


Use Recording Mode to select between normal motion recording or timelapse recording.

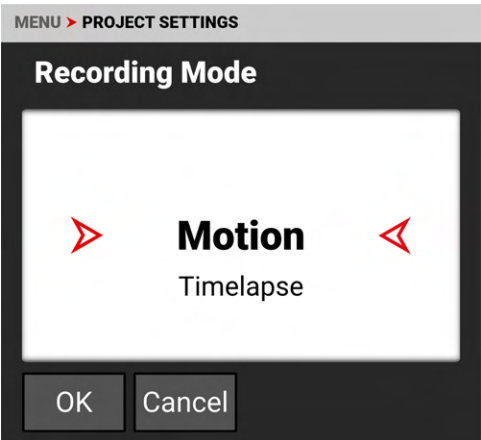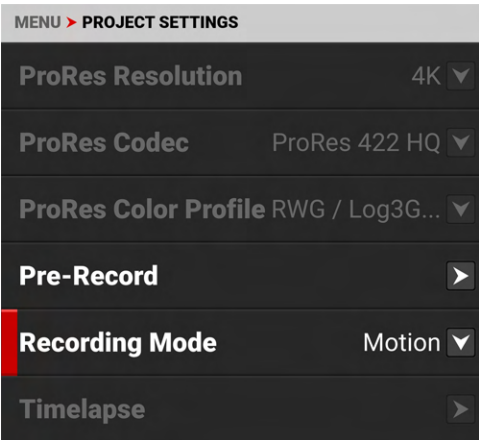

When you select Timelapse, the Timelapse option is enabled on the menu.

TIMELAPSE


Use Timelapse to select the timelapse settings.

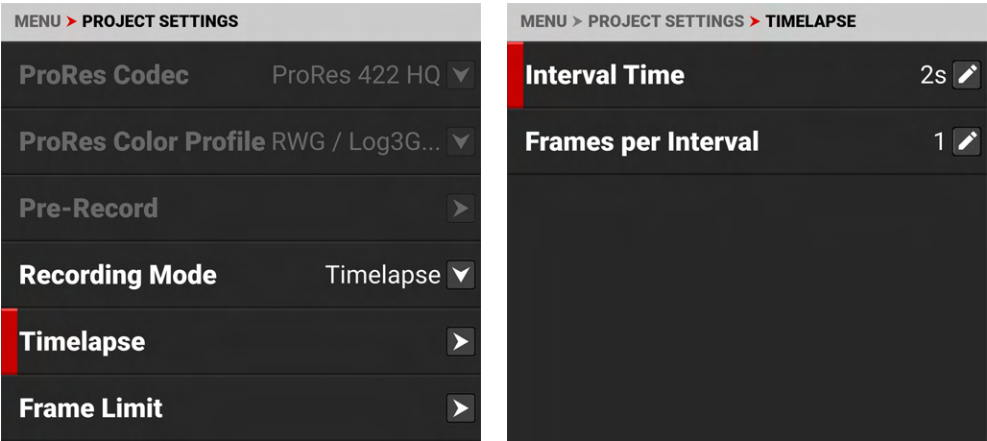

From Timelapse you can select the interval time between the group of frames per interval, and you can select the number of frames captured per interval.

INTERVAL TIME


Select Interval Time to enter the elapsed time between the group of frames per interval.

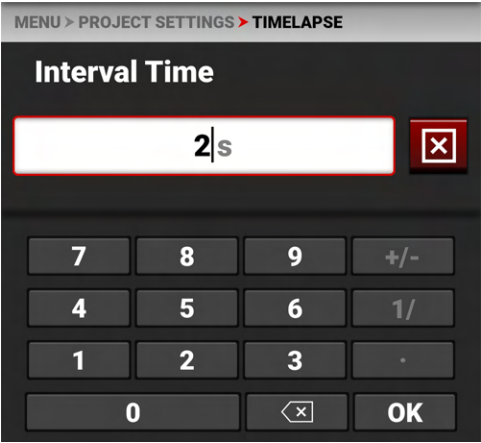

For example:
60s = 1 minute
3600s = 1 hour
86400s = 1 day

FRAMES PER INTERVAL


Select Frames Per Interval to enter the number of frames to record per interval.

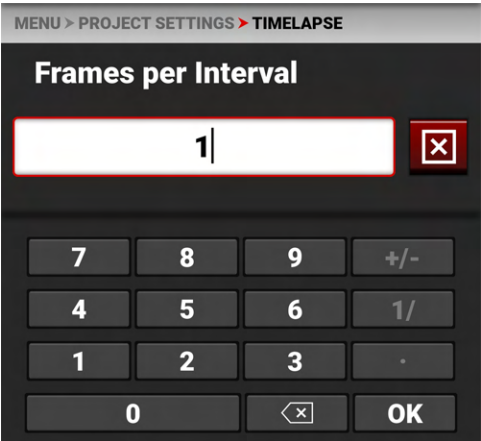

Adding more frames per interval allows you to have more flexibility in post (for example: image stacking).

FRAME LIMIT

Use Frame Limit to limit the total number of frames recorded per clip. Frame limit applies to both Motion and Timelapse recording modes.

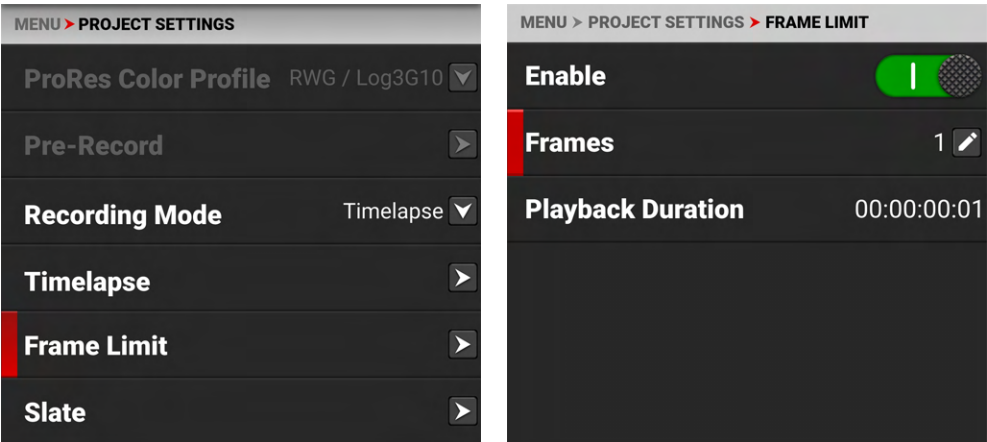

The Frame Limit selections include Enable, Frames, and Playback Duration.


ENABLE

Select Enable to toggle the activation of the Frame Limit feature.



FRAMES

Use frames to enter the maximum number of frames the clip can record.

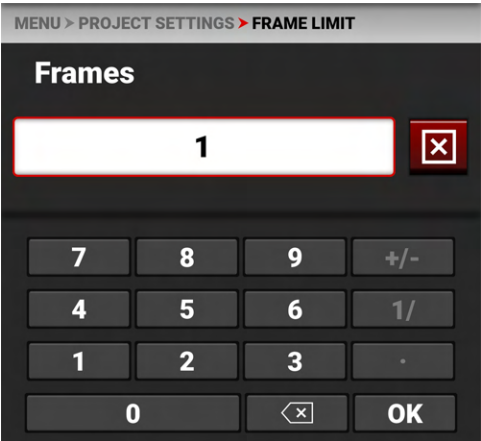


PLAYBACK DURATION

Playback Duration displays the calculated playback duration of the clip with the selected Frame Limit and FPS. For example, using 1440 Frames as a Frame Limit at 24 FPS results in one minute of playback duration.

SLATE

Use the Slate menu to assign a camera ID and camera position to the clip.

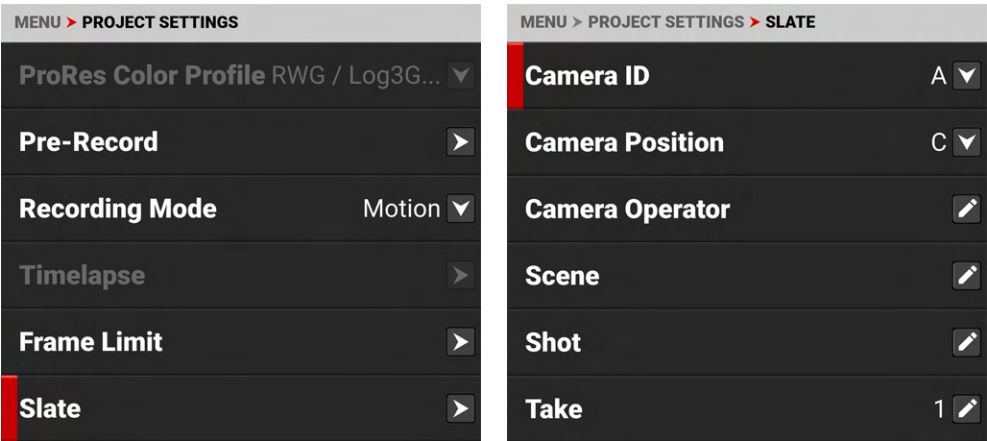

The information you can add to a clip includes:


- Camera ID
- Camera Position
- Camera Operator
- Scene
- Shot
- Take
- Production
- Director
- DoP
- Unit

NOTE: When you set the Camera ID and Camera Position, they are also set in the Media>Secure Format menu items.

CAMERA ID

Use Camera ID to assign a camera ID when the camera records clips.


NOTE: You can also change the Camera ID by using Secure Format (refer to [Secure Format](#)).

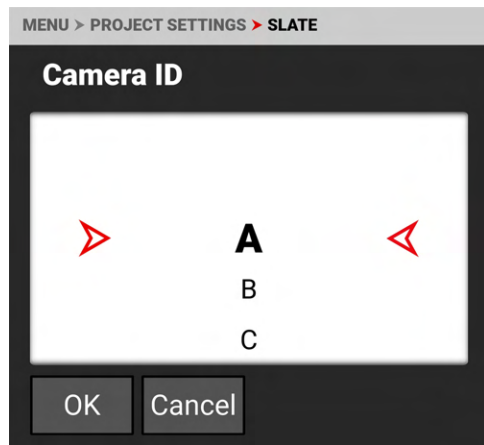

The camera IDs you can assign when recording a clip include the letters A-Z.

CAMERA POSITION


Use Camera Position to assign a camera position letter when the camera records clips.

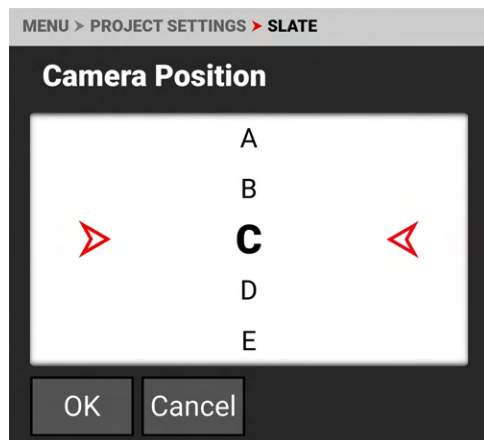

The camera positions you can assign when recording a clip include the letters A-Z.


CAMERA OPERATOR

Use Camera Operator to enter the name of the camera operator.

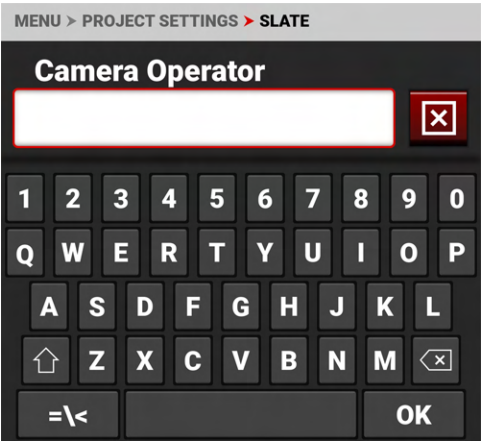


SCENE

Use Scene to enter the scene name.

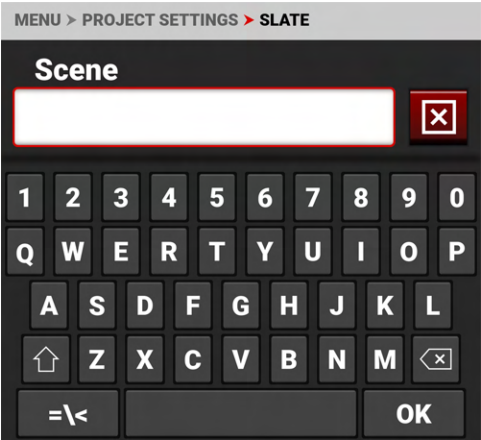

SHOT

Use Shot to enter the number of the shot.

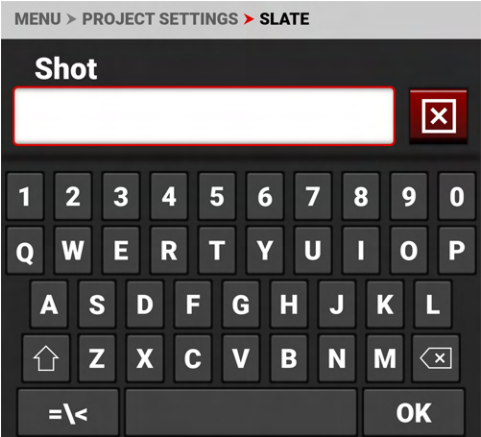

TAKE

Use Take to enter the number of the take.

MENU > PROJECT SETTINGS > SLATE

Take

1|

X

7

8

9

+/-

4

5

6

1/

1

2

3

.

0

X

OK

PRODUCTION

Use Production to enter the name of the production.

MENU > PROJECT SETTINGS > SLATE

Production

X

1

2

3

4

5

6

7

8

9

0

Q

W

E

R

T

Y

U

I

O

P

A

S

D

F

G

H

J

K

L

↑

Z

X

C

V

B

N

M

X

=\<

OK

DIRECTOR

Use Director to enter the name of the director.

MENU > PROJECT SETTINGS > SLATE

Director

X

1

2

3

4

5

6

7

8

9

0

Q

W

E

R

T

Y

U

I

O

P

A

S

D

F

G

H

J

K

L

↑

Z

X

C

V

B

N

M

X

=\<

OK

DOP

Use DoP to enter the name of the director of photography.

MENU > PROJECT SETTINGS > SLATE

DoP

1 2 3 4 5 6 7 8 9 0
Q W E R T Y U I O P
A S D F G H J K L
↑ Z X C V B N M ↵
= \ < OK

UNIT

Use Unit to enter the name of the production unit.

MENU > PROJECT SETTINGS > SLATE


Unit

1 2 3 4 5 6 7 8 9 0
Q W E R T Y U I O P
A S D F G H J K L
↑ Z X C V B N M ↵
= \ < OK

AUDIO / TC MENU

The Audio / TC menu contains the settings you use to configure your camera audio and Timecode.

From the Onboard LCD touchscreen menu, select Audio / TC:

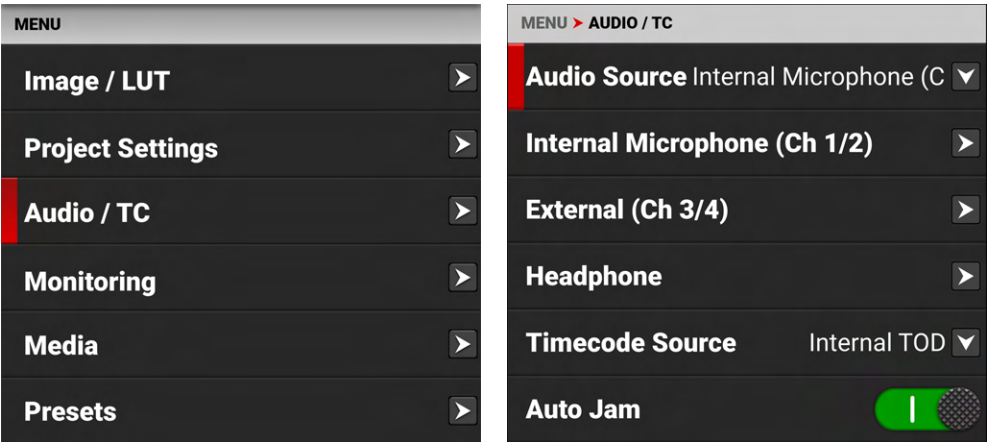

Use the Audio / TC menu to configure the audio and Timecode settings for the camera:

ITEM	DETAILS
Audio Source	Audio input source
Internal Microphone	Left and right internal microphone levels
External Audio	Left and right external audio levels
Headphone	Headphone volume level
Timecode Source	Timecode source
Auto Jam	Button to enable auto-jamming Timecode to time-of-day (TOD) Timecode
Jam Timecode to TOD	Button to jam Timecode to time-of-day (TOD)
Manual Timecode	Button to jam to the camera's internal Timecode generator and edit the Timecode starting number
Timecode Display Mode	Timecode type to display

AUDIO DETAILS

The camera is equipped with two integrated microphones suitable for scratch-track audio, and it is equipped with one 3.5 mm stereo microphone input.

You can link the gain for the two internal channels together and you can link the two external channels together. This allows you to adjust the two internal (or external) channels together as one.

You can record audio from the internal microphones, from the external audio connector (2-channel recording), or from internal and external sources combined as four 24-bit 48 kHz uncompressed audio tracks.

You can adjust the external audio by using the appropriate camera gain-settings. The default camera gain setting is 1 dB.

The camera's audio data is synchronized with video and timecode, and it is embedded in the R3D file. You can export the audio data as separate audio files by using REDCINE-X PRO, if needed. The camera also embeds the audio in the SDI output.

You can monitor the audio during recording and playback by using the equipped 3.5 mm stereo headphone port.


SDI AUDIO

When you select Internal Microphone (Ch 1/2) as the audio source, the camera routes the Internal Microphone signals to SDI channels 1 and 2. When you select External (Ch 3/4), the camera routes the External audio signal to SDI channels 1 and 2. When you select Internal + External, the camera routes the Internal Microphone signal to SDI channels 1 and 2, and the External Audio signal to SDI channels 3 and 4.

VARISPEED AUDIO

This camera has the ability to record audio when the camera's Recording Frame Rate is set to a higher speed than the Project Time Base setting (Varispeed mode).

NOTE: The camera records the audio as a separate WAV file and stores it in the clip's RDC folder on the media drive.

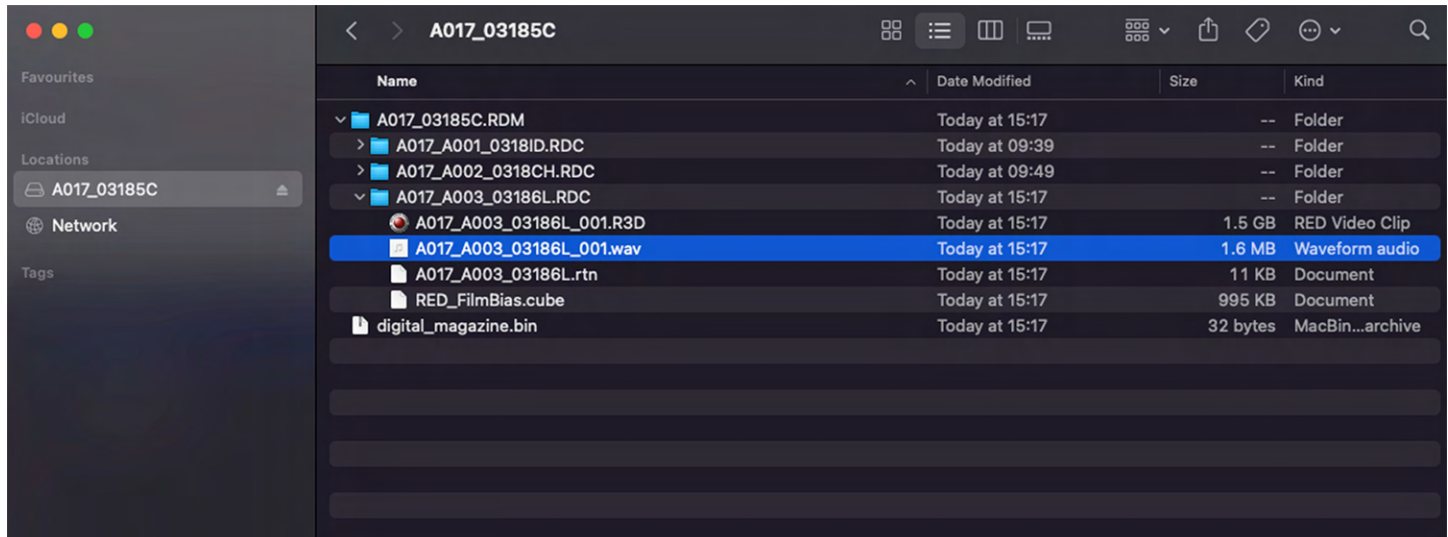

TIMECODE DETAILS

Timecode provides a mechanism to reference frames from the camera's recorded clips to external devices, such as other cameras or audio recorders. Some devices can also gather additional data such as, lens metadata, or camera orientation, which Timecode can later use for merging the data back together in post-processing.

The camera provides two separate Timecode formats:

- **Time Of Day (TOD)** - The camera records the time of day as the Timecode for each clip
- **Edgecode** - The camera records elapsed time as the Timecode for each clip. The time is reset to 01:00:00 when a new media card is inserted in the camera. All of the clips on the media will have a continuous Timecode track. However, each new media card will default to a Timecode track starting at 01:00:00. Edgecode is equivalent to RUN RECORD as used on broadcast cameras. You can change the Edgecode to begin at any desired time by using the Media Format menu (refer to [Edgecode](#)).

The camera synchronizes (jams) the TOD Timecode to an external Timecode generator (when one is connected to the camera) or it jams the Timecode to its internal real-time clock.


When using Internal TOD, a jam between the running timecode and a real time clock is required. The time at which this jam occurs will have an effect on the overall timecode drift over a 24-hour period due to the nature of non-drop-frame (NDF) timecode. By enabling Auto-Jam, the camera automatically jams its timecode, ensuring repeatable drift across multiple cameras and days.

When Auto Jam is disabled, you can manually pick the instant in which you want to jam timecode to the real time clock.

The camera stores TOD and Edgecode in the R3D file. You can select which one you want to display on the **LCD Touchscreen** (refer to [Timecode Display Mode](#)).

AUDIO SOURCE

Use the Audio Source settings to select the audio input source.

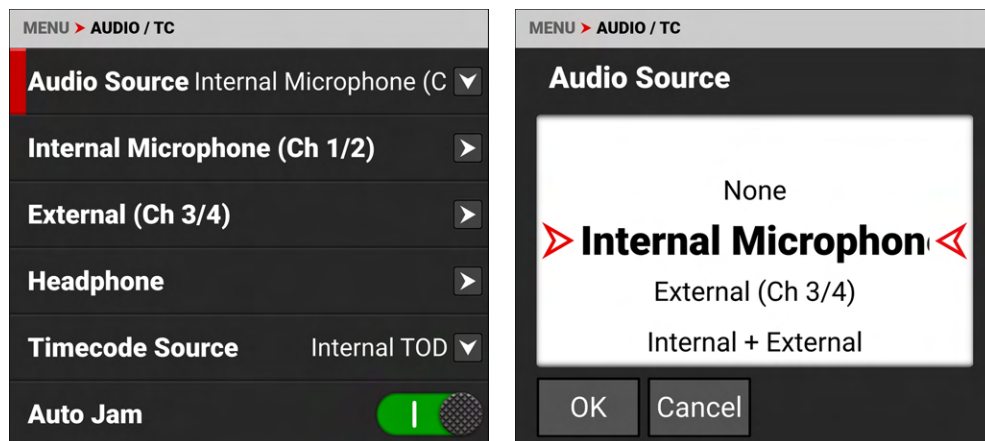


The audio input sources include:


- None
 - Internal Microphone - enables the **Internal Microphone** channels 1 and 2 (default)
 - External - enables the 3.5 mm Audio Input port for **External Audio** channels 3 and 4
 - Internal and External - enables the Internal Microphone and the 3.5 mm Audio Input port for all channels 1 through 4.
- NOTE:** The headphones can only monitor two channels. You can either monitor channels 1 and 2 (internal microphone) or you can monitor channels 3 and 4 (external port). Refer to **Audio Tools** for more information.

INTERNAL MICROPHONE

Use the Internal Microphone settings to set the left and right internal microphone levels. This menu is only enabled when the **Audio Source** is set to Internal Microphone or Internal and External.

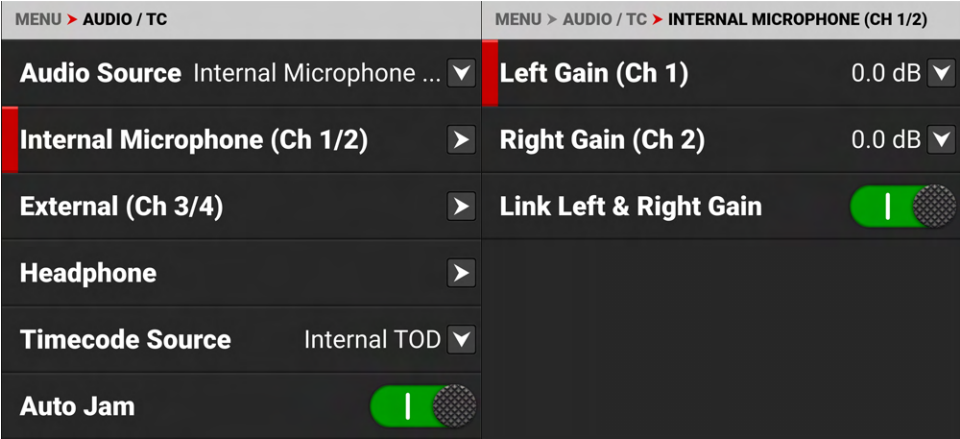

The Internal Microphone is represented as Channels 1 and 2 on the UI VU Meters (refer to **Playback** for more information). The left channel is channel 1 (Ch 1) and the right channel is channel 2 (Ch 2).

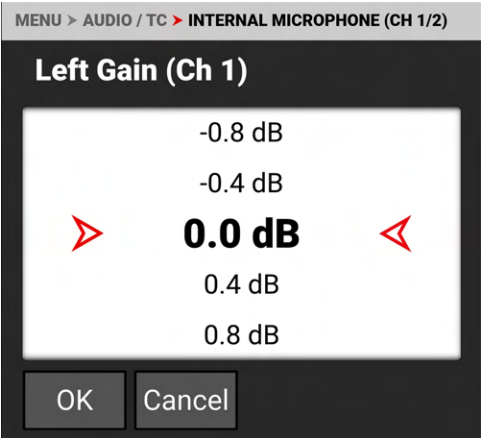

You can adjust the internal audio levels for left and right from -52.5 dB to 36.0 dB. The default setting is 0 dB. When you enable Link Left & Right Gain, the adjustments you make to either channel of gain will adjust both channels to the same setting.

EXTERNAL AUDIO

Use the External Audio settings to set the left and right external audio levels. This menu is only enabled when the **Audio Source** is set to External or set to Internal and External.

MENU > AUDIO / TC		MENU > AUDIO / TC > EXTERNAL AUDIO	
Audio Source	External (Ch 3/4) ▼	Ch 3 Gain	0.0 dB ▼
Internal Microphone (Ch 1/2)	▶	Ch 4 Gain	0.0 dB ▼
External (Ch 3/4)	▶	Link Ch 3 & Ch 4 Gain	☒
Headphone	▶		
Timecode Source	Internal TOD ▼		
Auto Jam	☒		

The External Microphone is represented as Channels 3 and 4 on the UI VU Meters (refer to **Playback** for more information).

MENU > AUDIO / TC > EXTERNAL AUDIO

Ch 3 Gain

-0.4 dB

▶

0.0 dB

◀

0.4 dB


OK

Cancel

You can adjust the external audio levels for Ch 3 and Ch 4 from -52.2 dB to 36.0 dB.
The default setting is 0.0 dB.
When you enable Link Ch 3 & Ch 4 Gain, the adjustments you make to either channel of gain will adjust both channels to the same setting.

HEADPHONE


Use the Headphone settings to enable the headphone jack and to adjust the headphone volume.

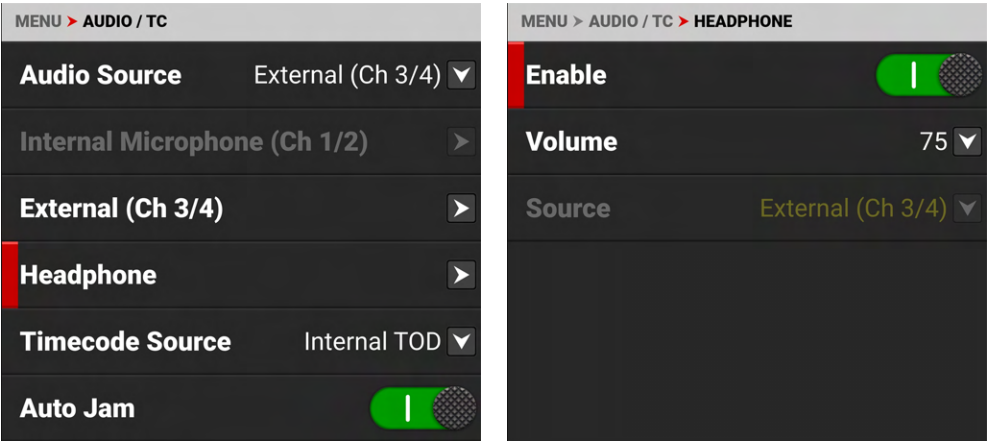

You can enable and disable the headphone audio jack by tapping the Enable toggle to the right (green) and to the left (red).




You can adjust the headphone volume from 0 to 100. The default is 75.

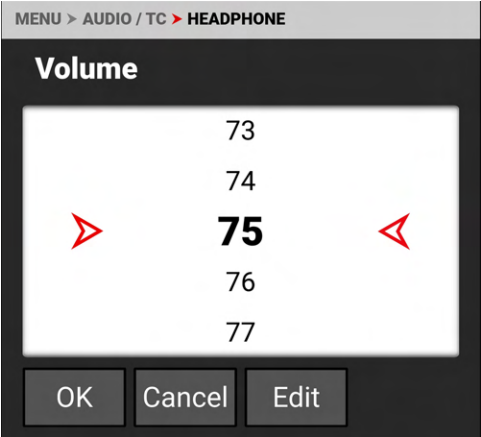

TIMECODE SOURCE

Use Timecode source to configure the Timecode source the camera applies to the recordings.

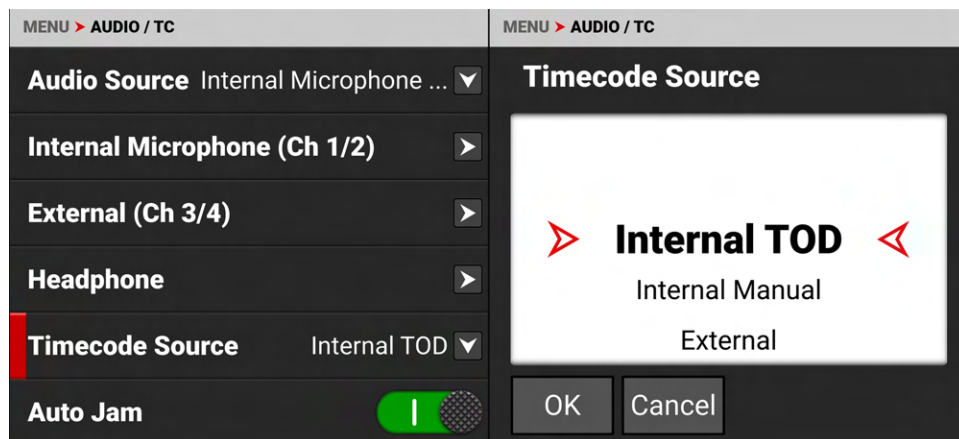

You can select the following Timecode sources:

- Internal Time of Day (TOD)
- Internal Manual
- External
- Precision Time Protocol (PTP)

INTERNAL TOD


Use Internal Time of Day (TOD) to JAM to the camera's internal Timecode generator. When using Internal TOD, a jam between the running timecode and a real time clock is required. The time at which this jam occurs will have an effect on the overall timecode drift over a 24-hour period due to the nature of non-drop-frame (NDF) timecode.

By enabling Auto-Jam, the camera automatically jams its timecode, ensuring repeatable drift across multiple cameras and days. When Auto Jam is disabled, you can manually pick the instant in which you want to jam timecode to the real time clock.


INTERNAL MANUAL

Use Internal Manual to JAM to the camera's internal Timecode generator and edit the Timecode starting number.

Select Manual Timecode OK to open the JAM and editing options:

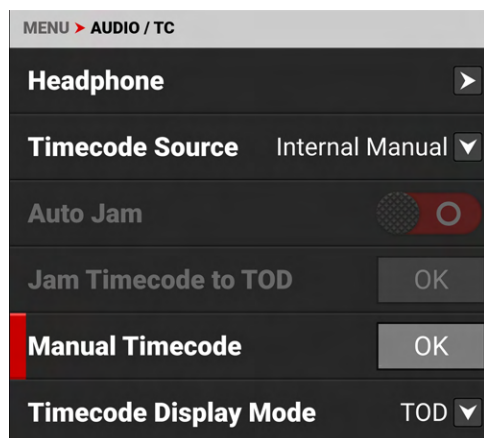

Select JAM to jam to the internal Timecode or select Manual Timecode to open the editing screen:

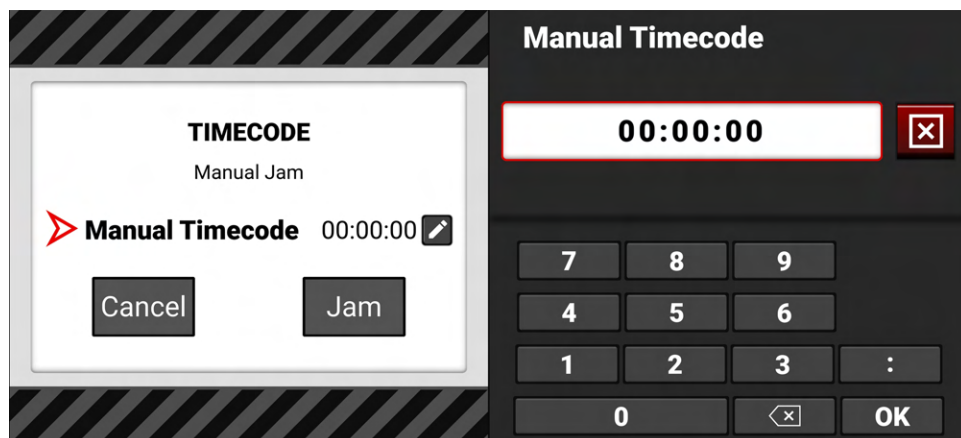

Enter the desired Timecode number and select OK. Select JAM to jam to the edited Timecode number.

EXTERNAL


Use External to connect an external Timecode generator to the 9-contact 0B Extension port (refer to [Camera Body](#) and [Extension Port](#) for more information).

PRECISION TIME PROTOCOL (PTP)

Precision Time Protocol (SMPTE 2059-1) is a network-based synchronization method which when configured using a USB-C to Ethernet adapter offers a level of precision that supports frame-accurate camera synchronization over IP. PTP in the KOMODO camera body only offers frame-level precision and therefore cannot be used for sensor scan synchronization. PTP Timecode can be sent over USB-C through an Ethernet adapter.

TIMECODE DISPLAY MODE

Use Timecode Display Mode to configure the Timecode display type that the camera applies to the recordings.

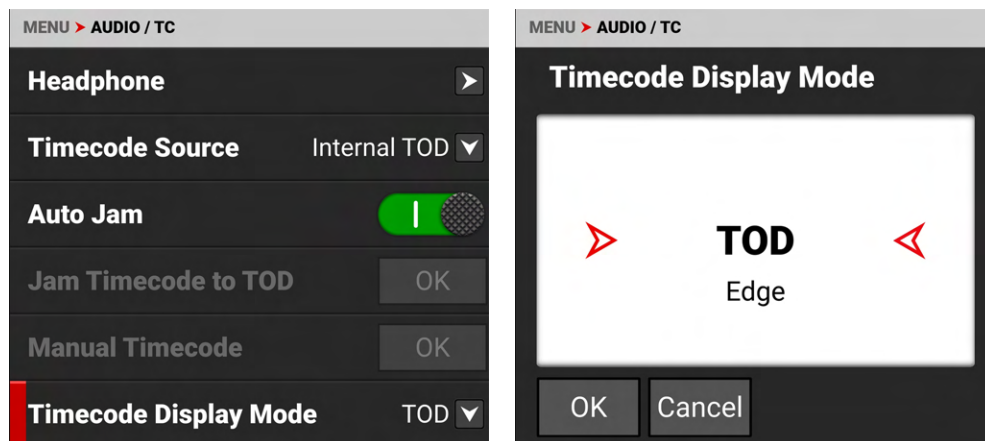

You can set the Timecode Display Mode as Time of Day (TOD) or Edgecode (Edge).

TOD DISPLAY MODE

Time of Day (TOD) display mode displays the Timecode as the time of day that the frame was recorded.

EDGE DISPLAY MODE


Edgecode (Edge) display mode displays the Timecode as the sequential recording time that has elapsed starting with the first frame. In the Media > Secure Format > Edgecode menu, you can enter a unique edgecode number as the starting number on the media.

Edgecode is a SMPTE Timecode track, which by default starts at 01:00:00 on the first frame of each media card. It is a sequential code that is continuous from frame to frame and also between clips. Edgecode is equivalent to RUN RECORD as used on broadcast cameras.

MONITORING MENU

The Monitoring menu contains the settings you use to configure your camera monitoring options.

From the **LCD Touchscreen** menu, select Monitoring:

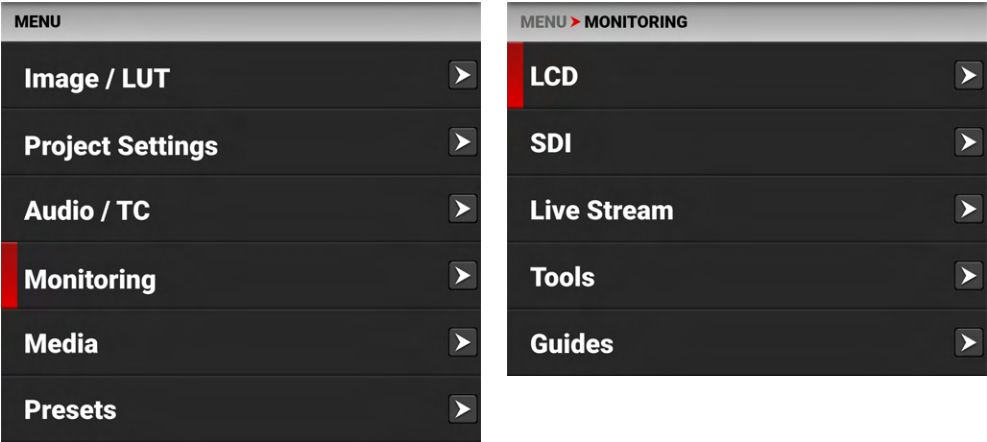


Use the Monitoring menu to configure the monitoring settings:

ITEMS	DETAILS
LCD	LCD Touchscreen settings
SDI	SDI port resolution, frequency, look, guides, tools, overlay, and overlay mode
Live Stream	Enable or disable Wi-Fi live streaming
Tools	Various monitoring tools including False Color, Peaking, and Zebra Modes
Guides	Frame guides and a center guide

LCD


Use LCD to configure the **LCD Touchscreen** settings.

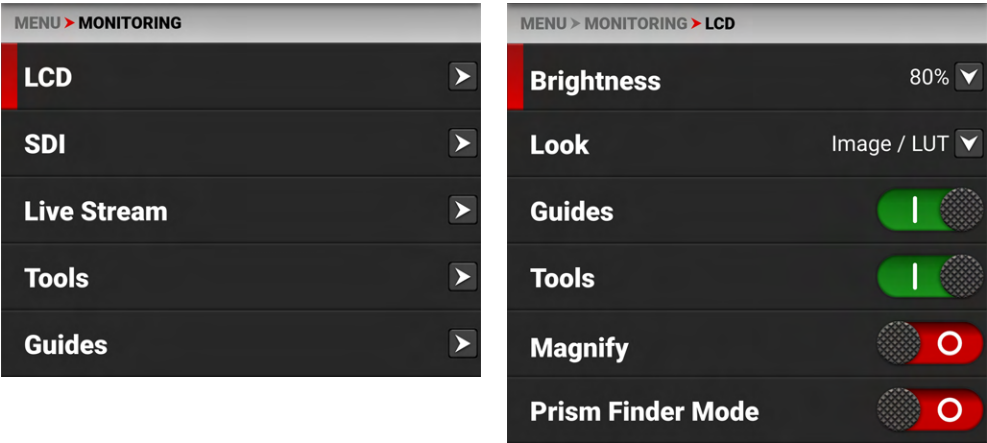

The LCD settings you can configure include:


ITEMS	DETAILS
Brightness	Adjust the LCD touchscreen brightness
Look	Select the Image / LUT, or RWG and Log3G10 image preview look
Guides	Enable or disable the camera guides
Tools	Enable or disable the camera tools
Magnify	Enable or disable LCD magnification
Prism Finder Mode	Enable or disable the prism finder mode (horizontally flip the LCD)

BRIGHTNESS

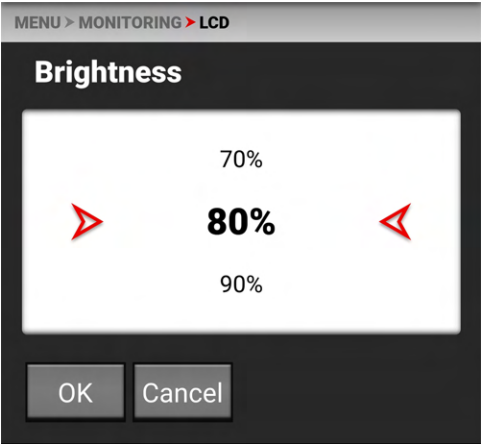

You can adjust the camera's top LCD brightness from 10% to 100%. The default is 80%

LOOK

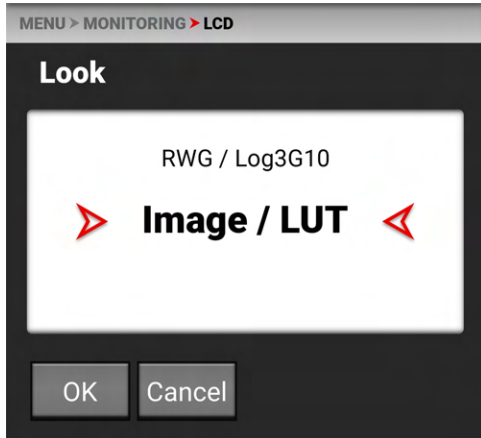

You can select the look of the image preview on the LCD. The selections include:

- REDWideGamutRGB / Log3G10
- Image / LUT (default).

GUIDES

Use the toggle to enable (default) or disable the camera guides.



TOOLS

Use the toggle to enable (default) or disable the camera tools.



 
MAGNIFY

Use the toggle to enable or disable (default) LCD magnification.




PRISM FINDER MODE

Use the toggle to enable or disable (default) the LCD flip view.



SDI

Use SDI to configure the SDI port settings.

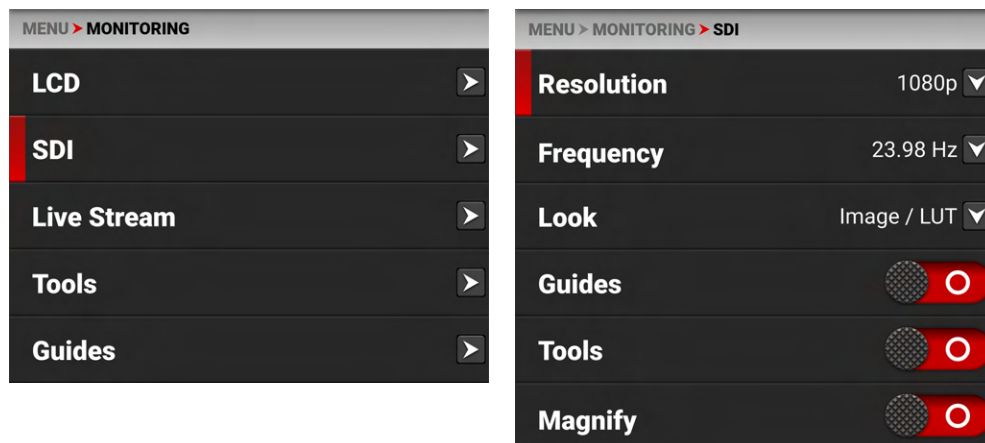

The SDI port settings you can configure include:

ITEMS	DETAILS
Resolution	Select the SDI port resolution
Frequency	Select the SDI port frequency
Look	Set the look of the playback between RWG / Log3G10 or Image / LUT
Guides	Enable or disable the monitor guides
Tools	Enable or disable the monitor tools
Magnify	Enable or disable monitor magnification
Overlay	Enable or disable the monitor overlay
Overlay Mode	Select the overlay type
Overlay Opacity	Select the opacity of the overlay

WARNING: Under certain circumstances, it is possible for an SDI connector to incur damage when connected to an accessory and powered without using shielded cables. RED recommends only using high quality, shielded BNC cables that are rated for 12G-SDI signals and only using shielded power cables for powering SDI accessories.

Make sure power is connected to the SDI accessory at all times before you connect the BNC to the camera. Ungrounded power from SDI accessories can damage the camera's SDI port. To avoid this possible damage, attach the power source to the accessory before attaching it to the BNC cable. When using RED Approved Third Party battery plates, unplug the BNC cable prior to hot swapping.

When possible, avoid using P-Tap (also known as D-Tap) cables to power accessories. To avoid damage when using P-Tap/D-Tap, it's imperative that the connect/disconnect sequence (below) is followed precisely.

BNC ATTACHMENT INSTRUCTIONS

When attaching SDI accessories:

1. Connect a power source to the SDI accessory; power on the SDI accessory.
2. Ensure a power source is connected to the camera. This ensures both are grounded prior to connecting the BNC. The camera's power state does not have an impact on SDI attachment sequence.
3. Connect the BNC cable to the accessory, then to the camera.

When detaching an accessory mounted to an SDI output, ensure that you remove the BNC connection to the camera before removing power to the SDI device:


1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Disconnect the power source from the SDI accessory.

When you need to swap out a battery on an accessory mounted to the camera's SDI port, you must:

1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Replace the battery on the SDI accessory.
4. Connect the BNC cable to the camera.
5. Power on the SDI accessory.

For more information, refer to [Preventing Damage to SDI Outputs](#).

RESOLUTION

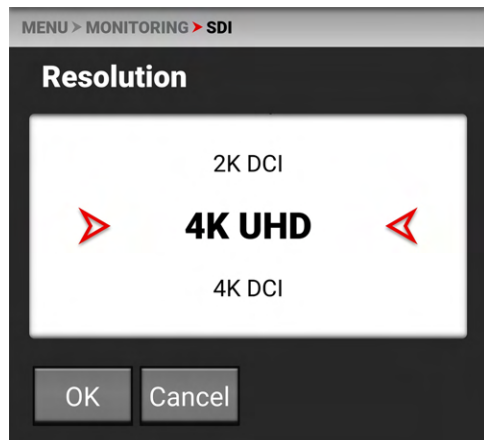

Use resolution to select one of the following SDI port resolution settings:


- 1080p (default)
- 2K DCI
- 4K UHD
- 4K DCI

The resolution selected here controls the SDI output resolution of the preview page.

SCALING PREVIEW

When monitoring in 1080p or 4K UHD while capturing in a 17:9 format, the entire 17:9 image will be down-scaled to the 16:9 aspect ratio of 1080p or 4K UHD. Small black bars will only appear on the top and bottom of the frame in the monitor path and not on the recorded image.


FREQUENCY

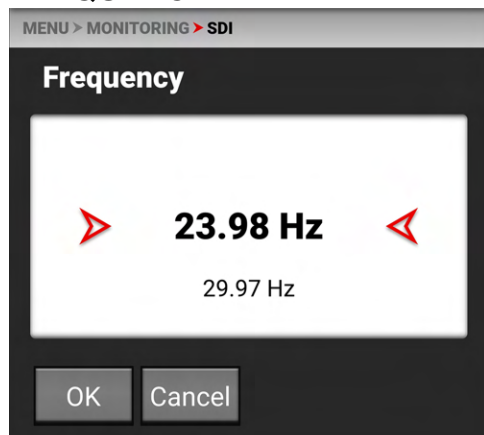

Use Frequency to select one of the following SDI port frequency settings:

- 23.98 Hz (default)
- 29.97 Hz
- 59.94 Hz

LOOK

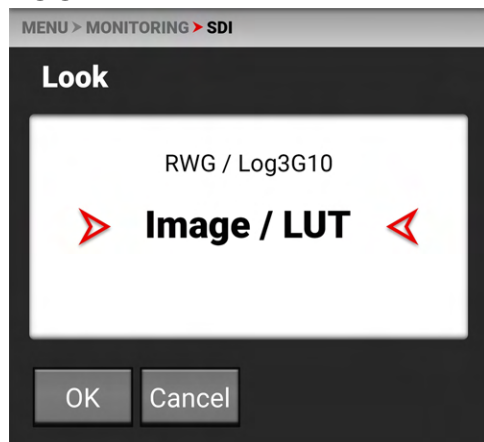


You can select the look of the image preview signal sent to the SDI port.

The selections include:

- REDWideGamutRGB / Log3G10
- Image / LUT (default)


GUIDES

 Use Guides to enable or disable (default) the viewing of guides. Tap the switch to toggle between enabled and disabled.




TOOLS

 Use Tools to enable or disable (default) the viewing of tools. Tap the switch to toggle between enabled and disabled.




MAGNIFY

 Use Magnify to enable or disable (default) monitor magnification. Tap the switch to toggle between enabled and disabled.




OVERLAY

 Use Overlay to enable (default) or disable the viewing of the overlay. Tap the switch to toggle between enabled and disabled.




OVERLAY MODE

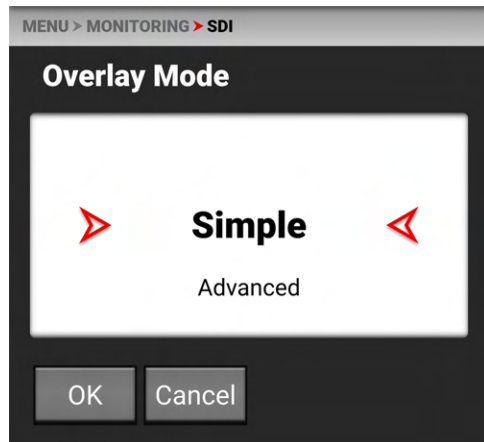

Use Overlay Mode to select one of the following SDI port overlay modes:

- Simple - Minimal image information is displayed (refer to **Simple Mode**)
- Basic - Simple plus time sensitive media and battery information (refer to **Basic Mode**)
- Standard - Industry standard image and camera details are displayed (refer to **Standard Mode**)
- Advanced - Standard plus exposure and audio meters (refer to **Advanced Mode**)

OVERLAY OPACITY

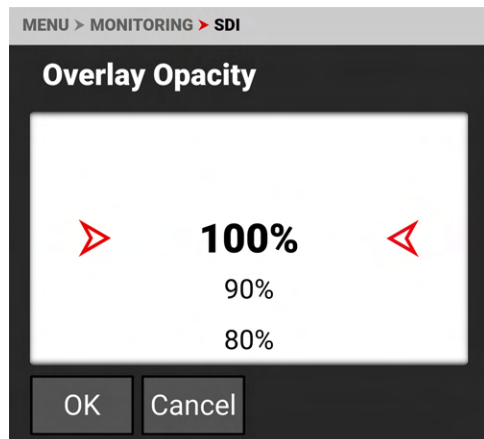


Use Overlay Opacity to select the percentage of opacity you want the overlay to display on the SDI output.

The opacity values the camera can display are between 100% and 0%.

SIMPLE MODE



Simple mode displays the clip name and the current Timecode. When the camera is recording, the Timecode turns red, and a red dot appears in the top right corner.

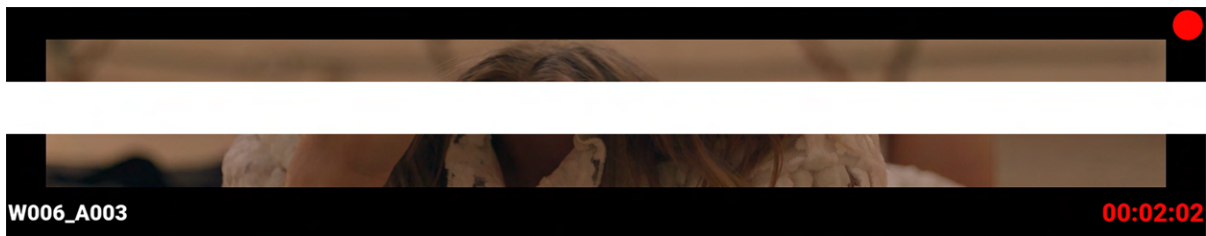


BASIC MODE



Basic mode displays the following:

- Clip Name
- CFast Time Remaining (at the current settings)
- Timecode
- Battery percentage remaining (at the current settings)
- DC-IN

When the camera is recording, the Timecode turns red, and a red dot appears in the top right corner.

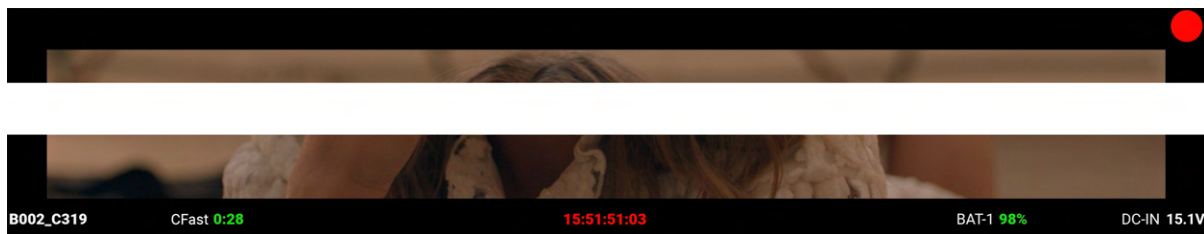


STANDARD MODE



Standard mode displays the following:

TOP	BOTTOM
• Camera ID • Recording Frame Rate • f-Stop • Focus Length • Shutter Angle • ISO • White Balance • ND	• Clip Name • CFast Time Remaining • Format, File Type, Rate • Battery • DC-IN • Timecode

Lens items such as Focal Length and f-Stop will adaptively display depending on whether the lens data is available. When the camera is recording, the Timecode turns red, and a red dot appears in the top right corner.

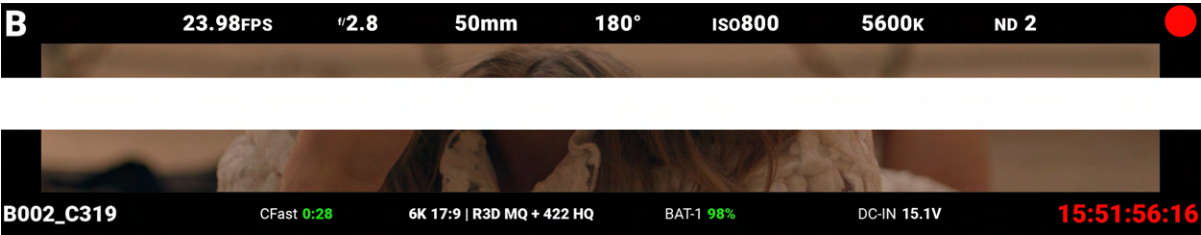

ADVANCED MODE



Advanced mode displays the following:

TOP	BOTTOM	
• Camera Number • Recording Frame Rate • f-Stop • Focus Length • Shutter Angle • ISO • White Balance • ND	• Clip Name • Exposure Meter • Histogram • CFast Time Remaining • Temperature / Exposure Calibration	• Timecode, Genlock, Synch • DC-In, Battery • Format, File Type, Rate • VU Meter • Timecode

When the camera is recording, the Timecode turns red, and a red dot appears in the top right corner.



SDI PORT DESCRIPTION

The Serial Digital Interface (SDI) port allows the camera to deliver 12 Gbps of image bandwidth with greater resolution, frame rates, and color fidelity. This single BNC cable solution makes it ideal for the 4Kp60 format. The output signal bit depth is 10-bit 4:2:2.

WARNING: Under certain circumstances, it is possible for an SDI connector to incur damage when connected to an accessory and powered without using shielded cables. RED recommends only using high quality, shielded BNC cables that are rated for 12G-SDI signals and only using shielded power cables for powering SDI accessories.

Make sure power is connected to the SDI accessory at all times before you connect the BNC to the camera. Ungrounded power from SDI accessories can damage the camera's SDI port. To avoid this possible damage, attach the power source to the accessory before attaching it to the BNC cable. When using RED Approved Third Party battery plates, unplug the BNC cable prior to hot swapping.

When possible, avoid using P-Tap (also known as D-Tap) cables to power accessories. To avoid damage when using P-Tap/D-Tap, it's imperative that the connect/disconnect sequence (below) is followed precisely.

BNC ATTACHMENT INSTRUCTIONS

When attaching SDI accessories:

1. Connect a power source to the SDI accessory; power on the SDI accessory.
2. Ensure a power source is connected to the camera. This ensures both are grounded prior to connecting the BNC. The camera's power state does not have an impact on SDI attachment sequence.
3. Connect the BNC cable to the accessory, then to the camera.

When detaching an accessory mounted to an SDI output, ensure that you remove the BNC connection to the camera before removing power to the SDI device:

1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Disconnect the power source from the SDI accessory.

When you need to swap out a battery on an accessory mounted to the camera's SDI port, you must:

1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Replace the battery on the SDI accessory.
4. Connect the BNC cable to the camera.
5. Power on the SDI accessory.

For more information, refer to [Preventing Damage to SDI Outputs](#).




For more information about the SDI standard, refer to the SMPTE (Society of Motion Picture and Television Engineers) standard SMPTE ST-2082.

LIVE STREAM


Use Live Stream to enable or disable live streaming over Wi-Fi. The Live Stream image is controlled by the LCD monitoring tools (the Guides are not displayed). Refer to [Monitoring Tools](#) for more information.

NOTE: When live streaming, select 5 GHz as the Wi-Fi band (refer to [Ad-Hoc](#)).

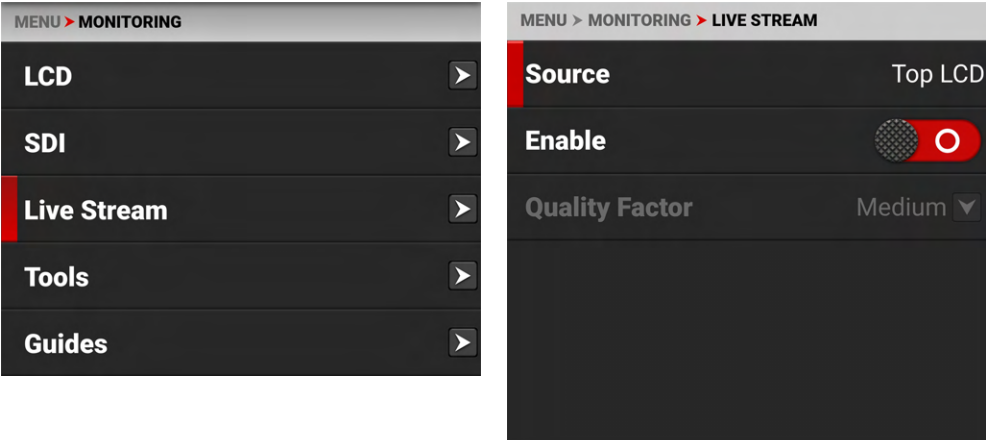

SOURCE

Source displays the source of the Live Stream image. Live stream displays the looks, tools, and magnification enabled for that source.

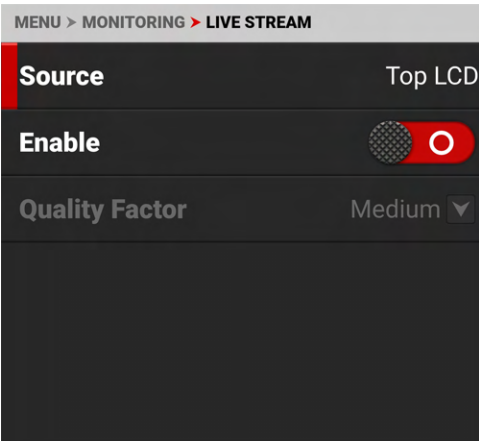


ENABLE

Use Enable to enable or disable (default) the Live Stream feature.




QUALITY FACTOR

Use Quality Factor, when Live Streaming is enabled, to control the video quality the camera's output stream. Lower quality can stream over a longer distance.

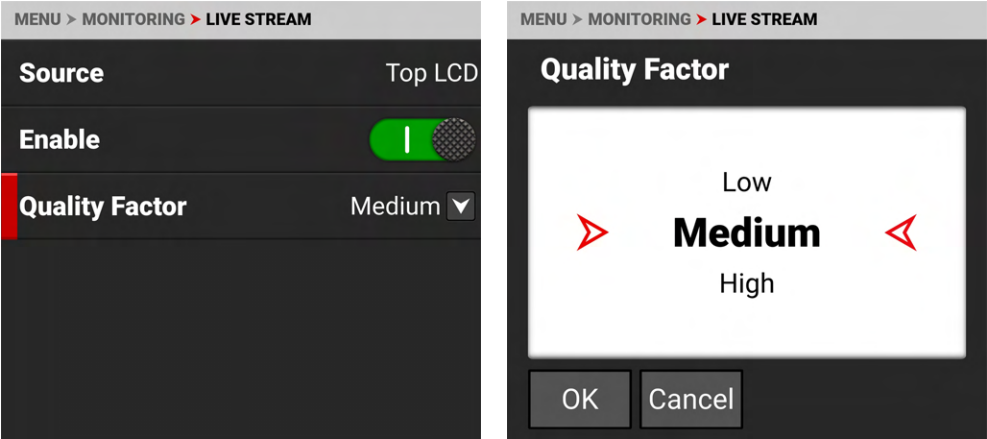

TOOLS

The Tools menu provides access to the monitoring tools you use to monitor image exposure and focus.

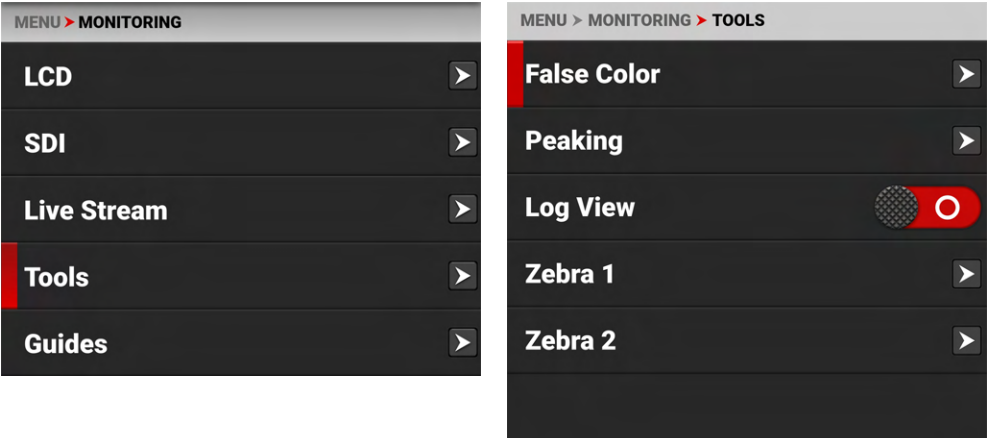


The monitoring tools that you can use include:

ITEMS	DETAILS
False Color	Enable and configure the False Color Exposure Mode, False Color Video Mode, and the False Color Video Mode
Peaking	Enable and configure focus indicating modes
Log View	Enable or disable (default) Log View
Zebra 1	Enable and configure Zebra 1 settings
Zebra 2	Enable and configure Zebra 2 settings

FALSE COLOR

Use False Color to configure the False Color tool settings.

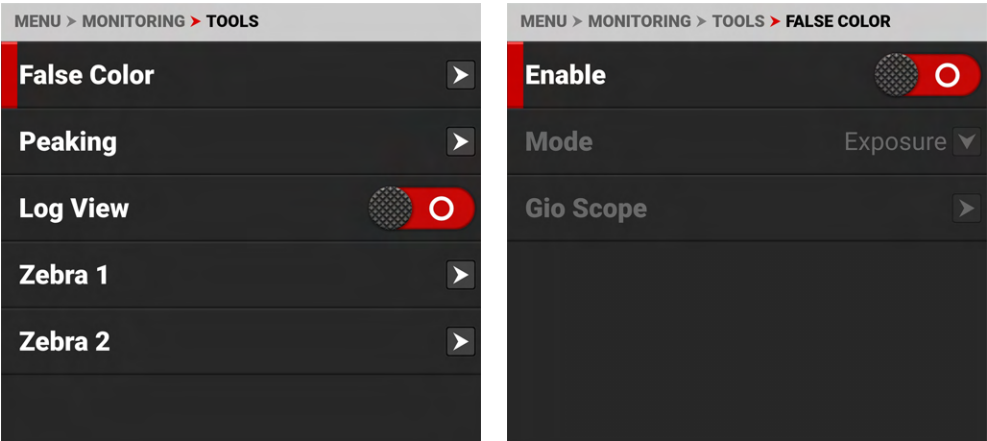

The False Color tool settings you can configure include:


ITEMS	DETAILS
Enable	Enable or disable the False Color tool modes
False Color Mode	Select the False Color tool mode
False Color Gio Scope Mode	Identify 16+ increments within the dynamic range of the RAW sensor image.

ENABLE

Use Enable to enable or disable the False Color tool.



FALSE COLOR MODE

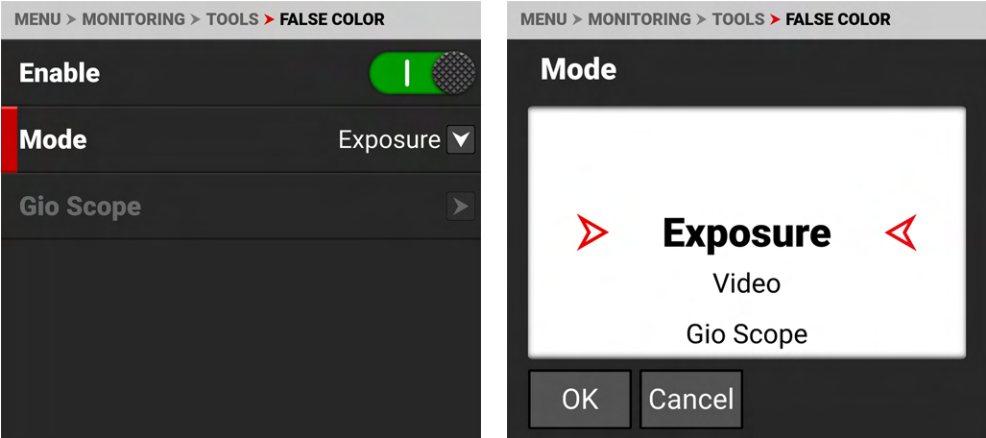

False Color Modes include:

ITEMS	DETAILS
False Color Exposure Mode	Use false colors to determine an optimal balance between overexposure and underexposure.
False Color Video Mode	Access scene exposure in varying light without relying on the LCD image brightness.
False Color Gio Scope Mode	Identify 16+ increments within the dynamic range of the RAW sensor image.

NOTE: False Color modes display on video recorded through SDI to an external recorder when the Tools are enabled in the Monitor menu. When recording through SDI, use False Color modes only to help determine scene exposure settings, and then disable the mode before recording.

FALSE COLOR EXPOSURE MODE

When this monitoring **False Color** mode is activated, most of the tonal range will appear in monochrome. The Exposure Mode is able to indicate exactly where middle gray is falling, and indicate which highlights or shadows are problematic in the logarithmic representation of the image. Exposure mode is judging the exposure after ISO and White Balance adjustments are made, and before any sort of LUT or transform is applied to the Log3G10 image.

RED FALSE COLOR OVERLAY

When the False Color Mode overlays the color red within the subject of interest, or anywhere except bright lights and direct reflections, then the image is likely overexposed. When the False Color Mode does not overlay the color red on the image, then the exposure is likely okay for the selected ISO.

PURPLE FALSE COLOR OVERLAY

When the False Color Mode overlays the color purple on key image detail that is not located in the shadows, then the scene is likely underexposed. When the False Color Mode does not overlay the color purple on the image, then the exposure is likely okay for the selected ISO.

For more information, refer to **Exposure** in the How To section.

FALSE COLOR VIDEO MODE

NOTE: For best results, Video Mode should be viewed at or above ISO 800.

Video Mode displays a color overlay that indicates the video level of the RGB monitor path (calibrated to the SMPTE test signal).

The colors used are based on the RGB levels of the video out signal (that is, the “cooked” look, and not RAW data). The camera's RGB settings can change the appearance of the Video Mode colors.

The Video Mode colors represent the following IRE values (at all other values, the desaturated image represents the luminance value of the ISO adjusted image):

- Purple: IRE 0–4
- Blue: IRE 5
- Teal: IRE 10–12
- Green: IRE 41–48
- Pink: IRE 61–70
- Straw: IRE 92–93
- Yellow: IRE 94–95
- Orange: IRE 96–98
- Red: IRE 99–100

For more information, refer to **Exposure** in the How To section.



Green is where you will want 18% gray, Pink is typically the brightness of Caucasian skin tones, Straw, Yellow, and Orange are strong highlights and increasingly closer to white, Teal is deep shadows and Blue is on the verge of becoming untextured black. In general, Pink and Green are most helpful when calibrating based on a known reference, whereas the other colors indicate the extremes of a tonal range.

A potential disadvantage of False Color Video mode is that all the false colors can distract from the underlying preview. Many prefer to use this mode only during initial set-up, and then they use **False Color Exposure Mode** under a wider range of scenarios.

IN PRACTICE

In **False Color Exposure Mode**, use the purple and red indicators to adjust your lighting or lens aperture. Use this strategy to achieve an optimal balance between clipping from overexposure and image noise from underexposure. With most scenes, you can often have a surprising range of exposure latitude before excessive red or purple indicators begin to appear.

If necessary, use False Color Video mode or **Zebra Modes** to fine-tune how the scene will appear over SDI, or use it to adjust your suggested look when sending footage for post-production.

The Zebra and Video modes are also an objective way to assess the scene exposure under varying ambient light without relying on the LCD image to evaluate brightness.


FALSE COLOR GIO SCOPE MODE

Gio Scope mode displays a color overlay on top of a desaturated RAW sensor image, identifying 16 increments within the dynamic range of the sensor. The RGB settings (color temperature, ISO, LUT, etc.) are not used by this mode.

Each number (1 to 16) indicates a different increment of dynamic range. Number 16 represents the top increment, and is broken up into 1/8th sub-increments to show highlight roll-off. Each 1/8th increment is represented by a different shade of red, ranging from light red (less light) to dark red (most light, clipping).

PEAKING

The Peaking tools display contrast, outlines, or colors to assist with focusing.

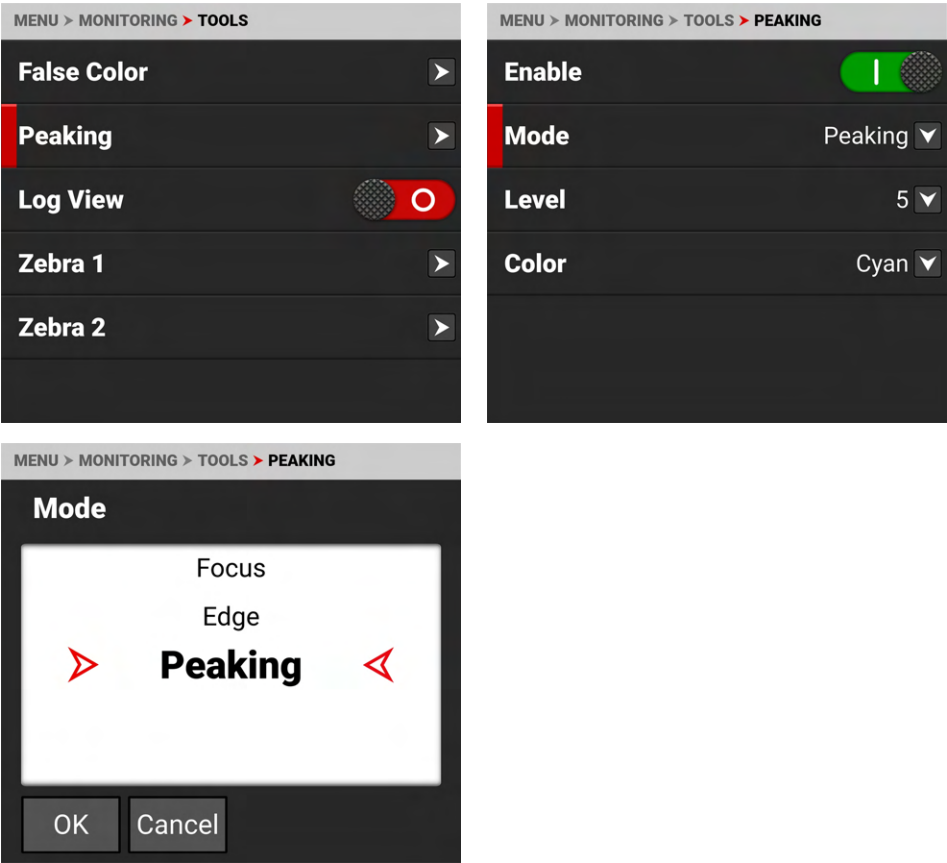

The Peaking modes you can use include:

ITEMS	DETAILS
Focus	Use enhanced contrast and edges for focusing
Edge	Show outlines of focused objects
Peaking	Select a colored overlay to indicate objects in focus

FOCUS PEAKING MODE

Focus Peaking mode emphasizes contrast and edges in the image without changing the brightness or the image content. This mode makes it easier to judge focus. Adjust the zoom and focus to easily see which objects are coming into focus.

EDGE PEAKING MODE

When you enable Edge Peaking mode, the display shows the edges or outlines of objects that are in focus.

PEAKING PEAKING MODE

The Peaking Peaking mode displays a color overlay on top of in-focus edges. Select a Level of 1 to 10 (weak to strong) for the intensity of the color overlay. The RGB settings can change the appearance of the selected color overlay.

The Peaking Peaking mode indicator is applied after the image is scaled to a monitor, making the indicators appear differently on various monitors.


For more information about Peaking, refer to **Focus** in the How To section.

LOG VIEW

Use Log View to display camera images in REDWideGamutRGB and Log3G10 for the ISO, Exposure Adjust, Color Temperature, and Tint settings. This allows you to quickly see ungraded footage that remains unaffected by creative decisions such as the choice of 3D LUT or CDL.

Log View is passed through the SDI port when recording to an external recorder. You can view the Log image in playback on the LCD and on the monitor. However, Log View is not recorded to the file recorded on the media card.

NOTE: Log View is only enabled on R3D files and not on ProRes files.

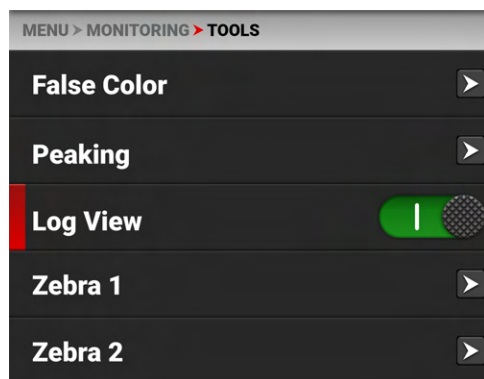


Use the toggle to switch from Enabled to Disabled:



ZEBRA 1

Use Zebra 1 to display one set of diagonal stripes to indicate highlight exposure levels. For more information, refer to [Zebra Modes](#).

Zebra 1 is disabled by default.

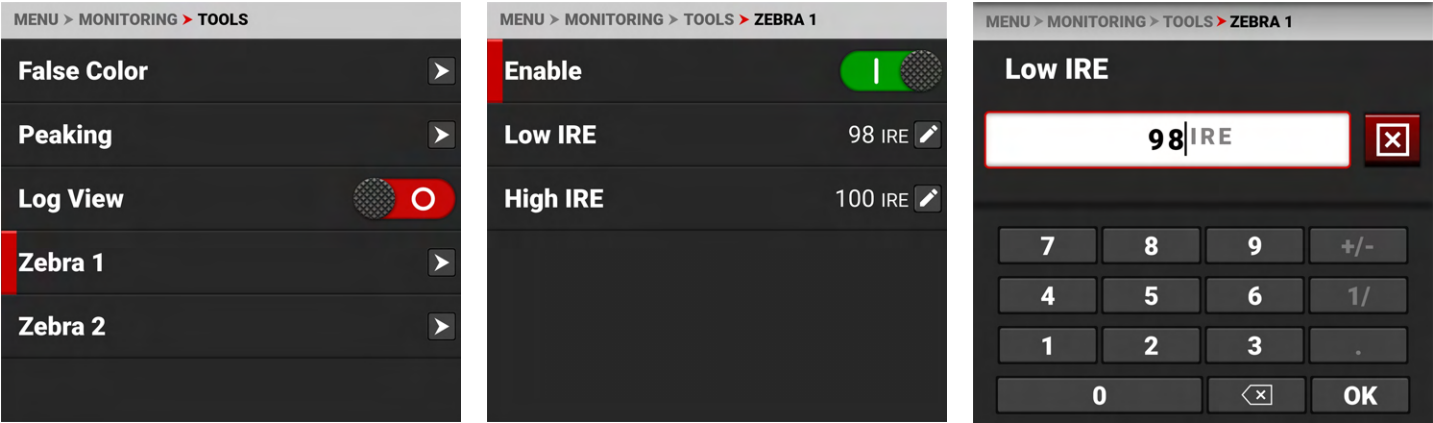

The Zebra 1 mode includes:

ITEMS	DETAILS
Enable	Enables red zebra stripes to indicate highlight exposure
Low IRE	Sets the lower threshold for the indicator
High IRE	Sets the higher threshold for the indicator

ENABLE

The Enable toggle switch allows you to enable or disable the Zebra 1 stripes.


LOW IRE

Provides a keypad that allows you to set the low threshold for the Zebra stripe. The default setting is 98 IRE.

HIGH IRE

Provides a keypad that allows you to set the high threshold for the Zebra stripe. The default setting is 100 IRE.

NORMAL VIEW

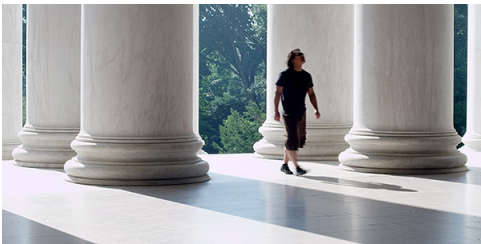


ZEBRA 1 VIEW



ZEBRA 2

Use Zebra 2 to display a second set of diagonal stripes to indicate mid-tone and shadow levels. For more information, refer to [Zebra Modes](#).

Zebra 2 is disabled by default.

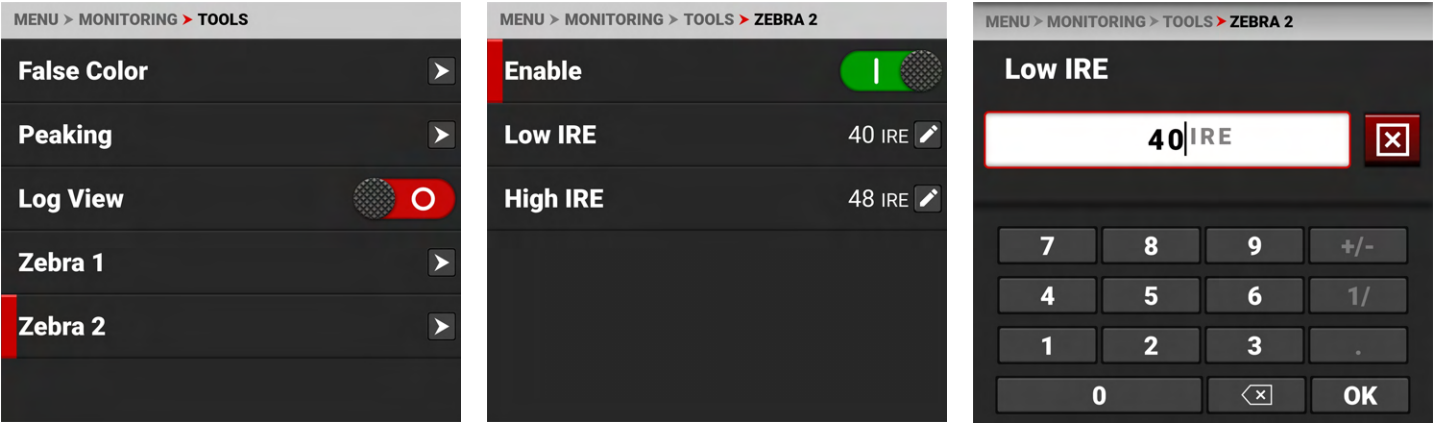

The Zebra 2 mode includes:

ITEMS	DETAILS
Enable	Enables green zebra stripes to indicate mid-tone and shadow exposure
Low IRE	Sets the lower threshold for the indicator
High IRE	Sets the higher threshold for the indicator

ENABLE

The Enable toggle switch allows you to enable or disable the Zebra 2 stripes.

LOW IRE

Provides a keypad that allows you to set the low threshold for the Zebra stripe. The default setting is 40 IRE.


HIGH IRE

Provides a keypad that allows you to set the high threshold for the Zebra stripe. The default setting is 48 IRE.

NORMAL VIEW


ZEBRA 1 VIEW

ZEBRA 2 VIEW

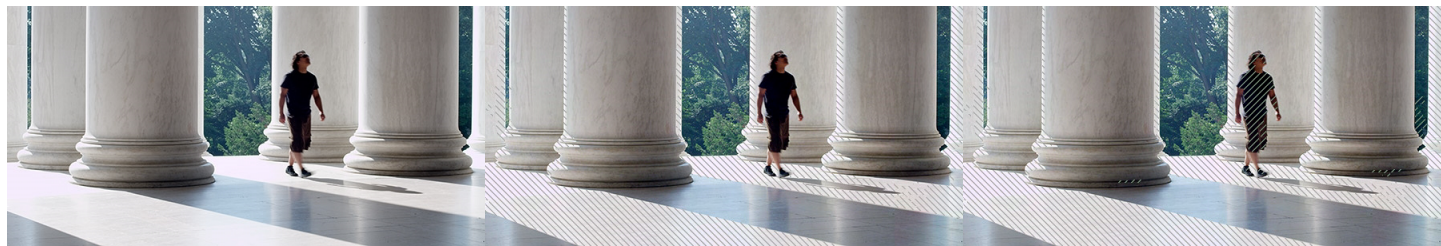

GUIDES

Use Guides to enable and configure the camera's monitoring guides.

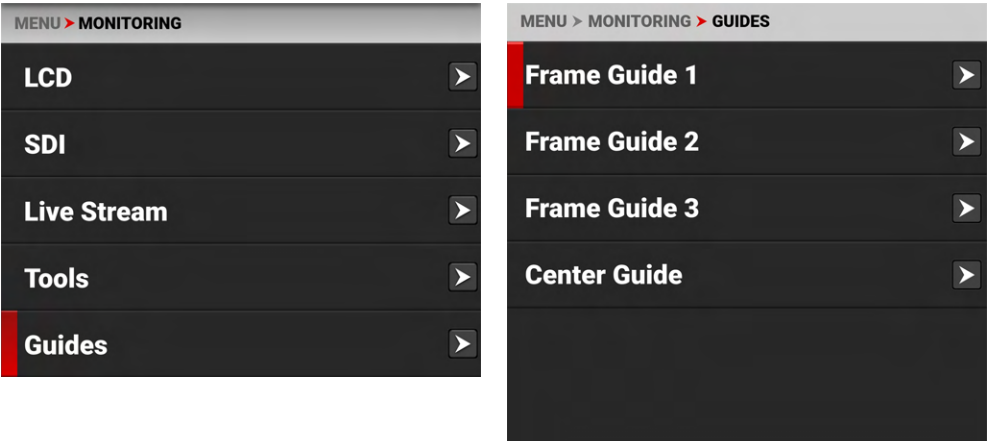


The monitoring Guides that you can use include:

ITEMS	DETAILS
Frame Guides	Guides you can configure to aid in framing a shot
Center Guide	A center cross hair or dot you can use to center your shot

FRAME GUIDES

Use Frame Guides to frame the scene using various shapes and sizes. You can configure up to 3 Frame Guides to display on your monitor.

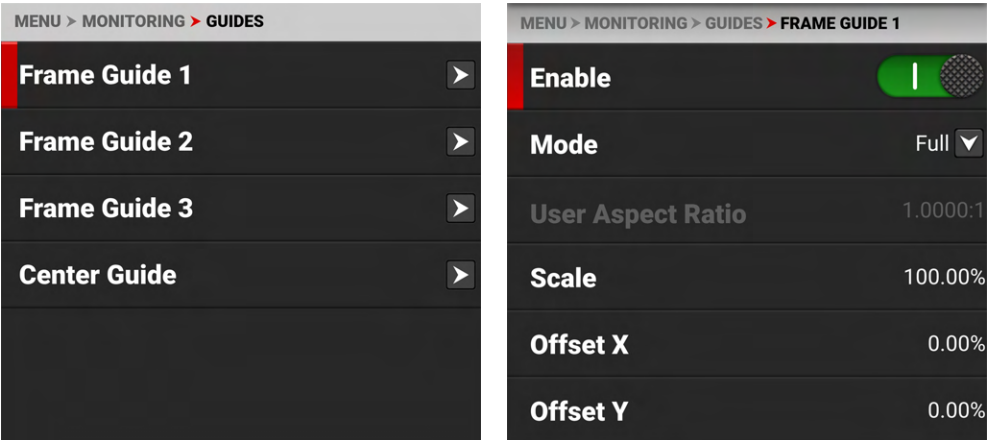


Configure the Frame Guides using the following:

ITEMS	DETAILS
Enable	Enables the Frame Guide
Mode	Select aspect ratios, User, and Absolute modes
User Aspect Ratio	Enabled by selecting User mode
Scale	Percentage of the image the Frame Guide occupies
Offset X, Y	Percentage of horizontal and vertical offset
Absolute X, Y, W, H	Absolute mode - set the exact number of size and offset pixels

ITEMS	DETAILS
Line Style	Select the Frame Guide line type - solid, dashed or bracket
Line Color	Select the Frame Guide line color
Line Opacity	Select the Frame Guide line opacity percentage

MODE


Use Mode to select the Frame Guide mode you want to use to configure the frame guide.

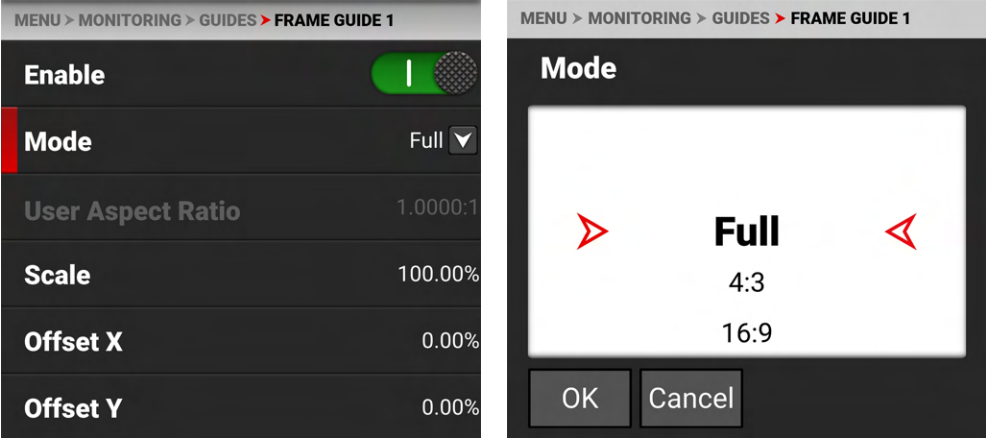

The modes you can select include aspect ratios from Full to 2.4:1, User, and Absolute. The User and Absolute modes enable settings that are specific to those modes.

USER ASPECT RATIO


This item is enabled when the User mode is selected.

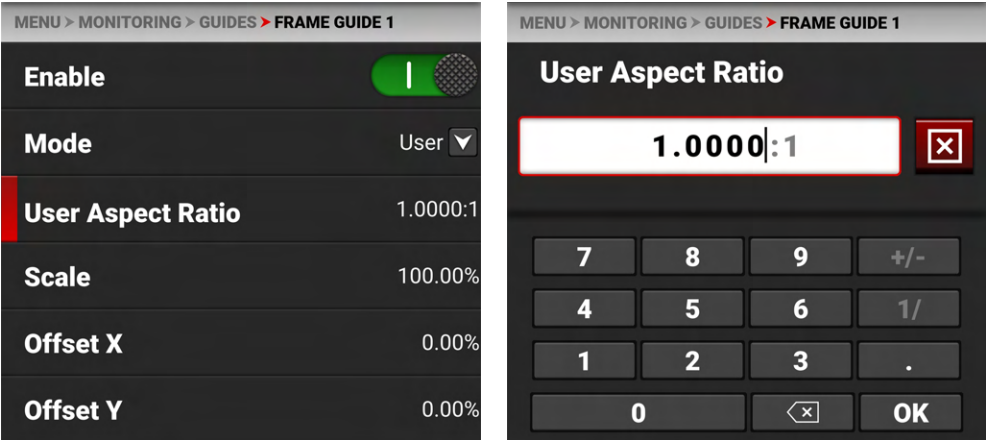

Use the keypad to enter your desired aspect ratio.

SCALE


Use scale to configure the percentage of the image area that the Frame Guide will frame.

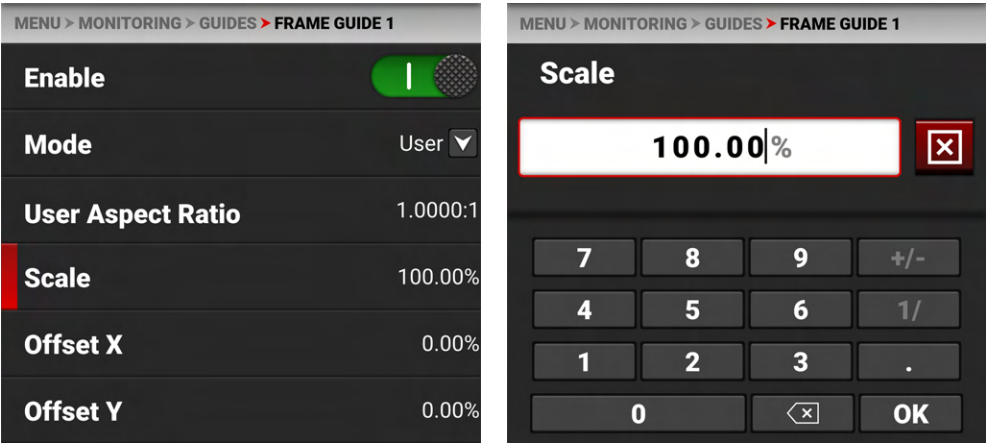

Use the keypad to enter the percentage of the image the Frame Guide contains.

OFFSET X, Y


Use offset to configure the X and Y offset of the Frame Guide.

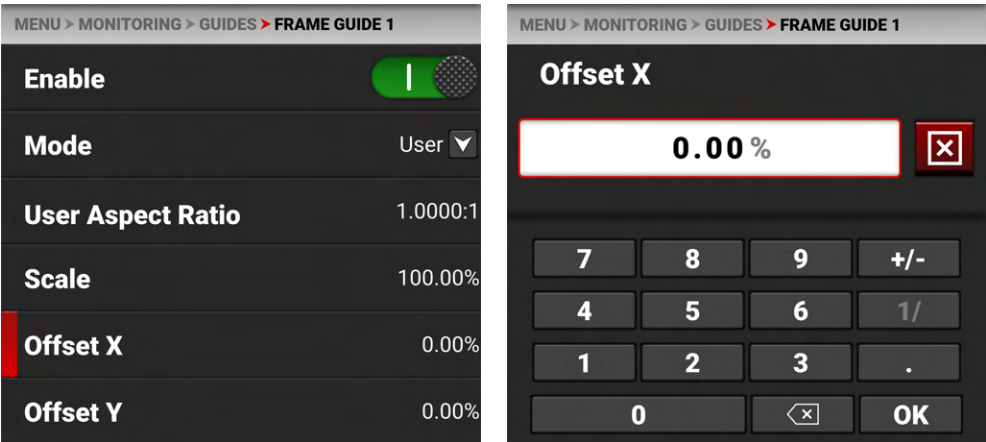

Use the keypad to enter the percentage of offset from center you want to apply to the Frame Guide.

ABSOLUTE X, Y, W, H


Use the Absolute settings to configure the absolute dimensions and position of the Frame Guide.

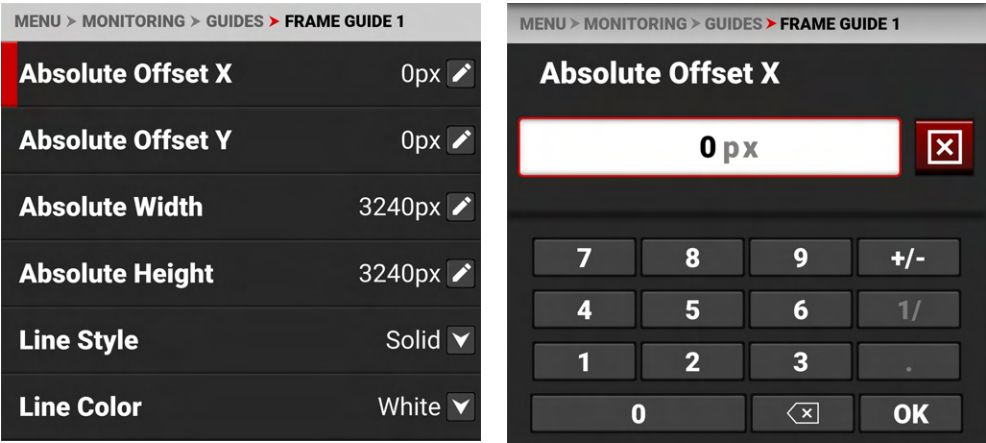

Use the keypad to enter the number of pixels for X/Y offset and for the width and height of the Frame Guide. The Absolute items are only enabled when you select Absolute **Mode**.

LINE STYLE


Use Line Style to select the type of line the Frame Guide uses.

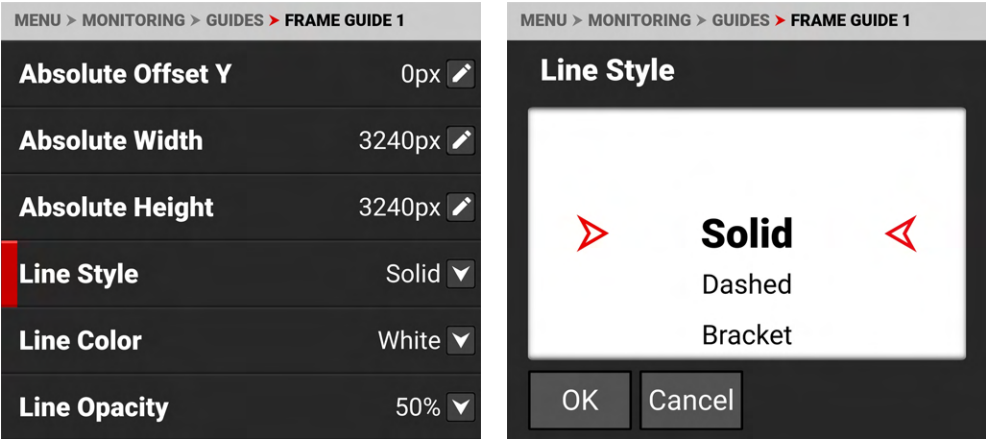

Select Solid (default), Dashed, or Bracket for the Frame Guide line style.

LINE COLOR

Use Line Color to select the color of the Frame Guide line.

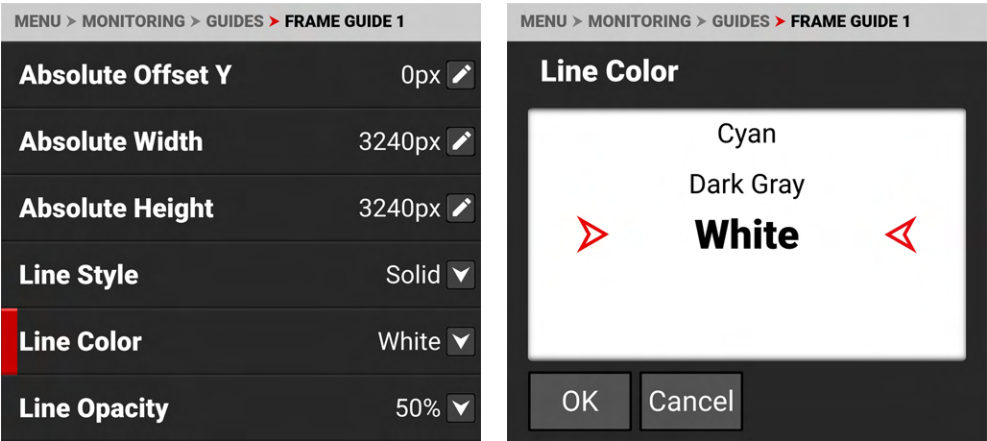


Use Line Color to select one of the following colors for the Frame Guide line:

- Black
- Red
- Blue
- Green
- Yellow
- Magenta
- Cyan
- Dark Gray
- White (default)

LINE OPACITY

Use Line Opacity to select how transparent the Frame Guide line appears.

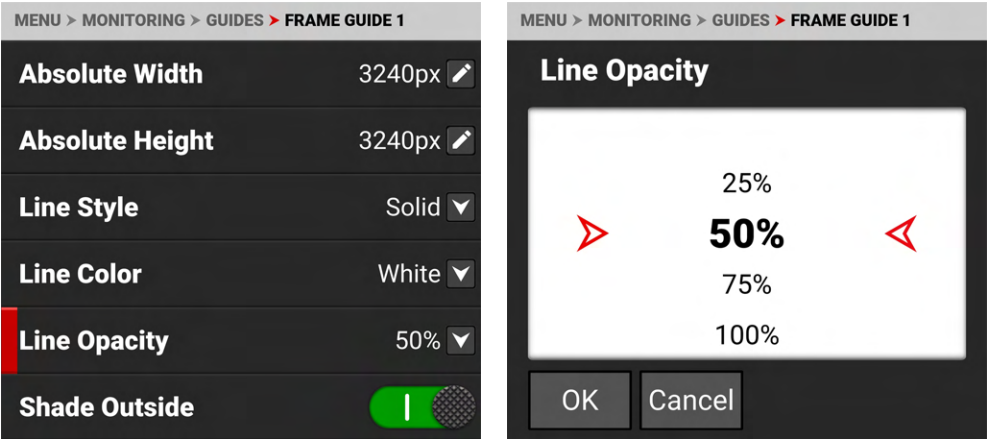


Use Line Opacity to select the percentage of opacity for the Frame Guide line:

- 25%
- 50% (default)
- 75%
- 100%

CENTER GUIDE

Use Center Guide to enable and configure the Center Guide.

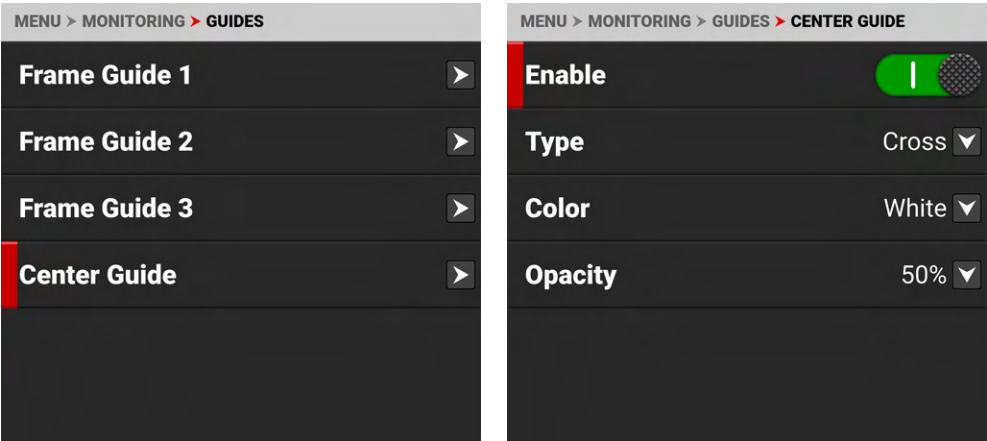


Configure the Center Guide by using the following:

ITEMS	DETAILS
Enable	Enables the Center Guide
Type	Select Center Guide type - dot or cross
Color	Select a color for the Center Guide
Opacity	Percentage of opacity of the guide color

TYPE


Use Type to select the type of Center Guide to display.

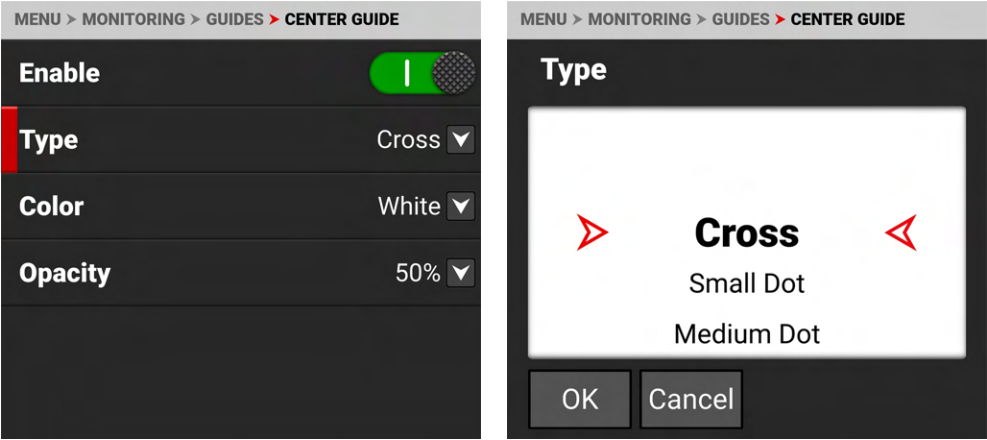

Use Type to select a center dot or cross (default) for the Center Guide.

COLOR

Use Color to select the color used by the Center Guide.

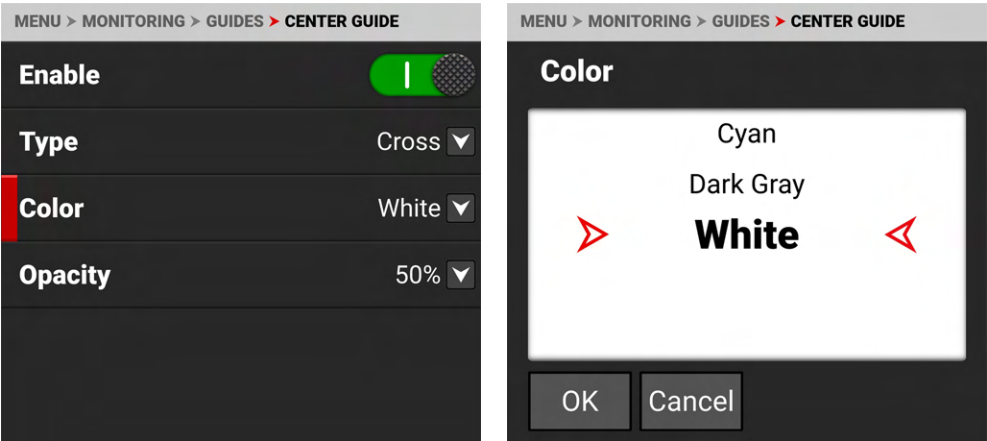


Use Color to select one of the following colors for the Center Guide:

- Black
- Green
- Cyan
- Red
- Yellow
- Dark Gray
- Blue
- Magenta
- White (default)

OPACITY

Use Opacity to select how transparent the Center Guide appears.

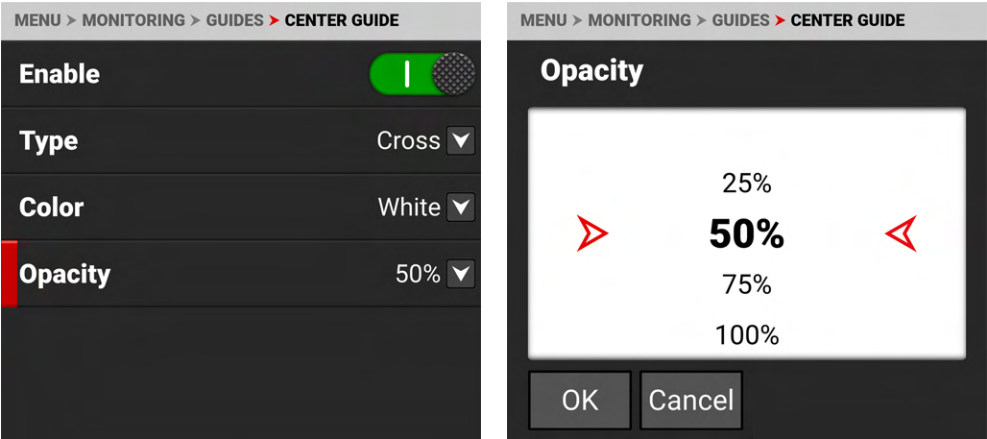


Use Opacity to select the percentage of opacity for the Center Guide:

- 25%
- 50% (default)
- 75%
- 100%

MEDIA MENU

The Media menu contains the settings you use to configure your media.

From the Onboard LCD touchscreen menu, tap Media:

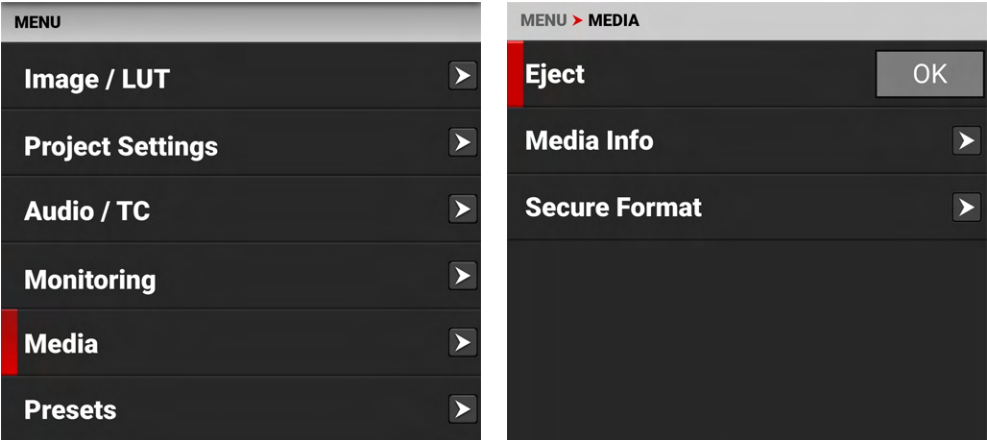

Use the Media menu to configure the camera's storage media settings and to view the media information:

ITEMS	DETAILS
Eject	Eject the media card
Media Info	View the media card information
Secure Format	Performs a secure format of the media card

EJECT

Use Eject to safely unmount the media card electronically from the camera before removing it physically.

WARNING: The media can get extremely hot. Use caution when removing media.

WARNING: Do not attach a label to the media card. The heat generated by the media can weaken the label's adhesive, causing the label to detach inside of the camera. Labels can also diminish heat dissipation and cause excessive wear to the internal components. Removing a label from a media card can possibly deform the card body.


Access Eject from the **LCD Touchscreen** Media menu:



For more information, refer to **Media Management**.

MEDIA INFO

Use Media Info to display the media card information.
Access Media Info from the LCD Touchscreen Media menu:

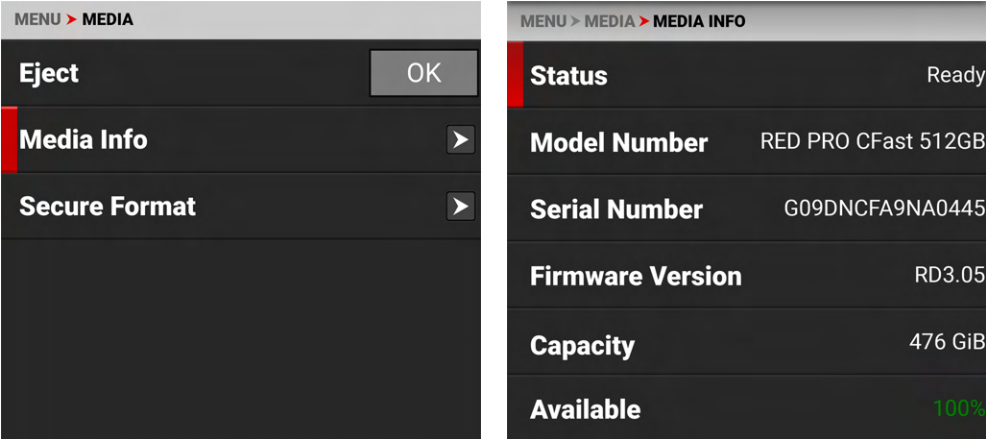


Media Info displays the following:

SETTING	DETAILS
Status	Displays the media card status
Model Number	Displays the media card model number
Serial Number	Displays the media card serial number
Firmware Version	Displays the media card firmware version
Capacity	Displays the media card total capacity
Available	Displays the media card's remaining storage
Time Remaining	Displays the recording time remaining on the media card

SECURE FORMAT

Use Secure Format to format the media card down to the file system level.
A secure format allows you to rebuild the card file system.
WARNING: Secure Format permanently deletes all information from the media card. Data cannot be recovered after a Secure Format.

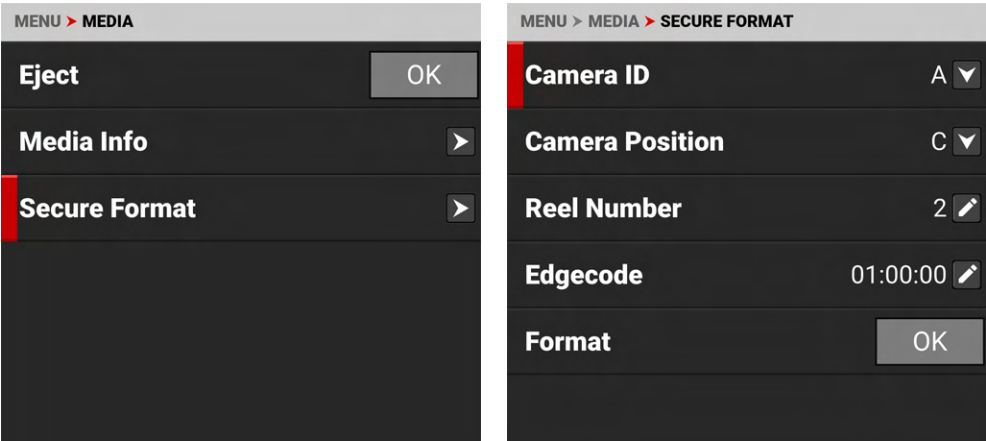


Use the Secure Format menu to update the following information:

SETTING	DETAILS
Camera ID	Select the camera ID (default is A)
Camera Position	Select the camera position (default is C)
Reel Number	Select the reel number (default is 1)
Edgecode	Enter the time number (default is 01:00:00)
Format	Starts the Secure formatting process

For more information, refer to [Secure Format](#).

CAMERA ID


Use Camera ID to assign a camera ID letter to the media.

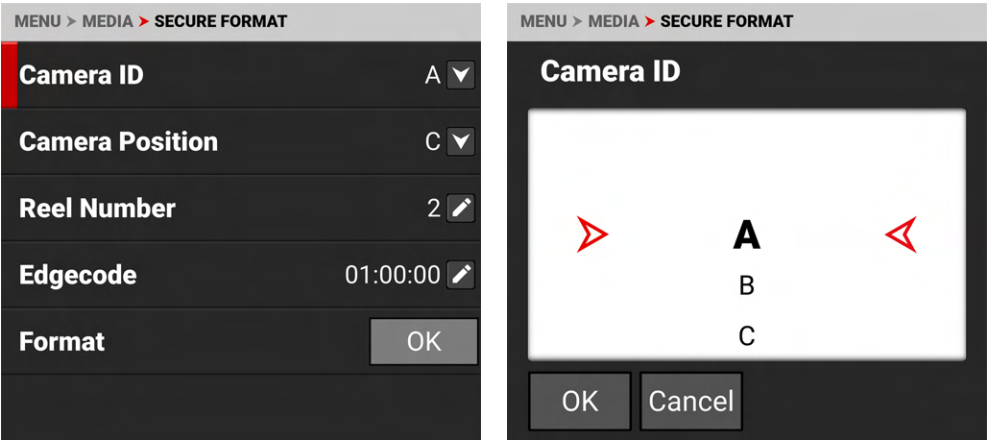

The Camera ID letters you can assign range from A-Z. For more information, refer to [Secure Format](#).

CAMERA POSITION

Use Camera Position to select the camera position label for the media card.

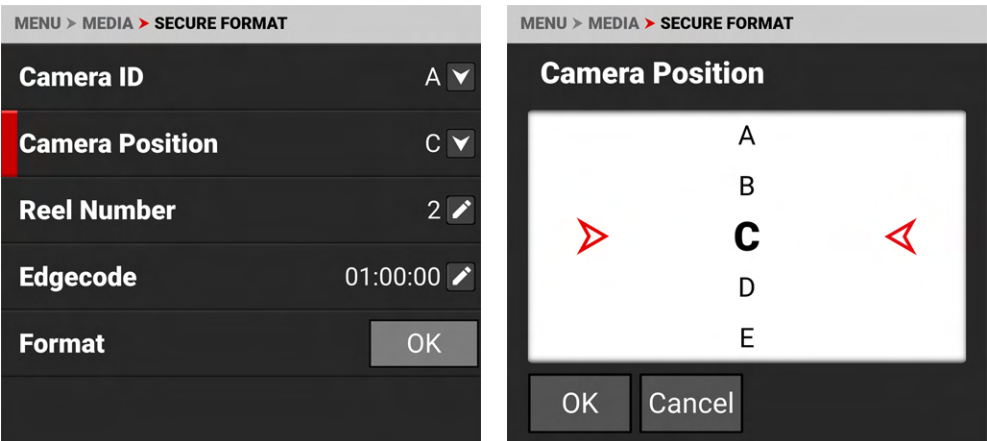

The Camera Position letters you can assign range from A-Z. For more information, refer to [Secure Format](#).

REEL NUMBER

Use Reel Number to assign a reel number to the media.

MENU > MEDIA > SECURE FORMAT

Camera ID

A

▼

Camera Position

C

▼

Reel Number

2

Edgecode

01:00:00

Format

OK

MENU > MEDIA > FORMAT > SECURE FORMAT

Reel Number

1

7

8

9

+/-

4

5

6

1/

1

2

3

.

0

OK

Use the keypad to enter a unique reel number to the media.

NOTE: It is best practice to keep your reel numbers to no longer than seven characters in length to conform with all edit decision list (EDL) formats.

For more information, refer to [Secure Format](#).

EDGECODE

Use Edgecode to assign an edgecode to the media.

MENU > MEDIA > SECURE FORMAT

Camera ID

A

▼

Camera Position

C

▼

Reel Number

2

Edgecode

01:00:00

Format

OK

MENU > MEDIA > FORMAT > SECURE FORMAT

Edgecode

01:00:00

7

8

9

4

5

6

1

2

3

:

0

OK

Use the keypad to enter a unique edgecode number to the media.


Edgecode is a SMPTE Timecode track, which by default starts at 01:00:00 on the first frame of each media card. It is a sequential code that is continuous from frame to frame and also between clips. Edgecode is equivalent to RUN RECORD as used on broadcast cameras.

For more information, refer to [Secure Format](#).

FORMAT

Use Format to execute a secure format of the media.


WARNING: Formatting permanently deletes all information from the media card. Data cannot be recovered after a format.

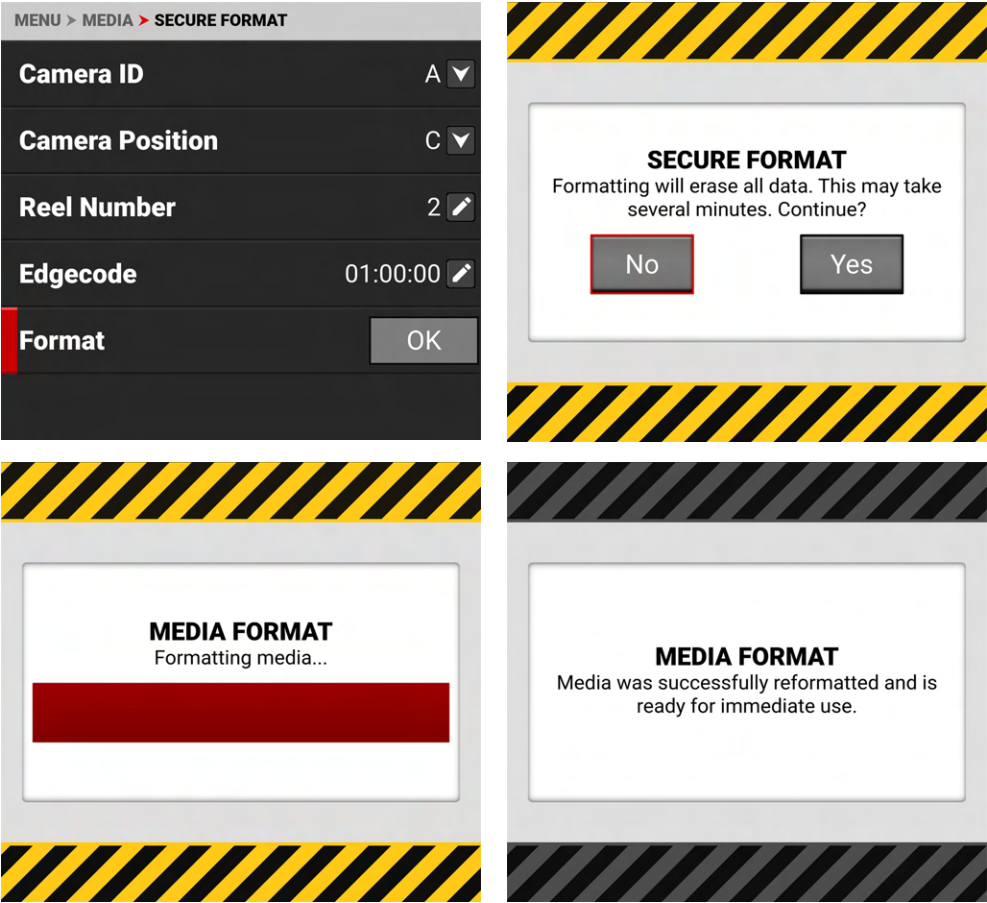

For more information, refer to [Secure Format](#).

PRESETS MENU


The Presets menu contains the settings you use to quickly set up your camera.
From the Onboard LCD touchscreen menu, select Presets:

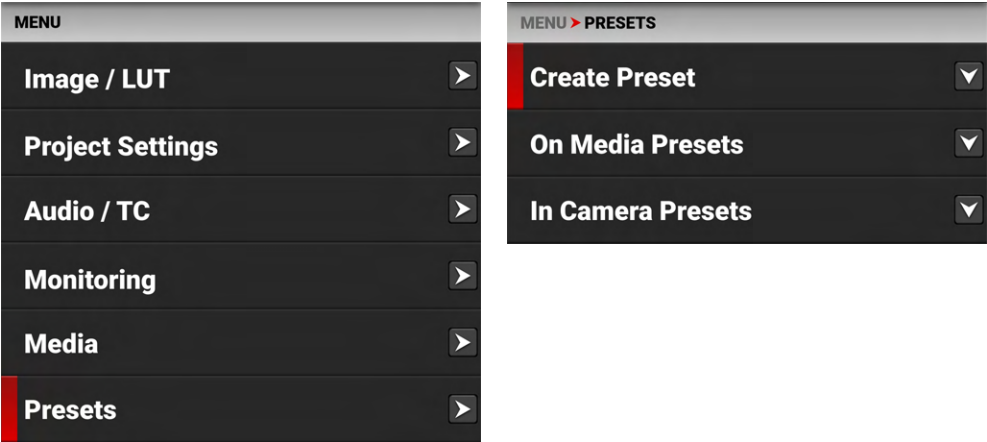

Use the Presets menu to build and select pre-configured settings for the camera:


ITEMS	DETAILS
Create Preset	Create camera setting presets
On Media Presets	Manage presets stored on the media
In Camera Presets	Manage presets stored in the camera

CREATE PRESET

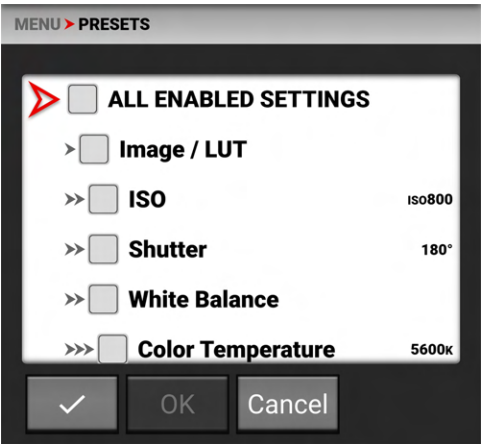


Use Create Preset to select the current camera settings you want to use to create a preset list of settings.


You can select settings individually:

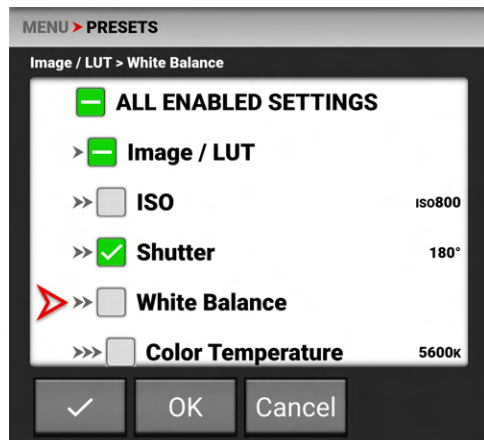

You can also use the ALL ENABLED SETTINGS checkmark button to select all of the current camera settings as a preset:

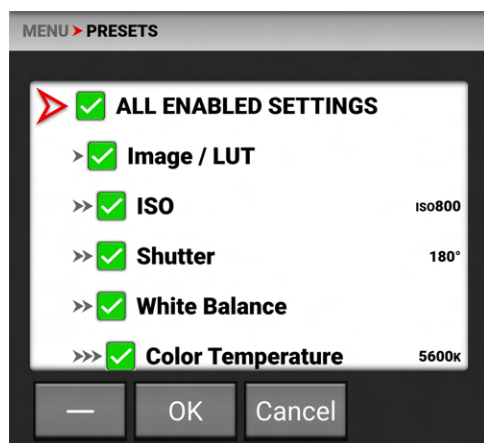


Click OK to create the preset. The Create Preset screen opens.

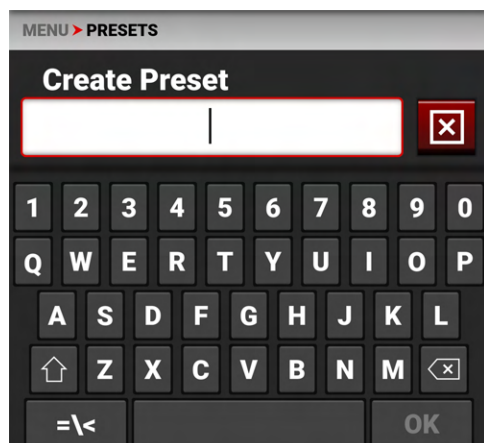

Use the Create Preset screen to name the preset.


ON MEDIA PRESETS

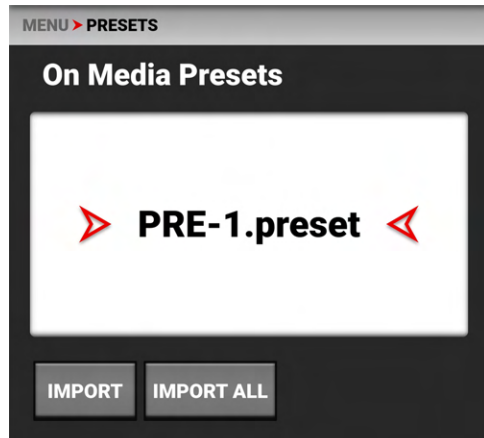

You can import presets from the media to the camera. When importing presets from the media to the camera, the presets are saved to a folder on the camera called “presets”.

From On Media Presets, you can import the selected preset from the media to the camera or import all of the presets from the media to the camera.

IN CAMERA PRESETS

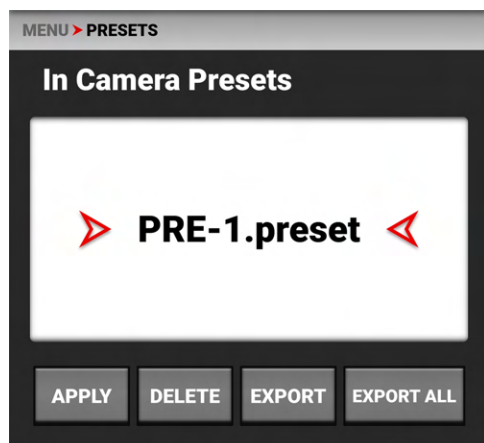


You can export presets from the camera to the media. When exporting presets from the camera to the media, the presets are saved to a folder on the media called “presets”.

From In Camera Presets, you can apply the selected preset to the camera, delete the selected preset from the camera, export the selected preset from the camera to the media, or export all of the presets from the camera to the media.

AUTOFOCUS MENU

Use Autofocus to enable and configure the camera's Autofocus feature. The lens must support autofocus for this feature to work.

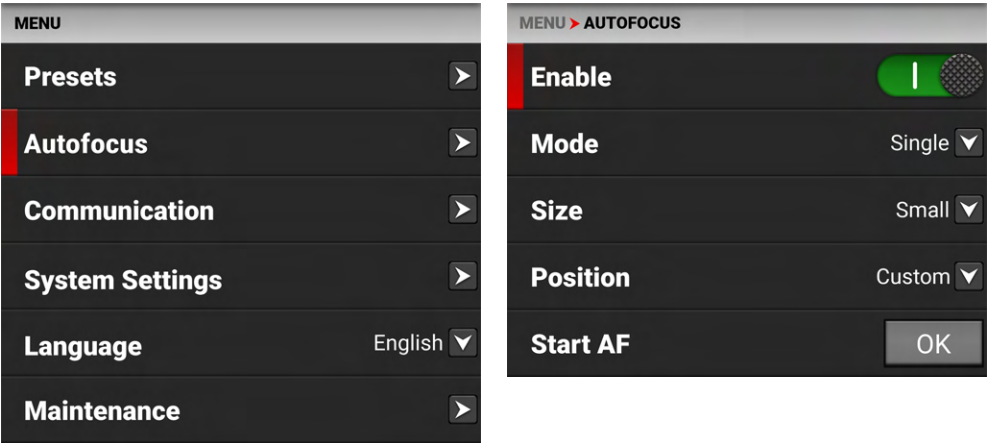


Use the Autofocus menu to perform camera autofocus tasks:

ITEM	DETAILS
Enable	Enable/Disable the Autofocus feature
Mode	Select the Autofocus mode
Size	Select the size of the Autofocus area
Position	Select the position of the Autofocus area
Start AF	Start the selected Autofocus mode



ENABLE

Use Enable to enable or disable the **Autofocus Menu** feature. The lens must support autofocus for the camera to use this feature.

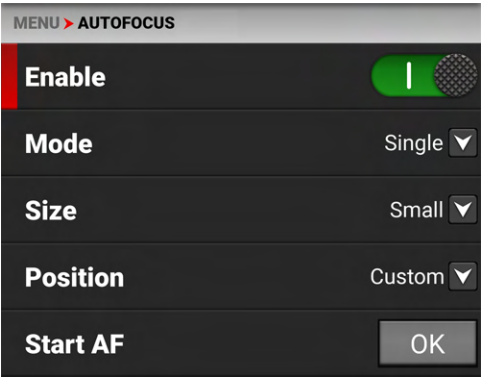

MODE

Use Mode to select the autofocus mode for the camera. The lens must support autofocus for the camera to use this feature.

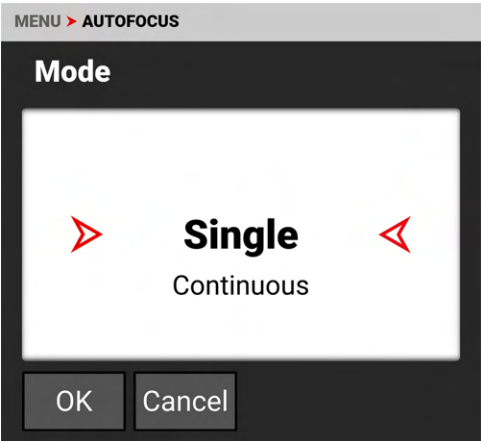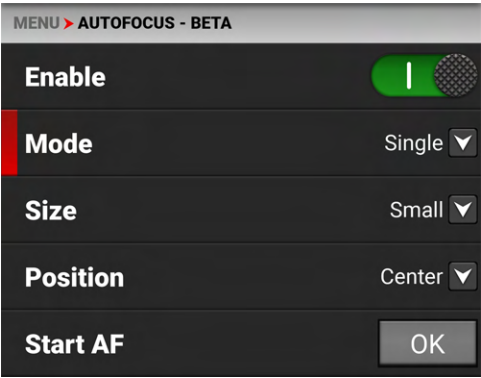

SINGLE MODE (DEFAULT)



Use single mode to autofocus and then stop at that focus position.

CONTINUOUS MODE

Use Continuous mode to continue to change focus to keep a moving subject in focus.

SIZE



Use Size to choose what size area you want the camera to use for the autofocus feature. The lens must support autofocus for the camera to use this feature.

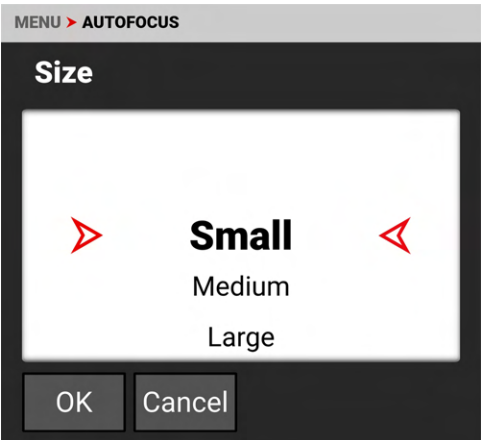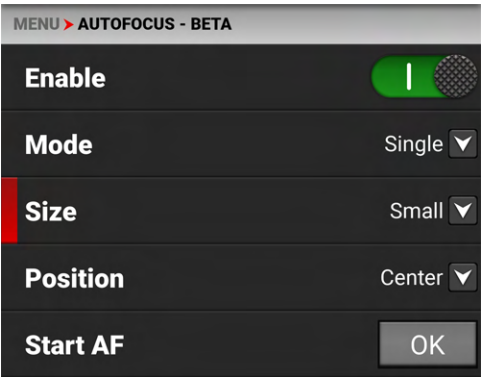

The Size selections for the autofocus area are Small (default), Medium, Large, Wide, and Vertical.

POSITION

Use Position to specify the position of the autofocus area on the sensor. The lens must support autofocus for the camera to use this feature.

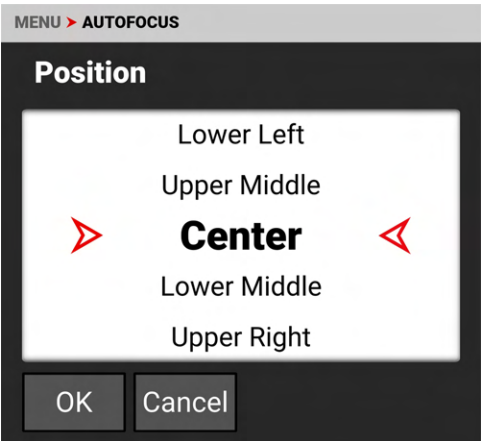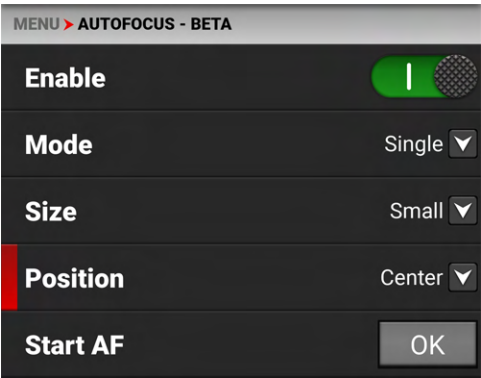


The Position selections include:

- Left
- Upper Left
- Lower Left
- Upper Middle
- Center (default)
- Lower Middle
- Upper Right
- Lower Right
- Right

The Autofocus Position rectangle displays on the screen:




You can move the position manually on the LCD screen. The menu will change to display Custom.

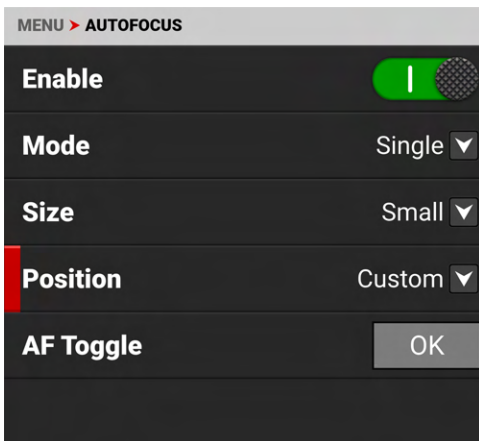

COMMUNICATION MENU

The Communication menu contains the settings you use to configure your camera to communicate with other devices.

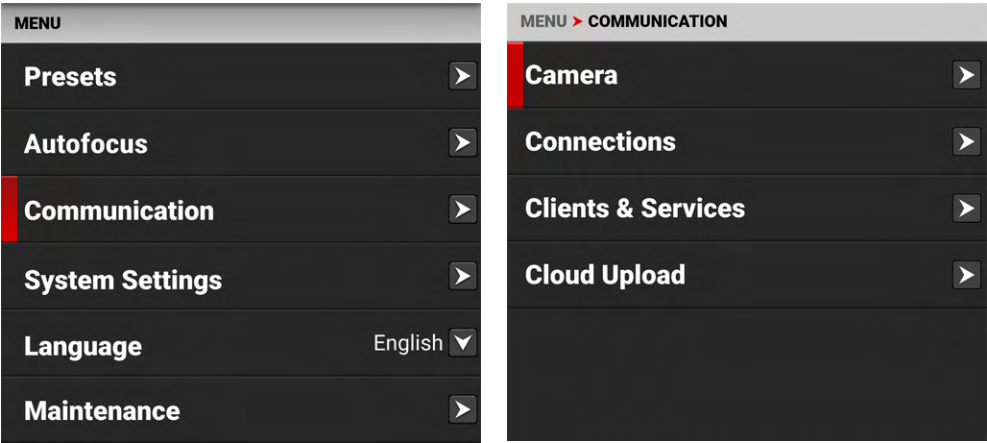


Use the Communication menu to configure the camera's communication settings:

ITEMS	DETAILS
Camera	Setting for the camera name
Connections	Settings for Wi-Fi, Serial, and KOMODO Link Adaptor*
Clients & Services	Settings for FTPS and PTP
Cloud Upload	Settings for Frame.io and AWS S3 communication

*Requires KOMODO Link Adaptor.

CAMERA


Use the Camera Communication menu to select the camera communication settings.

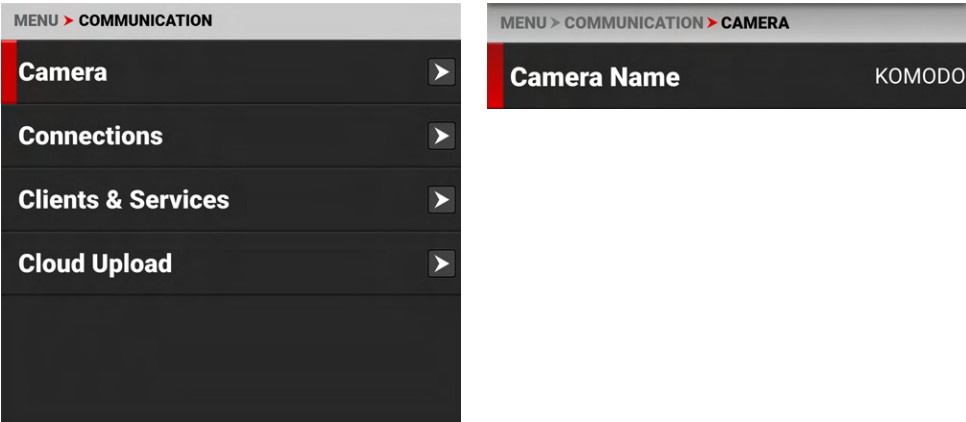

Use the Camera communication settings to configure the camera name.


CAMERA NAME

Use Camera name to enter a camera name.

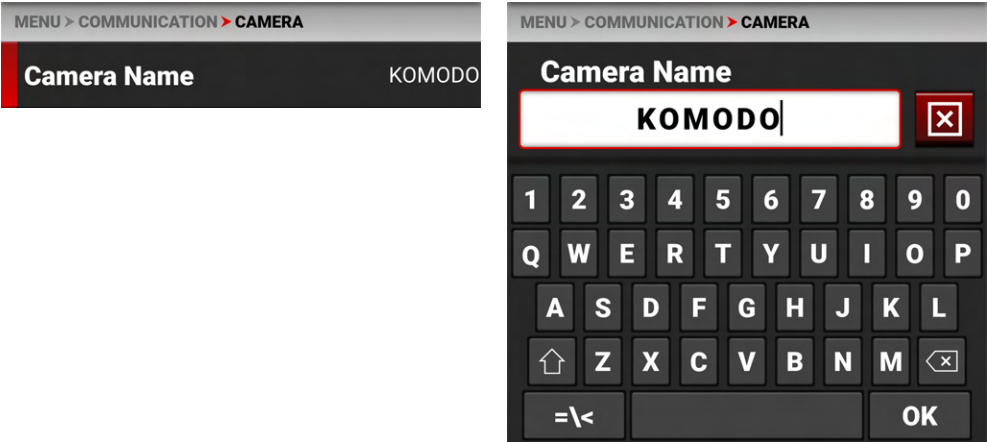

CONNECTIONS

Use the Connections menu to select the connection you want to configure.

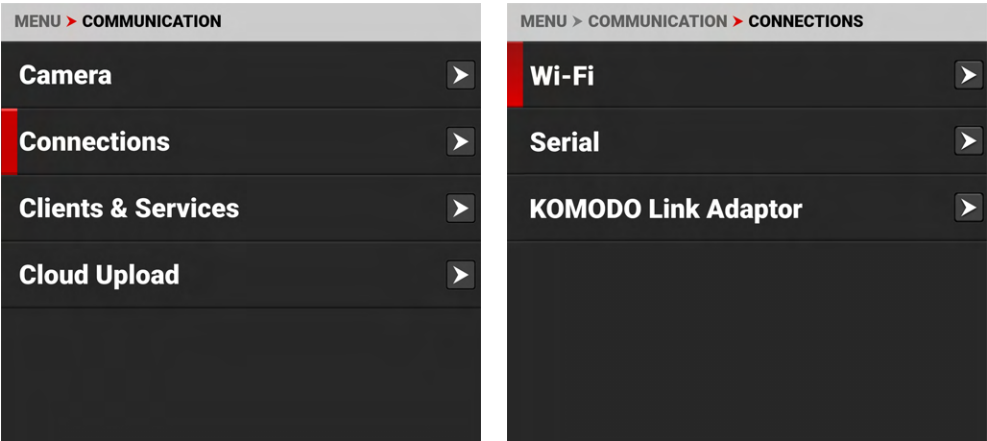


Use the Connections menu to configure the camera's connection settings:

ITEM	DETAILS
Wi-Fi	Configure the camera Wi-Fi connection settings
Serial	Configure the camera serial connection settings
KOMODO Link Adaptor	Configure the KOMODO Link Adaptor connection settings*

*Requires KOMODO Link Adaptor.

WI-FI


Use Wi-Fi to configure the camera to work with a Wi-Fi connection.

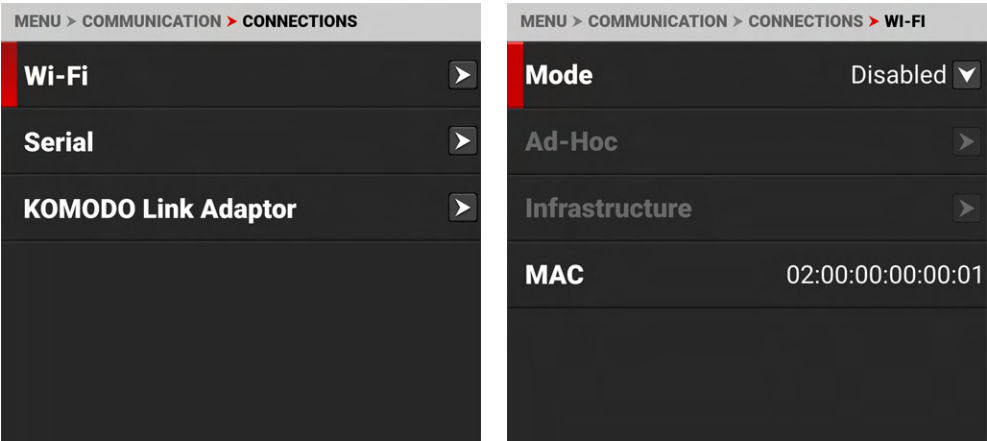

Use the Wi-Fi menu to configure the camera's Wi-Fi settings:

ITEMS	DETAILS
Mode	Disable Wi-Fi or select the camera Wi-Fi settings
Ad-Hoc	Configure the camera as a Wi-Fi hot spot
Infrastructure	Settings for connecting to an existing Wi-Fi network
MAC	Displays the camera device MAC address

MODE

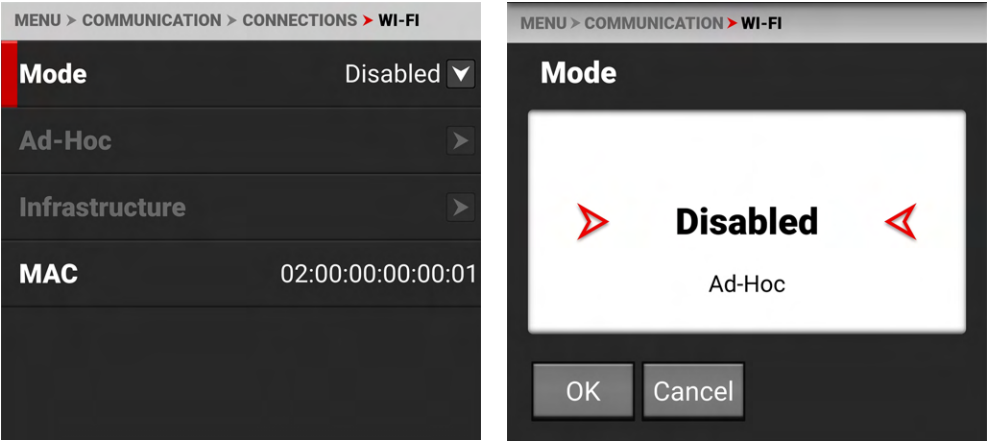

From Mode you can disable the Wi-Fi network, or you can enable the camera's **Ad-Hoc** or **Infrastructure** Wi-Fi settings. The default setting is Disabled.

AD-HOC

Use Ad-Hoc to configure the camera as a Wi-Fi hot spot.

NOTE: The Ad-Hoc menu is enabled when the **Wi-Fi Mode** is set to **Ad-Hoc**.

MENU > COMMUNICATION > CONNECTIONS > WI-FI

ModeAd-Hoc

Ad-Hoc

Infrastructure

MAC02:00:00:00:00:01

... > CONNECTIONS > WI-FI > AD-HOC

SSID000-000-000

Passphrase000-000-000

Band5 GHz

Channel36

EncryptionWPA2

StatusOffline

Use the Ad-Hoc menu to configure the Wi-Fi hot spot settings:

ITEMS	DETAILS
SSID	Enter the name of the Wi-Fi network the camera generates
Passphrase	Enter the password for the Wi-Fi network
Band	Select the Wi-Fi frequency band
Channel	Select the optimal channel for the Wi-Fi band
Encryption	Displays the encryption type
Status	Displays the connection status
IP Address	Displays the IP address
Netmask	Displays the Netmask

SSID

... > CONNECTIONS > WI-FI > AD-HOC

SSID000-000-000

Passphrase000-000-000

Band5 GHz

Channel36

EncryptionWPA2

StatusOffline

... > CONNECTIONS > WI-FI > AD-HOC

SSID

000-000-000

1234567890

QWERTYUIOP


ASDFGHJKL

⬆ZXCVBNM⬅

=\<OK


Use the keypad to enter the camera's Wi-Fi network name.

PASSPHRASE

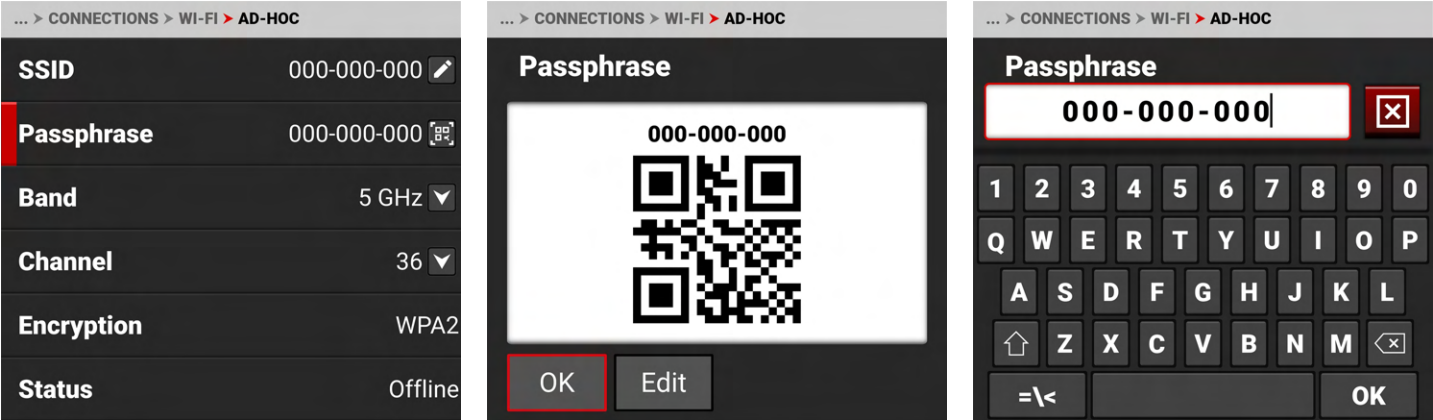

Use the keypad to enter the camera's Wi-Fi passphrase. The camera creates a QR code version of the passphrase.


BAND

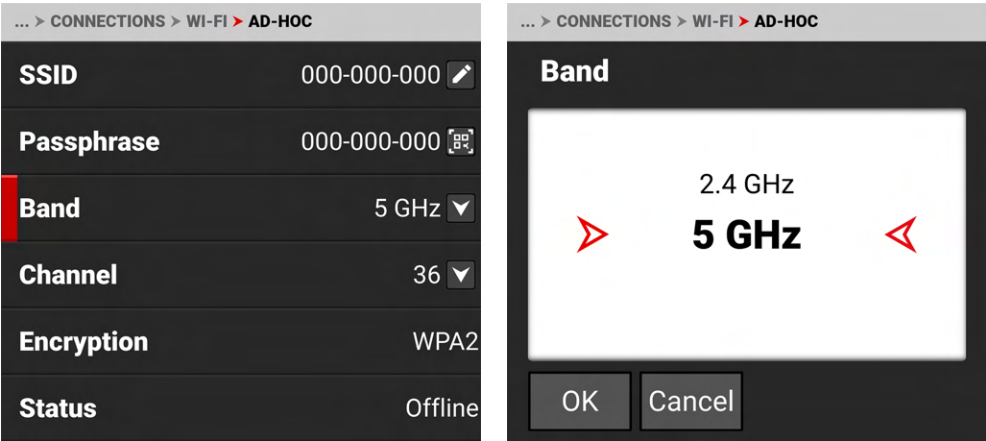

Select the camera's Wi-Fi network frequency band.

- Use 5 GHz for optimal wireless video streaming performance (default)
- Use 2.4 GHz for long range remote control (when not utilizing wireless video streaming)

CHANNEL

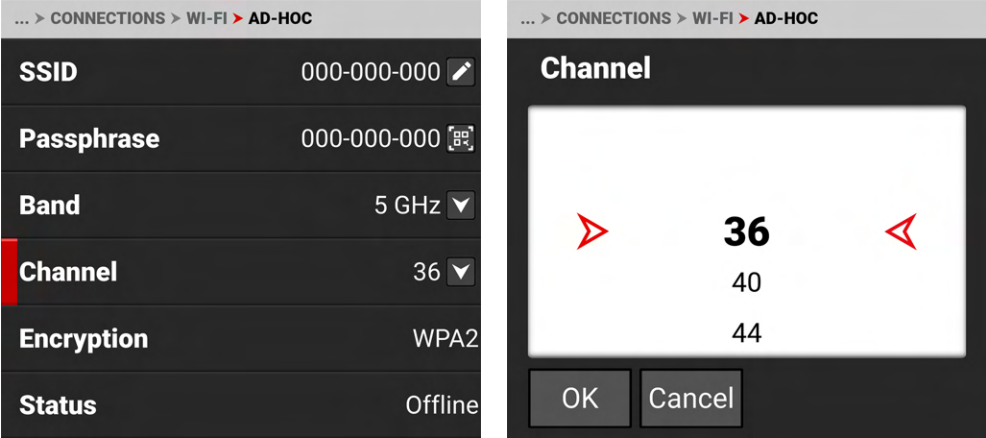

Select the optimal channel for the selected band, one which receives the least interference from the surrounding Wi-Fi signals.

ENCRYPTION

... > CONNECTIONS > WI-FI > AD-HOC	
SSID	000-000-000 
Passphrase	000-000-000 
Band	5 GHz ▼
Channel	36 ▼
Encryption	WPA2
Status	Offline

The camera uses WPA2 security encryption.

STATUS

... > CONNECTIONS > WI-FI > AD-HOC	
Passphrase	000-000-000 
Band	5 GHz ▼
Channel	36 ▼
Encryption	WPA2
Status	Offline
IP Address	

Displays the camera's Ad-Hoc Wi-Fi connection status.

The Ad-Hoc status can include:

- Offline
- Online

IP ADDRESS

When online and broadcasting a network, the camera displays an IP address.


NETMASK

When online and broadcasting a network, the camera displays the Netmask for the IP address.

INFRASTRUCTURE

Use Infrastructure to configure the camera to connect to an existing Wi-Fi network.


NOTE: The Infrastructure menu is enabled when the Wi-Fi Mode is set to **Infrastructure**. Refer to the **Wi-Fi** section for more information.

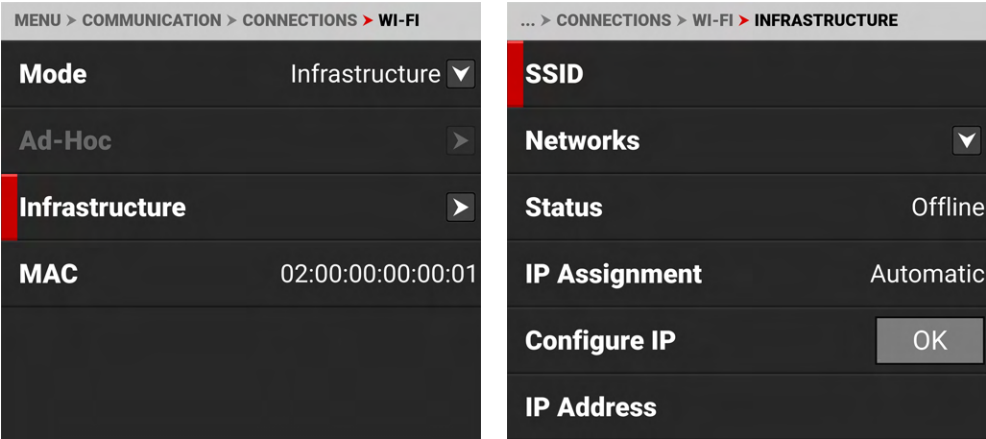

Use the Infrastructure menu to configure the Wi-Fi settings to connect to an existing Wi-Fi infrastructure:


ITEMS	DETAILS
SSID	Displays the name of the connected Wi-Fi network
Networks	Scan for, select, or enter the Wi-Fi network
Status	Displays the Wi-Fi connection status
IP Assignment Status	Displays the IP Assignment mode
Configure IP	Select the IP Assignment mode and add manual addresses
IP Address	View or enter the Wi-Fi IP address
Netmask	View or enter the Wi-Fi Netmask address
Gateway	View or enter the Wi-Fi Gateway (router) address

SSID

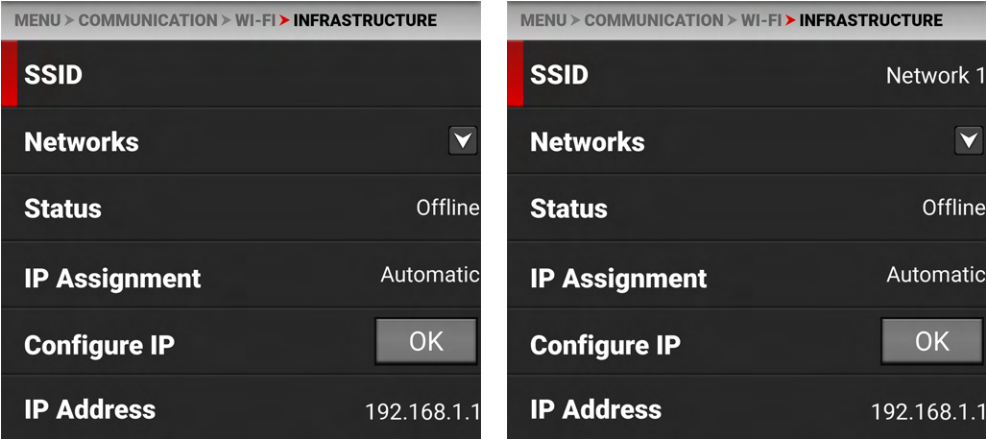

When a network is selected, the SSID displays the Wi-Fi network name (SSID).

NETWORKS

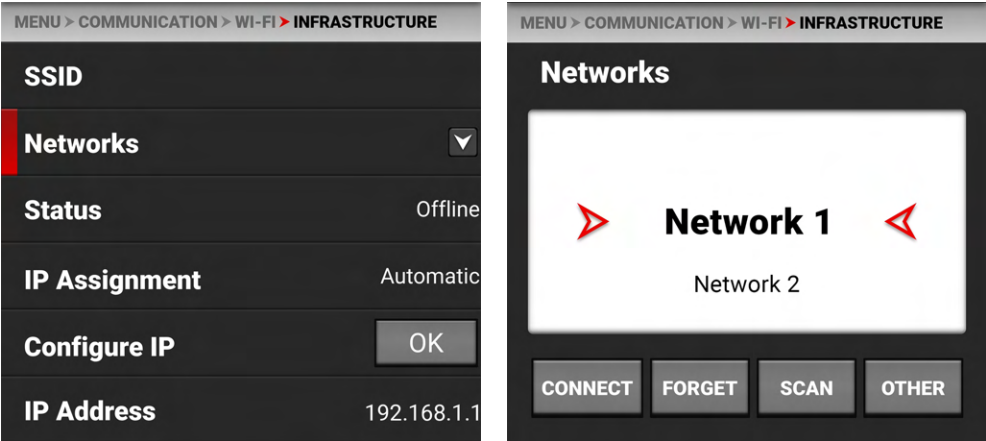


Use Networks to select an existing network, scan for an available network, or to configure a new network.

- **CONNECT:** The CONNECT button connects the camera to the selected network.
- **FORGET:** The FORGET button erases the connection information for the selected network.
- **SCAN:** The SCAN button searches for available networks.
- **OTHER:** The OTHER button opens the OTHER NETWORKS screen where you can manually enter an SSID and a Passphrase.


Tap SSID to open the SSID editing screen and enter the desired network SSID:



Tap Passphrase to open the Passphrase editing screen and enter the desired passphrase for the network:

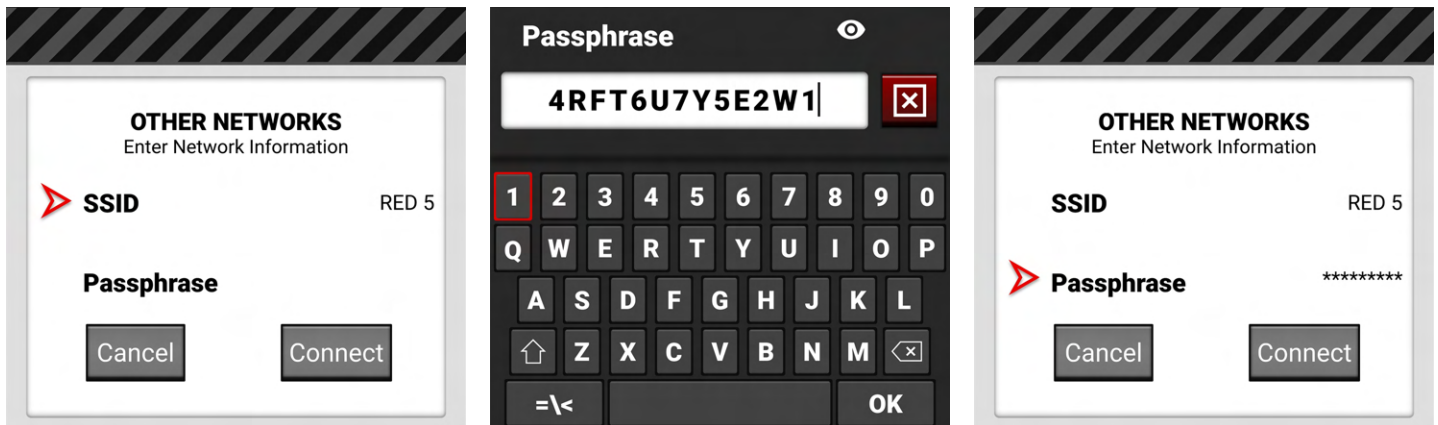


Tap Connect to connect to the new network:

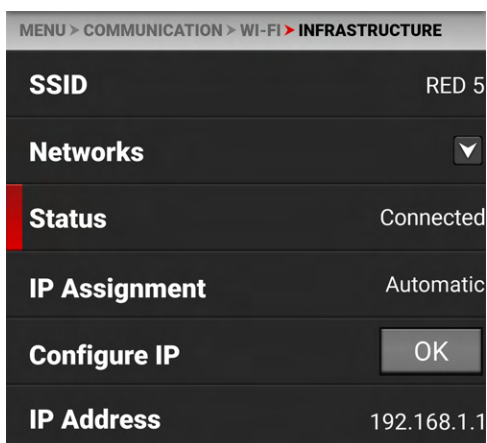


STATUS

Displays the connection status of the camera to the selected Wi-Fi network.

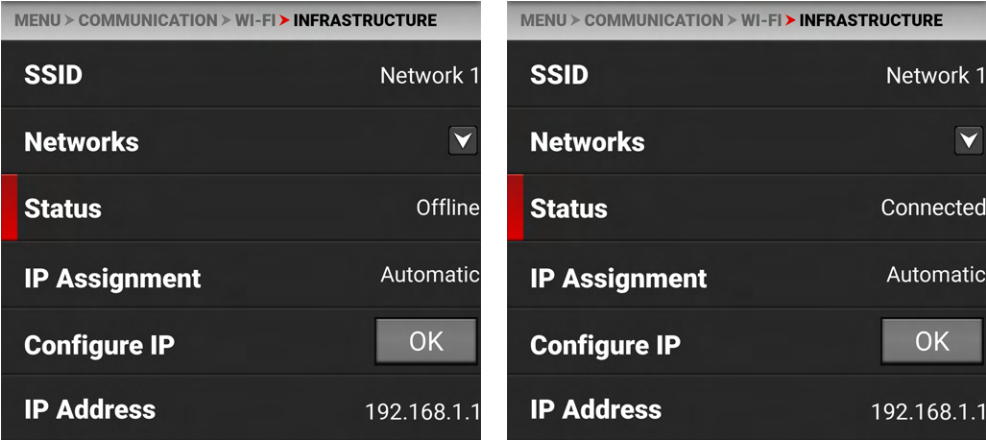

IP ASSIGNMENT STATUS

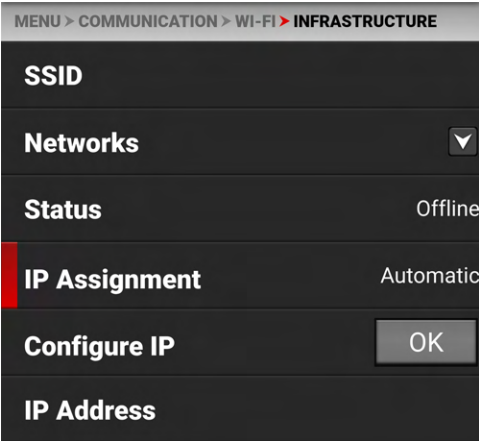

IP Assignment displays the IP assignment mode. In Automatic mode, the camera automatically discovers the Infrastructure IP Address. In Manual mode, you can manually enter the network addresses in the camera.

CONFIGURE IP


Tap OK to Open the Infrastructure Configure IP screen.



You use the Configure IP screen to select the IP Assignment mode, and to manually enter the IP, Netmask, and Gateway addresses in Manual mode.

IP ASSIGNMENT SELECTION

IP Assignment allows you to select the Infrastructure IP Assignment mode.

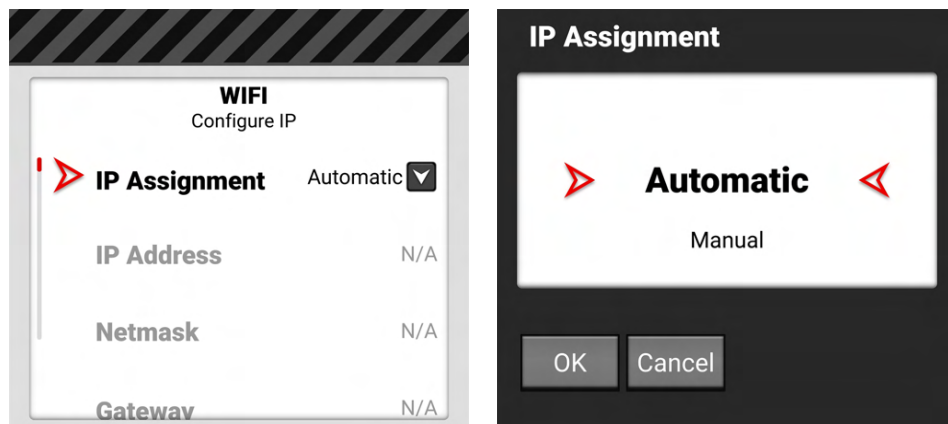


The image shows two screenshots of the IP Assignment selection interface. The left screenshot is a 'WIFI Configure IP' screen with a sidebar menu. 'IP Assignment' is selected and set to 'Automatic'. Below it, 'IP Address', 'Netmask', and 'Gateway' are listed as 'N/A'. The right screenshot is a modal titled 'IP Assignment' showing 'Automatic' selected with red arrow icons, and 'Manual' as an option below. 'OK' and 'Cancel' buttons are at the bottom.

The Automatic mode detects the available Infrastructure IP address. The Manual mode allows you to manually enter the desired Infrastructure network addresses.

MANUAL IP ADDRESS


IP Address allows you to manually enter the IP address when in Manual mode.

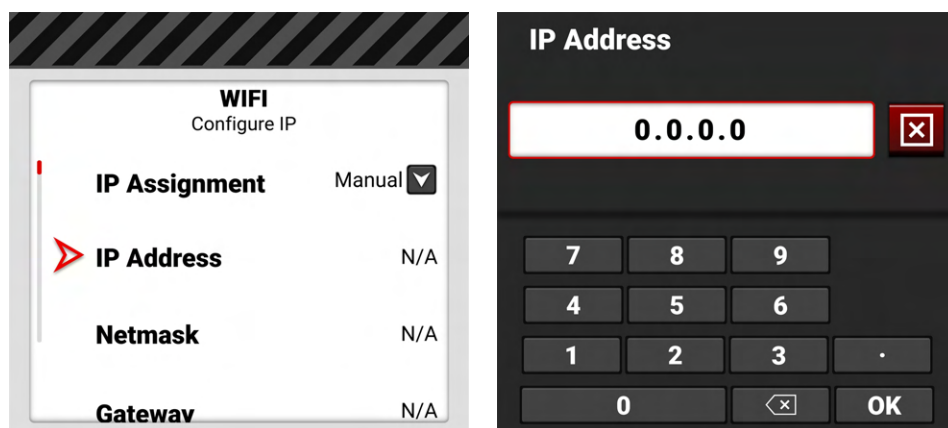

The image shows two screenshots of the Manual IP Address interface. The left screenshot is the 'WIFI Configure IP' screen with 'IP Assignment' set to 'Manual'. 'IP Address' is selected in the sidebar. The right screenshot is a modal titled 'IP Address' showing a text input field with '0.0.0.0' and a red 'X' icon. Below is a numeric keypad with digits 0-9, a decimal point, a backspace icon, and an 'OK' button.

MANUAL NETMASK ADDRESS


Netmask allows you to manually enter the Infrastructure Netmask address when in Manual mode.

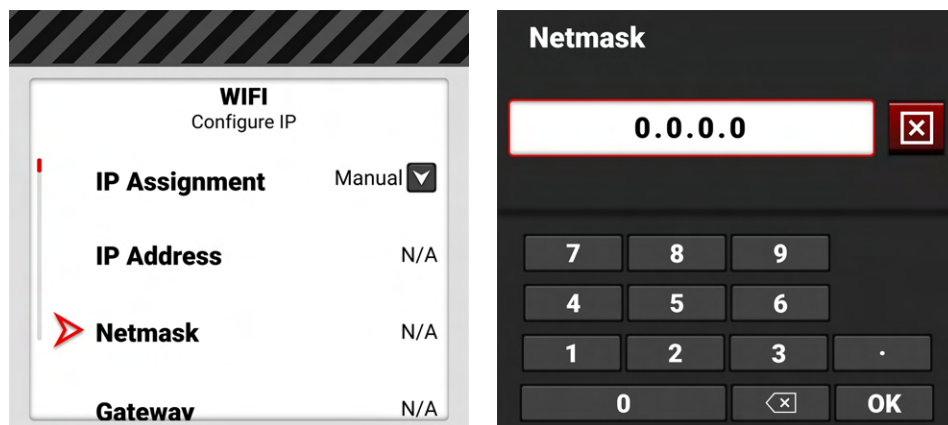

The image shows two screenshots of the Manual Netmask Address interface. The left screenshot is the 'WIFI Configure IP' screen with 'IP Assignment' set to 'Manual'. 'Netmask' is selected in the sidebar. The right screenshot is a modal titled 'Netmask' showing a text input field with '0.0.0.0' and a red 'X' icon. Below is a numeric keypad with digits 0-9, a decimal point, a backspace icon, and an 'OK' button.


MANUAL GATEWAY ADDRESS

Gateway allows you to manually enter the Infrastructure Gateway (router) address when in Manual mode.

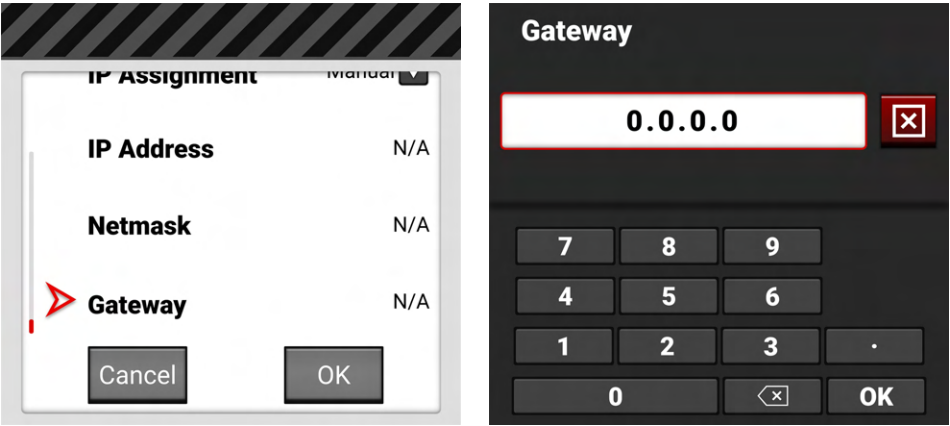

IP ADDRESS

Displays the Infrastructure IP address.

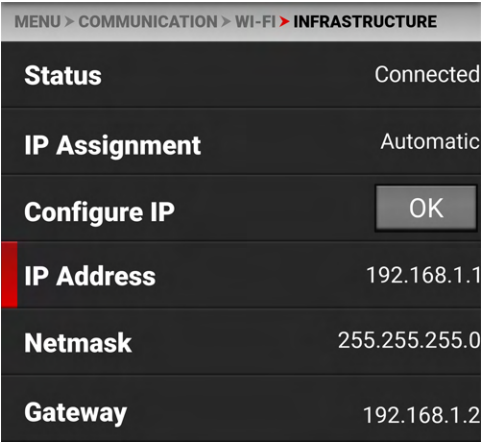

NETMASK

Displays the Infrastructure Netmask address.

MENU > COMMUNICATION > WI-FI > INFRASTRUCTURE	
Status	Connected
IP Assignment	Automatic
Configure IP	OK
IP Address	192.168.1.1
Netmask	255.255.255.0
Gateway	192.168.1.2


GATEWAY

Displays the Infrastructure Gateway address.

MENU > COMMUNICATION > WI-FI > INFRASTRUCTURE	
Status	Connected
IP Assignment	Automatic
Configure IP	OK
IP Address	192.168.1.1
Netmask	255.255.255.0
Gateway	192.168.1.2

SERIAL


Use Serial to configure the serial connection to the **Extension Port**.

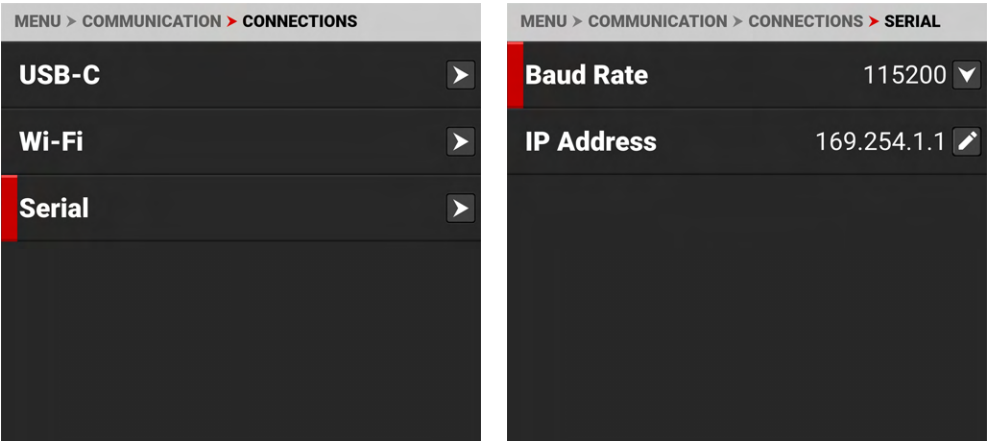

The settings you can configure for the serial connection through the Extension Port include:

ITEMS	DETAILS
Baud Rate	Select the serial port baud rate
IP Address	Enter the IP address for the PPP protocol

BAUD RATE

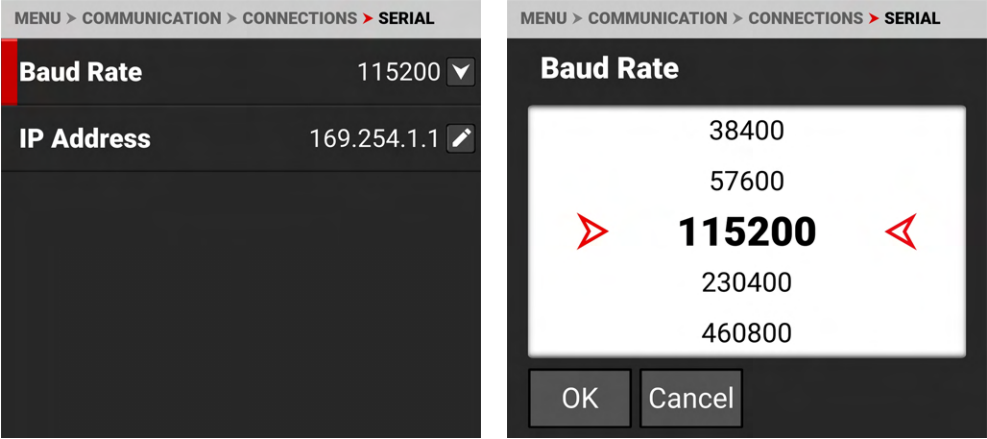

The Baud rate controls how fast data is transmitted over the serial connection. The higher the speed, the more likely that errors can occur. The Baud rates you can choose include:

BAUD RATES			
9600	115200*	576000	1500000
19200	230400	921600	2000000
38400	460800	1000000	2500000
57600	500000	1152000	3000000

* Default

IP ADDRESS

MENU > COMMUNICATION > CONNECTIONS > SERIAL

Baud Rate115200

IP Address169.254.1.1

MENU > COMMUNICATION > CONNECTIONS > SERIAL

IP Address

169.254.1.1

789

456

123.

0<X


OK

Use the keypad to enter the internet provider's IP address.

KOMODO LINK ADAPTOR

Use the KOMODO Link Adaptor menu to view the IP address of the connected Ethernet, Android or iOS device.


NOTE: This menu item only displays when the **KOMODO Link Adaptor** is attached to the camera.

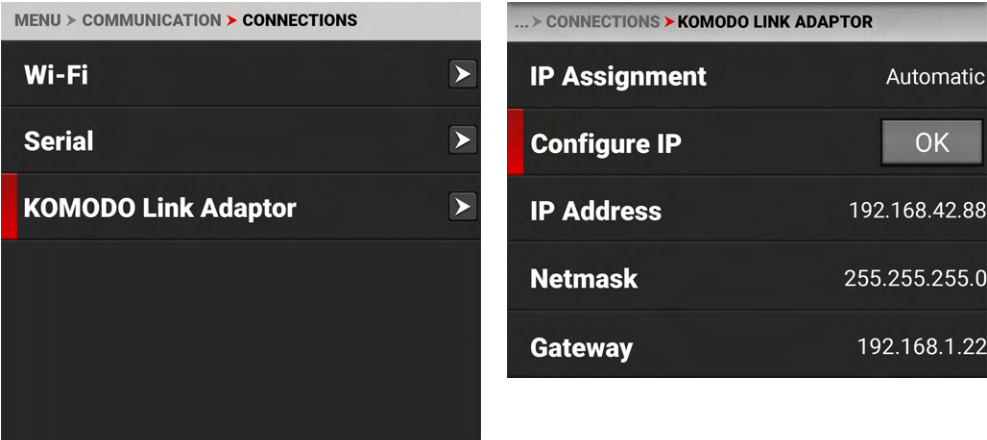

The settings you can configure for the KOMODO Link Adaptor include:

ITEM	DETAILS
IP Assignment	Displays the IP address assignment method
Configure IP	IP Address modes and configuration settings
IP Address	View or enter the network IP address
Netmask	View or enter the network Netmask
Gateway	View or enter the network Gateway


CONFIGURE IP

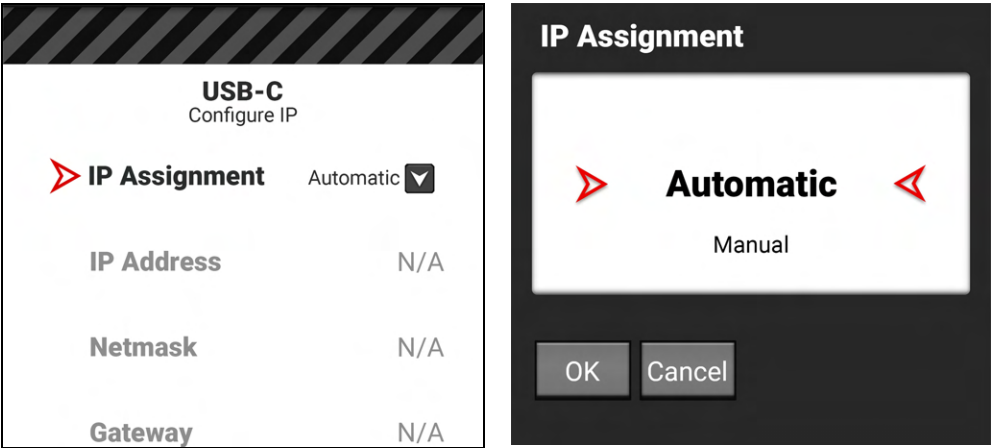


When connected to an Ethernet network, this allows you to automatically detect an IP address or to manually enter an IP address, Netmask address, and Gateway (router) address.

IP ADDRESS

When the link is connected to an Ethernet device and Automatic IP Assignment is enabled, IP Address displays the network IP address.

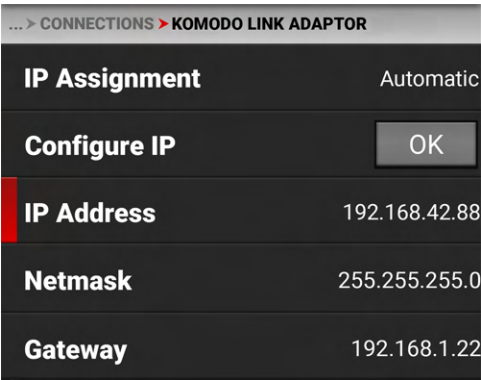

When Manual IP Assignment is enabled, you can select IP Address and manually enter a static IP address.

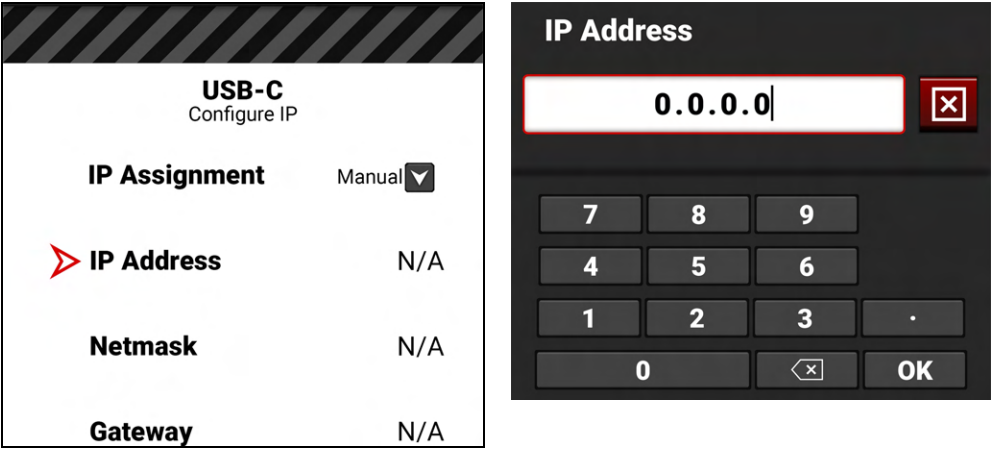

NETMASK

When the link is connected to an Ethernet device and Automatic IP Assignment is enabled, Netmask displays the network Netmask address.

... > CONNECTIONS > KOMODO LINK ADAPTOR

IP Assignment	Automatic
Configure IP	OK
IP Address	192.168.42.88
Netmask	255.255.255.0
Gateway	192.168.1.22

When Manual IP Assignment is enabled, you can select Netmask and manually enter a Netmask address.

USB-C
Configure IP

IP Assignment	Manual
IP Address	N/A
Netmask	N/A
Gateway	N/A

Netmask

0.0.0.0

789

456

123.

0< xOK

GATEWAY

When the link is connected to an Ethernet device and Automatic IP Assignment is enabled, Gateway displays the network Gateway address (router address).

... > CONNECTIONS > KOMODO LINK ADAPTOR

IP Assignment	Automatic
Configure IP	OK
IP Address	192.168.42.88
Netmask	255.255.255.0
Gateway	192.168.1.22

When Manual IP Assignment is enabled, you can select Gateway and manually enter a Gateway (router) address.

USB-C
Configure IP

IP Assignment	Manual
IP Address	N/A
Netmask	N/A
Gateway	N/A

Gateway

0.0.0.0

789

456


123.

0<XOK

For more information, refer to the How To section (KOMODO Link Adaptor).

CLIENTS & SERVICES

Use the Clients & Services menu to configure the client and service communications for the camera.

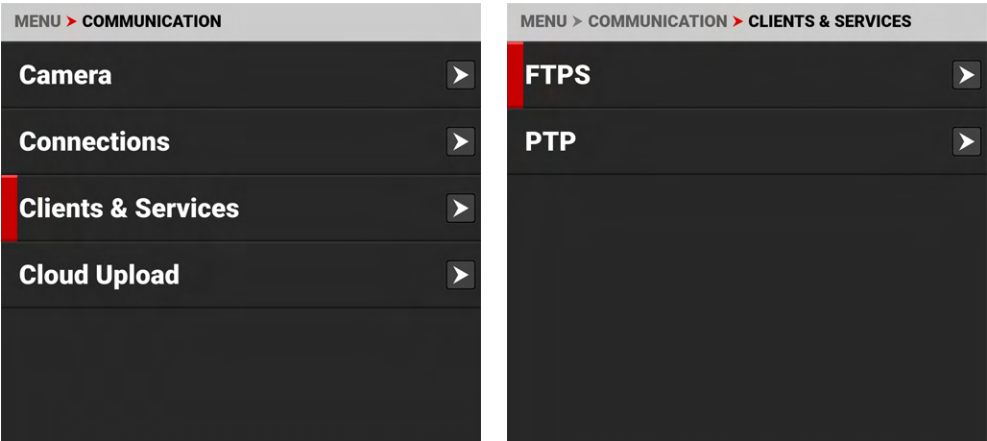


Use the Clients & Services menu to configure the camera's client and service settings:

ITEM	DETAILS
FTPS	Configure the camera FTPS communication settings
PTP	Configure the camera PTP communications settings*

PTP is only available with the use of the **KOMODO Link Adaptor**.

FTPS

Use FTPS to configure the camera to work with a File Transfer Protocol Secure (FTPS) connection.

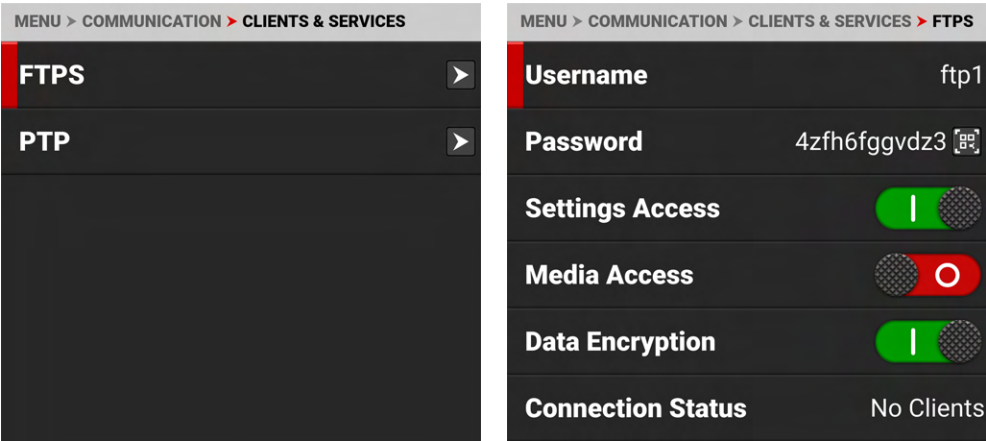


Use the FTPS menu to configure the camera's FTPS settings:

ITEMS	DETAILS
Username	Static username ftp1
Password	User-editable password and QR code
Settings Access	Enable FTP access to the camera settings
Media Access	Enable read-only access to the media
Data Encryption	Encrypts the data stream
Connection Status	Displays the FTPS actions occurring

PASSWORD


Use Password to enter an FTPS password. When you tap on the password, the Password editing screen appears.

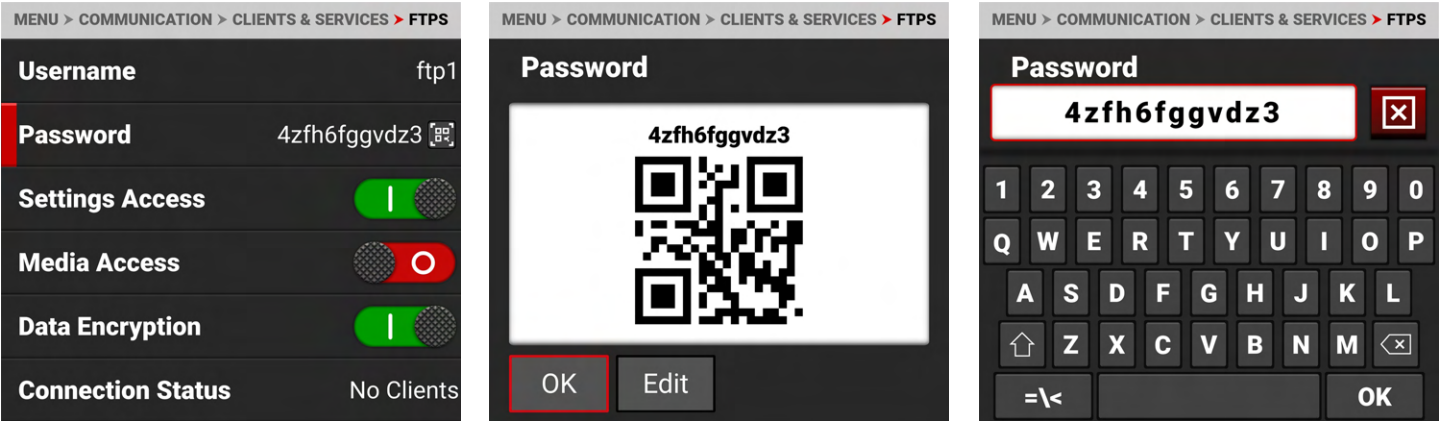

Select EDIT to open the FTPS Password editing screen. The password must contain a minimum of 8 characters. The screen displays passwords shorter than 8 characters in red.

PTP

NOTE: PTP is only available with the use of the **KOMODO Link Adaptor**.
Use PTP to view the precision time protocol status and configure the precision time protocol IP domain.
Enable PTP in **Audio/ TC > Timecode Source** (refer to **Timecode Source**).

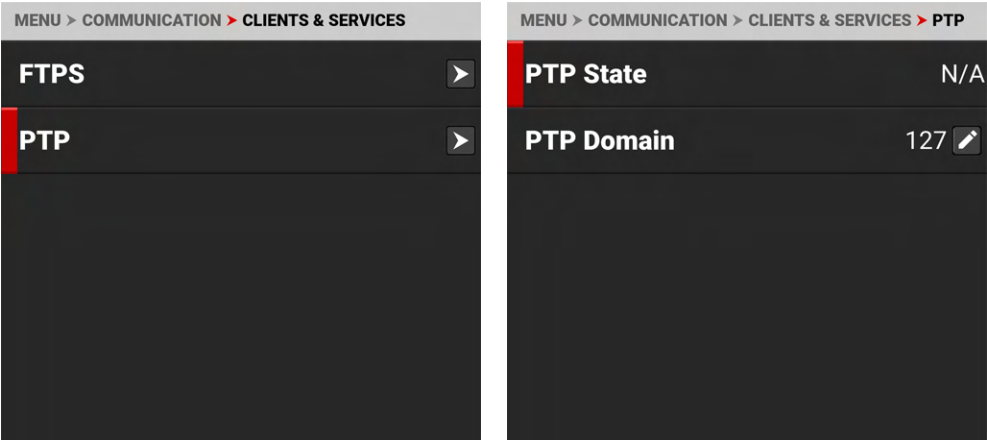


The settings you can configure for PTP include:

ITEM	DETAILS
PTP State	Displays the current status of the precision time protocol
PTP Domain	Allows you to select the precision time protocol domain


PTP DOMAIN

Use PTP Domain to select the precision time protocol domain for the camera. The camera will only receive precision time protocol communications addressed to the selected IP domain.

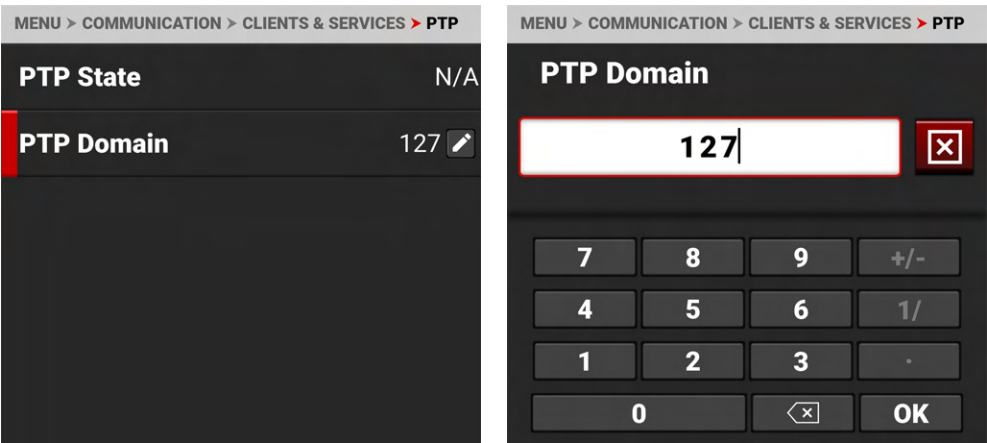

CLOUD UPLOAD

Use the Cloud Upload menu to configure the cloud upload communications for the camera.

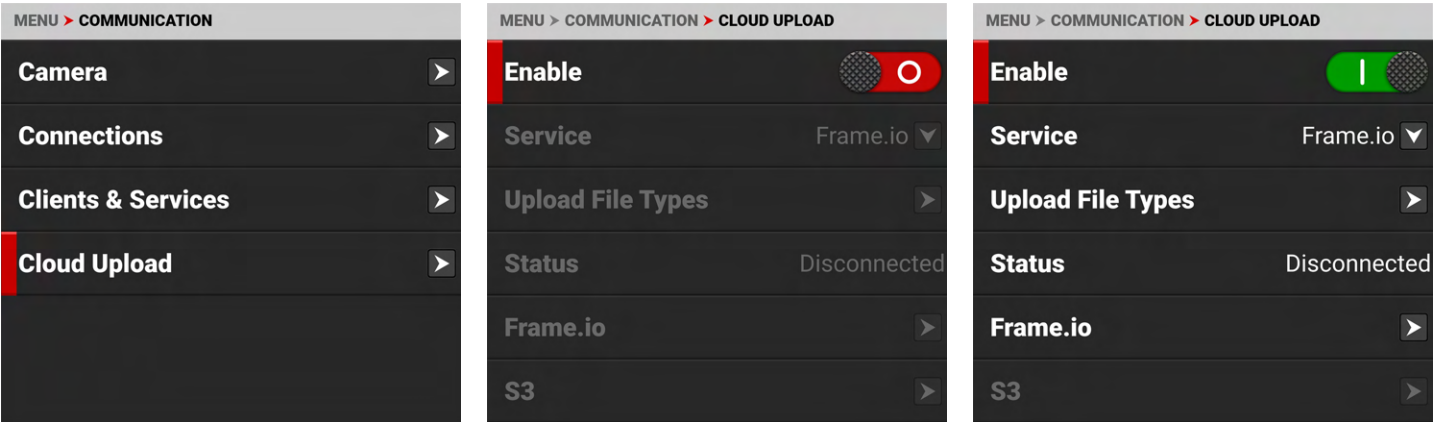


Use the Cloud Upload menu to manage the camera's cloud uploading features:

ITEM	DETAILS
Enable	Enable or disable the Cloud Upload features
Service	Select Frame.io or AWS S3 as the cloud upload service
Upload File Types	Enable or disable the uploading of R3D, MOV, WAV, and CDL/LUT files
Status	Displays the status of the cloud connection
Frame.io	Configure the Frame.io settings when this service is selected
S3	Configure the AWS S3 settings when this service is selected
Clips Remaining	Displays the number of clips remaining to upload
Time Remaining	Displays the time remaining to upload
Upload Remaining	Displays the size of the remaining upload
Upload Speed	Displays the speed of the upload

SERVICE

Use Service to select the type of cloud upload service the camera uses.

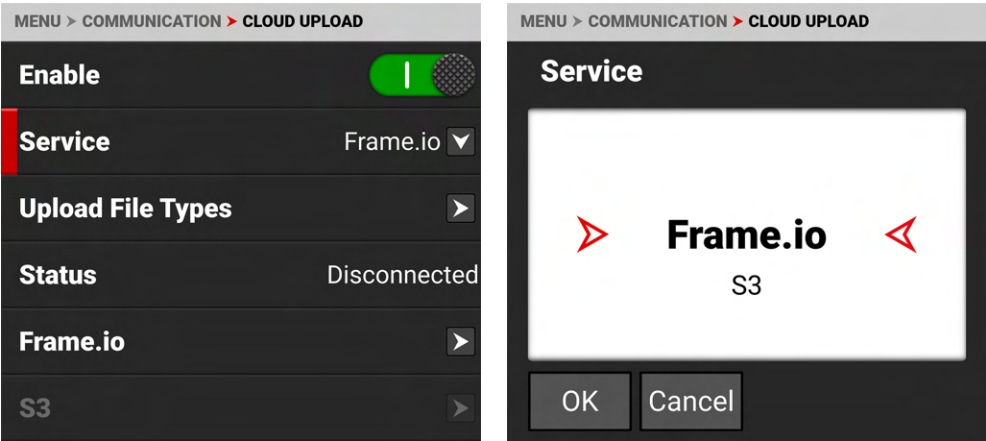


The types of cloud upload services you can select for the camera include:

ITEM	DETAILS
Frame.io	Selects the Frame.io cloud collaboration service
S3	Selects the AWS S3 cloud data management service

UPLOAD FILE TYPES

Use Upload File Types to select the file types you want the camera to upload to the cloud.

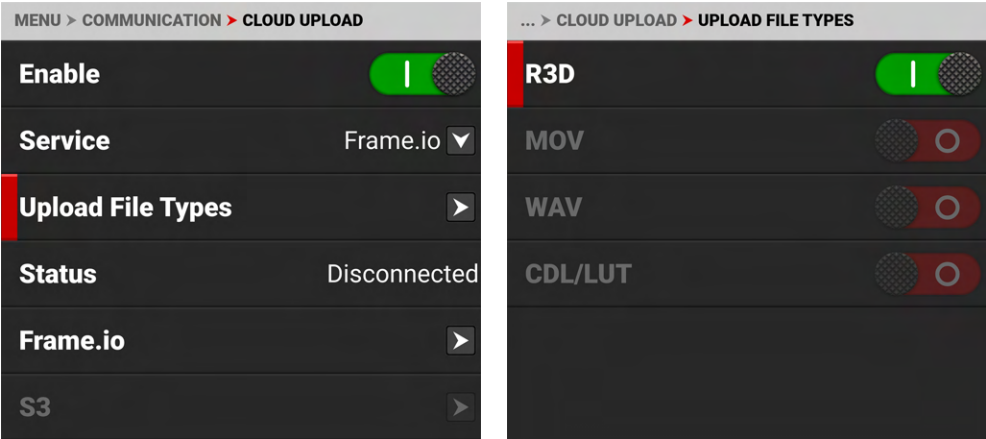


The Upload File Types menu only allows you to enable the file types available on the camera. When they are not on the camera they are grayed-out on the menu.

The Upload File Types you can select include:

ITEM	DETAILS
R3D	REDCODE RAW video file format
MOV	ProRes video file
WAV	Standard Waveform audio data file
CDL/LUT	In camera CDL and LUT files

FRAME.IO


Use Frame.io to connect to, and disconnect from, your Frame.io project.

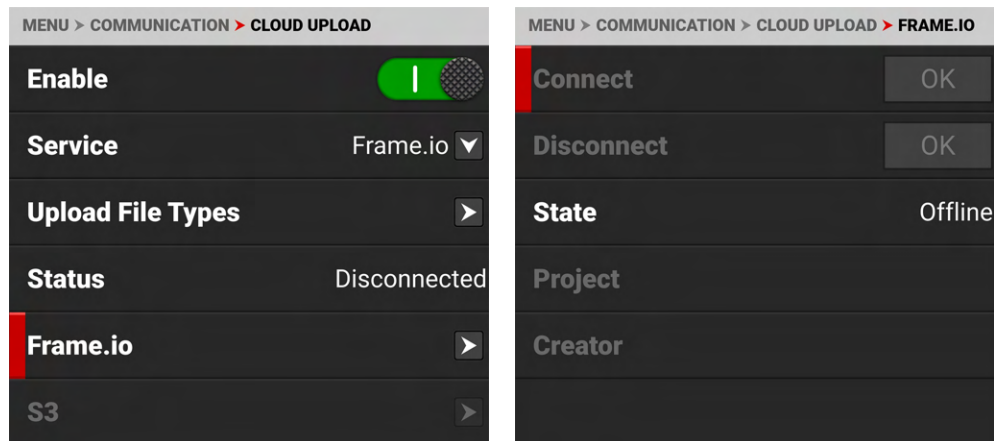

When you select Connect, the screen displays a time sensitive 6-digit code. Use this code to sync the camera to the desired project on the Frame.io website.

S3

Use S3 to configure the camera S3 communications.

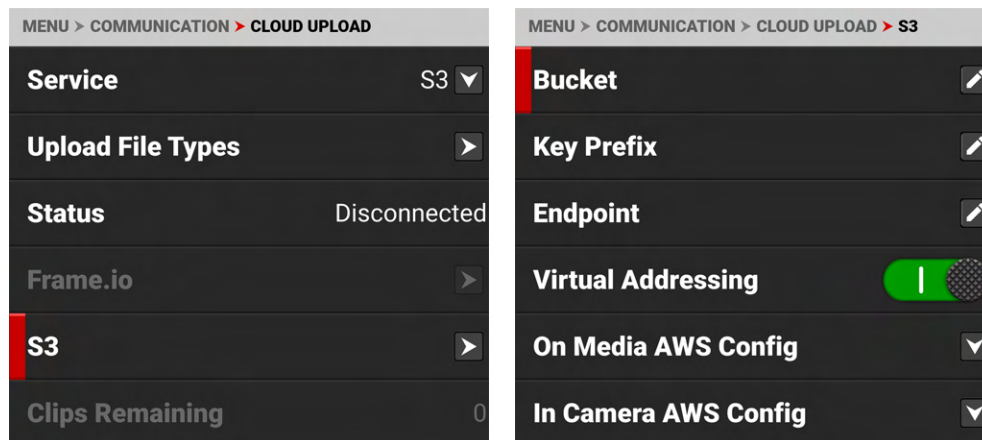

The S3 communications setting you can configure include:

ITEM	DETAILS
Bucket	Enter the S3 Bucket name
Key Prefix	Enter the S3 Key Prefix (optional)
Endpoint	Override the the default S3 Endpoint address (optional)
Virtual Addressing	Enable or disable Virtual Addressing
On Media AWS Config	Select the AWS configuration stored on the media
In Camera AWS Config	Manage the AWS configurations saved to the camera

BUCKET


Use Bucket to enter the name of the S3 Bucket you want to use to upload your data to the cloud.



The first screenshot shows the 'MENU > COMMUNICATION > CLOUD UPLOAD > S3' path. The 'Bucket' field is highlighted with a red bar. The second screenshot shows the same path, but the 'Bucket' field is now filled with 'my-s3-bucket' and a keyboard is displayed with the letter 't' highlighted. The third screenshot shows the same path, with the 'Bucket' field filled with 'my-s3-bucket' and a red bar highlighting the 'Key Prefix' field.

KEY PREFIX


When specified, the camera adds a prefix to the key (or path) of the uploaded objects to create a subfolder in the bucket (optional).

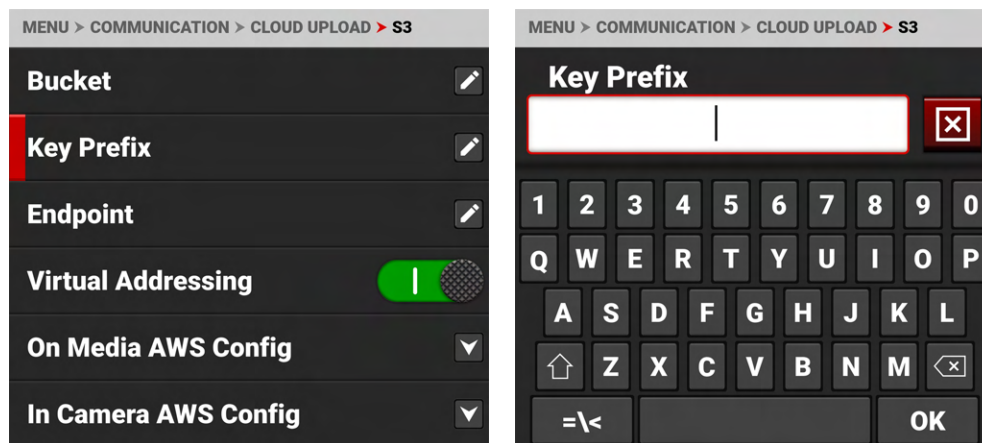

The first screenshot shows the 'MENU > COMMUNICATION > CLOUD UPLOAD > S3' path. The 'Key Prefix' field is highlighted with a red bar. The second screenshot shows the same path, but the 'Key Prefix' field is now filled with 't' and a keyboard is displayed with the letter 't' highlighted.

ENDPOINT

Use Endpoint to override the default S3 endpoint address (optional).

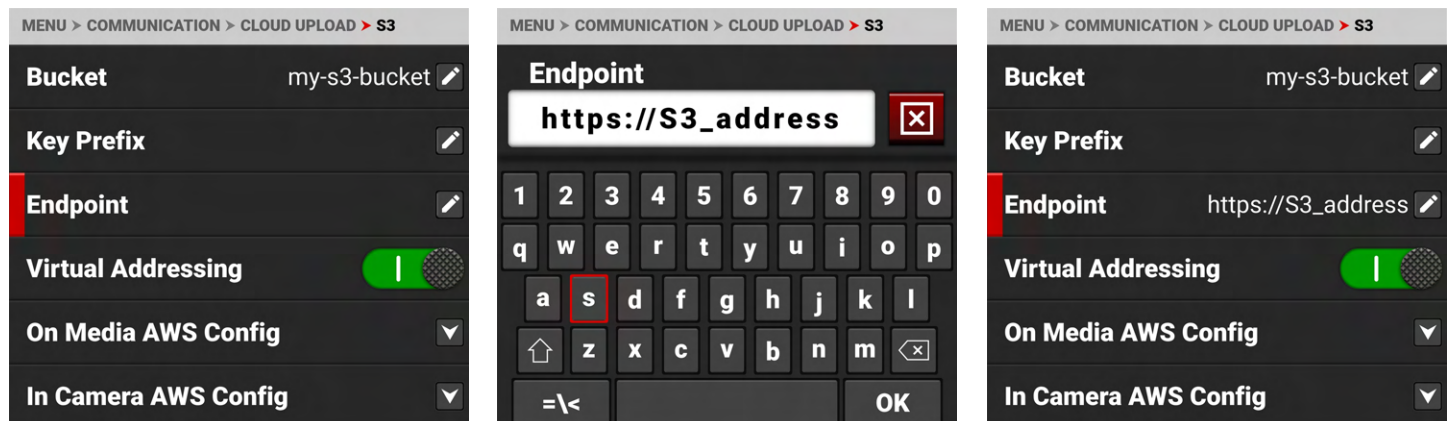


The first screenshot shows the 'MENU > COMMUNICATION > CLOUD UPLOAD > S3' path. The 'Endpoint' field is highlighted with a red bar. The second screenshot shows the same path, but the 'Endpoint' field is now filled with 'https://S3_address' and a keyboard is displayed with the letter 's' highlighted. The third screenshot shows the same path, with the 'Endpoint' field filled with 'https://S3_address' and a red bar highlighting the 'Virtual Addressing' toggle.

VIRTUAL ADDRESSING

Virtual Addressing is typically enabled. However, you must disable it when interfacing with some S3-compatible storage. Contact your S3 administrator for more information.


ON MEDIA AWS CONFIG

Use On Media AWS Config to select an AWS configuration stored on the media card in the aws folder (/aws).

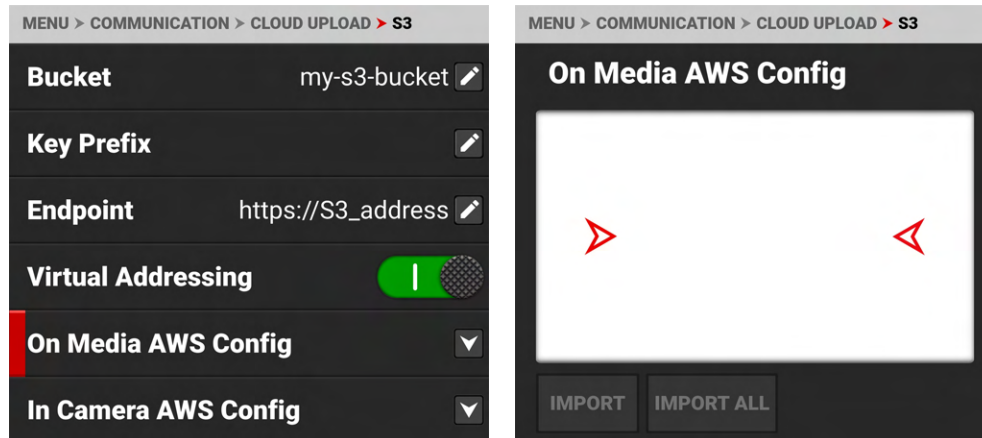

IN CAMERA AWS CONFIG

Use In Camera AWS Config to export or delete AWS configurations stored on the camera.

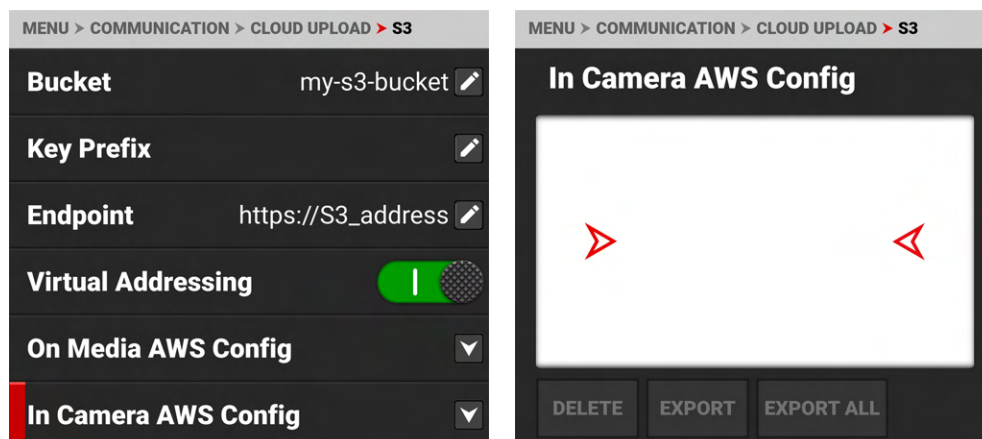

AWS Configuration and Credentials files contain important information for connecting to the AWS bucket, such as region, and access ID / key. AWS CLI tools generate these files when you enter "aws configure". You can also create AWS Configuration and Credentials files manually.

Examples of the AWS configuration and credentials files:

config:


```
[default]
region = us-west-2
```

credentials:

```
[default]
aws_access_key_id = AKIAIOSFODNN7EXAMPLE
aws_secret_access_key = wJalrXUtnFEMI/K7MDENG/bPxRfiCYEXAMPLEKEY
```

SYSTEM SETTINGS MENU

The System Settings menu contains the camera system configuration settings.

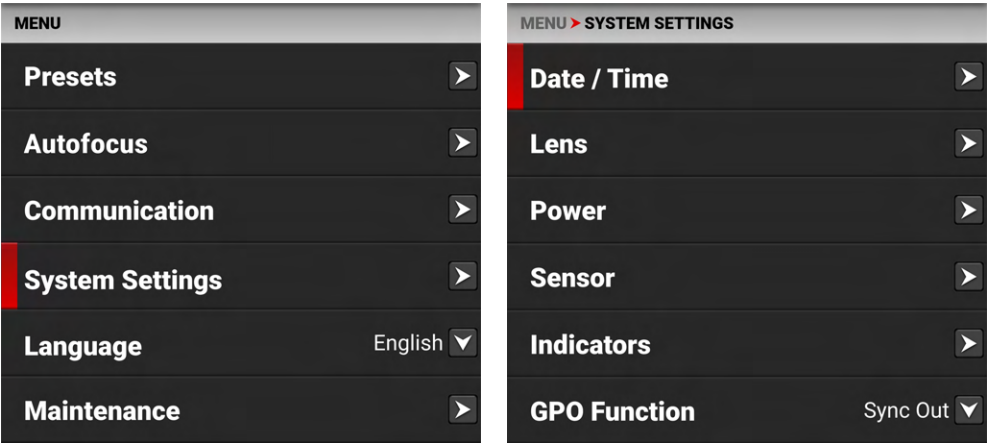


Use the System Settings menu to configure the camera system settings:

ITEMS	DETAILS
Date / Time	Date and time settings
Lens	View lens status information and access the lens adjustments
Power	DC and battery status
Sensor	Adjust sensor timing
Indicators	Enable or disable the record sounds and the front Tally LED
GPO Function	Select the General Purpose Out function
Status Settings	Shutter mode, aperture increments, and focus length units settings
System Status	Information about the camera's type, PIN, FW, and runtime

DATE / TIME

Use the Date / Time menu to reset the internal clock of the camera. The time and date are timestamped on R3D® files when recording to the media. The camera uses the 24-hour clock convention (military time). For example, enter 2:35 p.m. as 14:35:00.

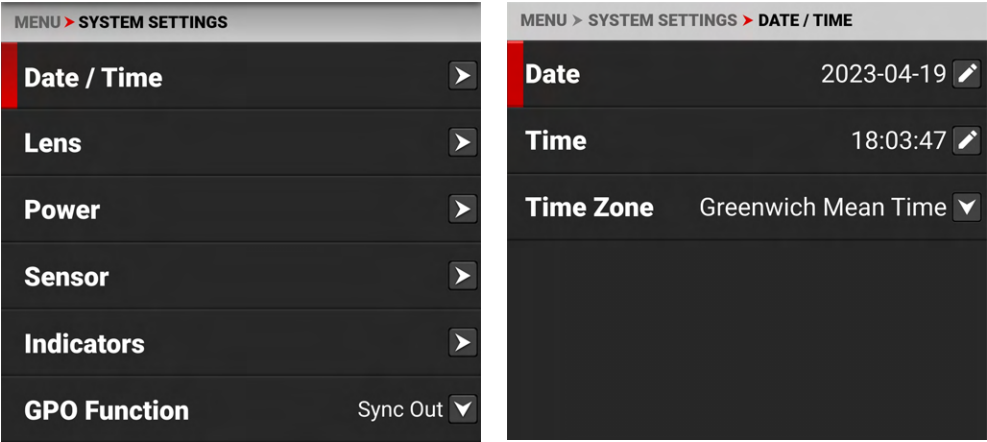


The Date / Time menu items include:

ITEMS	DETAILS
Date	Date in YYYY-MM-DD format
Time	24-hour format
Time Zone	Global time zones


DATE

Use Date to enter the date using the touchscreen keypad:

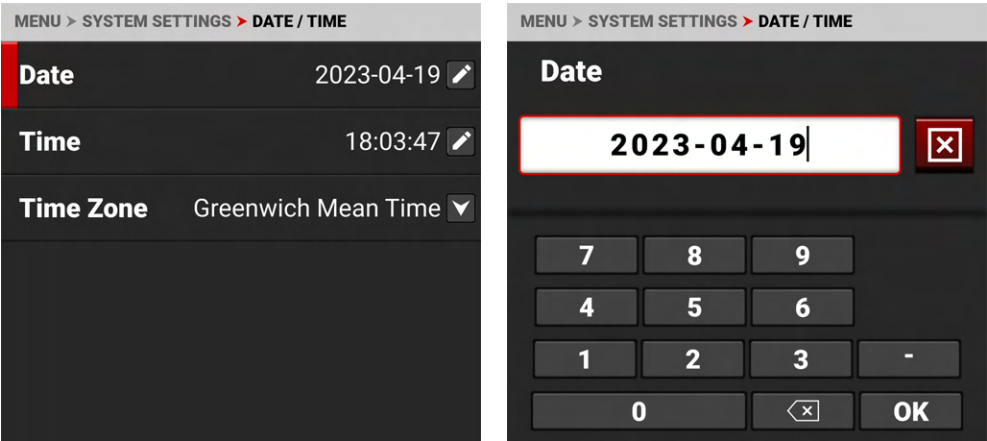


TIME

Use Time to enter the time in 24-hour military format using the touchscreen keypad:

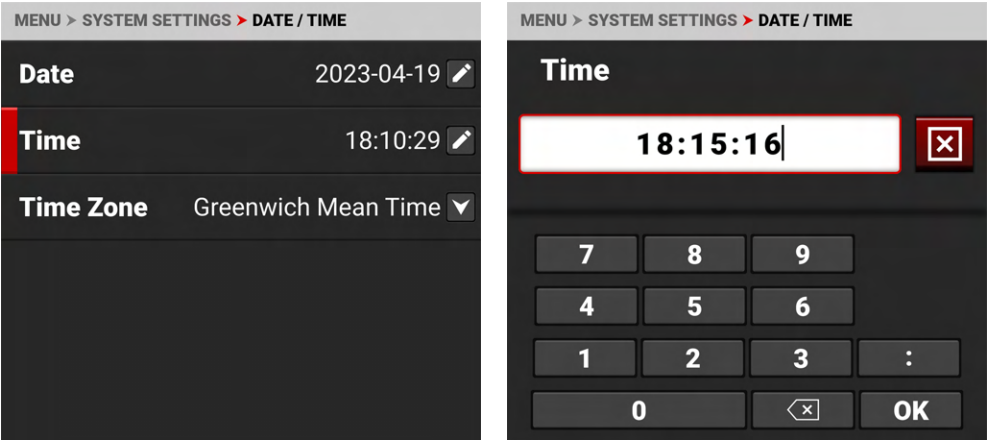


TIME ZONE

Use Time Zone to select the local time zone for where the camera is located.

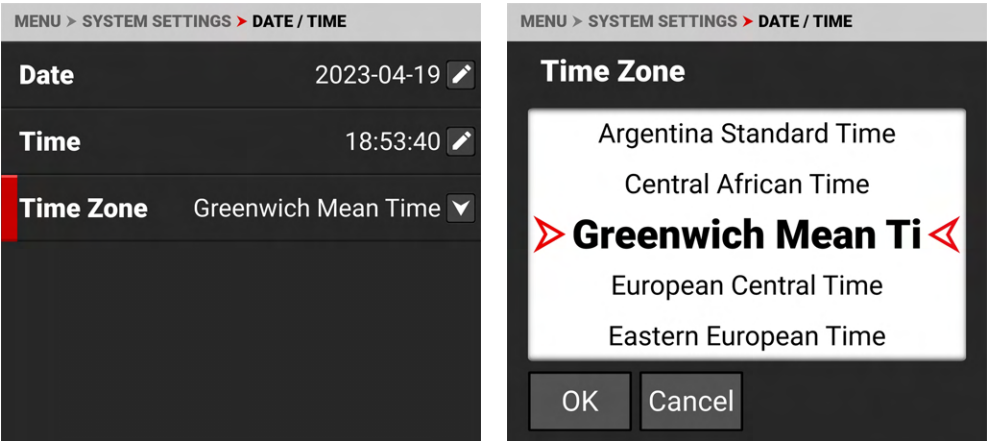

LENS

Use Lens to view information about the attached lens.

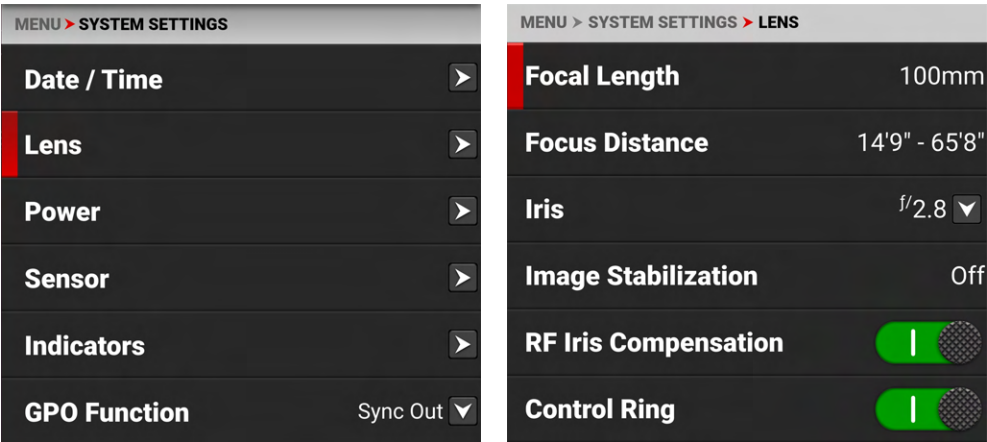


The information you can view from Lens includes:

ITEMS	DETAILS
Focal Length	Displays the lens focal length value
Focus Distance	Displays the lens focal distance value
Iris	Lens Iris menu
Image Stabilization	Displays the lens image stabilization status
RF Iris Compensation	Enables RF Iris Compensation
Control Ring	Enables the lens control ring
Control Ring Mode	Control Ring Mode settings
/i Data	View the PL mount lens /i Data information

IRIS

Use the Iris menu to select the camera lens f-stop. Tap Edit to open the keypad and enter the f-stop manually.

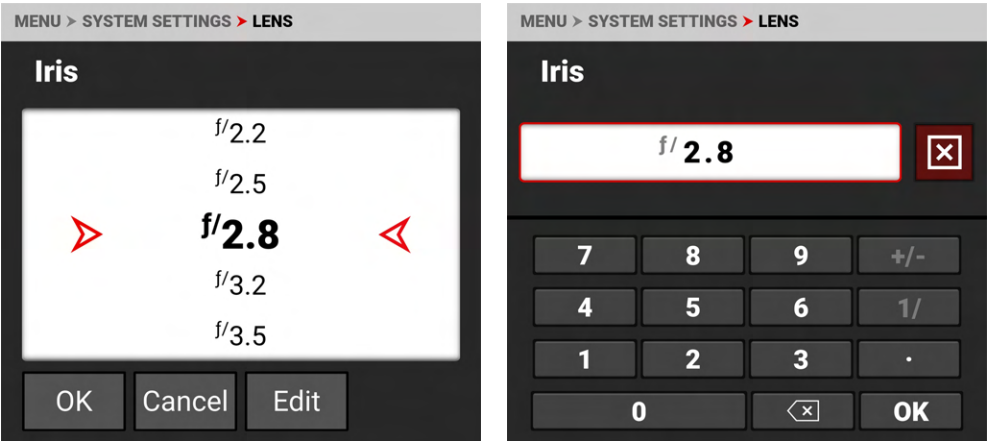


RF IRIS COMPENSATION

Use RF Iris Compensation to compensate for iris position shifting that can occur with certain RF zoom lenses as you change the focal length. This compensation keeps the iris reasonably maintained when the focal length is changed after you set the iris. When enabled, a small iris fluttering may be visible during zooming. You can disable RF Iris Compensation to stop the iris fluttering.

CONTROL RING MODE

Use Control Ring Mode to select the camera setting you want the Control Ring to adjust.

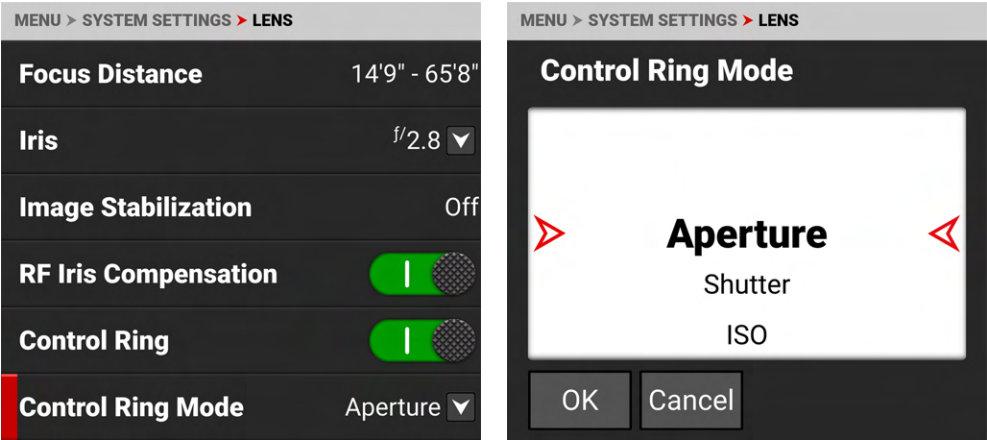


The modes you can select include Aperture (Iris, default), Shutter, ISO, White Balance, LCD Magnify, SDI Magnify, LCD + SDI Magnify, False Color Cycle, Peaking Cycle, and Tools Cycle.

/i DATA

Use /i Data to view the PL mount lens /i Data information.

NOTE: This menu item is only available when using a /i Data capable PL mount and lens.

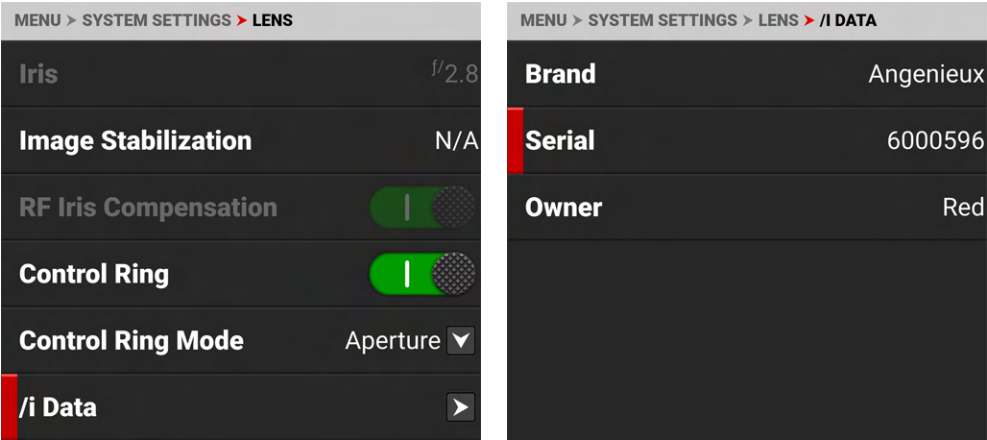

You can view the lens Brand, Serial number, and Owner name.

POWER

Use the Power menu to view the various camera power status indicators:


MENU > SYSTEM SETTINGS		MENU > SYSTEM SETTINGS > POWER	
Date / Time	>	DC-IN Voltage	14.4V
Lens	>	DC-IN Amperage	1.2A
Power	>	BAT-1 Voltage	7.6V
Sensor	>	BAT-1 % Remaining	86%
Indicators	>	BAT-1 Time Remaining	2.44
GPO Function	Sync Out ▼	BAT-1 Amperage	0.0A

The Power indicators you can view include:

ITEMS	DETAILS
DC-IN Voltage	When DC is connected, this displays the DC Voltage
DC-IN Amperage	When DC is connected, this displays the DC Amps
BAT-1 Voltage	When a battery is connected in the left #1 slot, this displays the battery Voltage
BAT-1 % Remaining	When a compatible battery is connected in the left #1 slot, this displays the % of battery charge remaining
BAT-1 Time Remaining	When a battery is connected in the left #1 slot, this displays the camera operating time remaining
BAT-1 Amperage	When a battery is connected in the left #1 slot, this displays the battery Amps
BAT-2 Voltage	When a battery is connected in the right #2 slot, this displays the battery Voltage
BAT-2 % Remaining	When a compatible battery is connected in the right #2 slot, this displays the % of battery charge remaining
BAT-2 Time Remaining	When a battery is connected in the right #2 slot, this displays the camera operating time remaining
BAT-2 Amperage	When a battery is connected in the right #2 slot, this displays the battery Amps
DC-IN Low Voltage Warning	Set the DC-IN low voltage warning threshold
Power Out	Enables or disables the 5 V / 500 mA power out of the Extension Port

DC-IN LOW VOLTAGE WARNING


Use DC-IN Low Voltage Warning to set the desired DC-IN voltage level to trigger the low voltage warning. The warning displays on the LCD and across Overlay Modes that contain power status (refer to the **Status Bar** section for more information about the status icons).

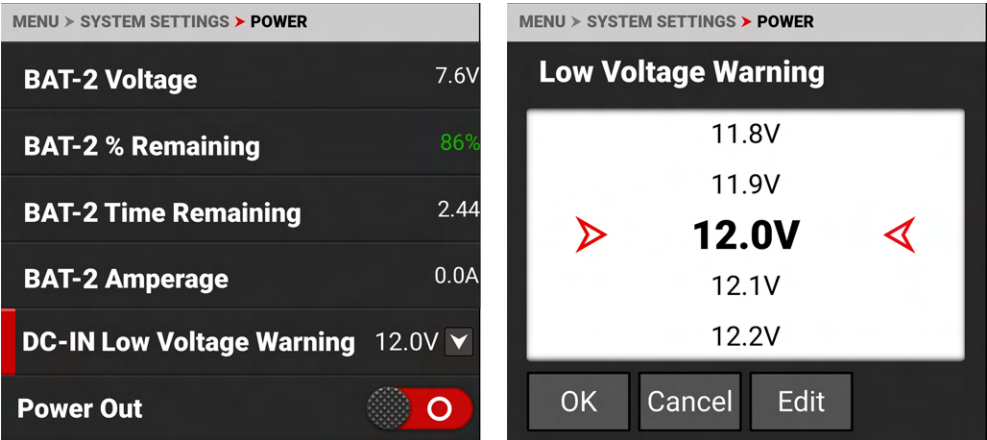

DC-IN Low Voltage Warning only monitors the 11-17V DC-IN and not the 7.4 V BP-style battery system.

SENSOR

Use Sensor to shift the sync signal.

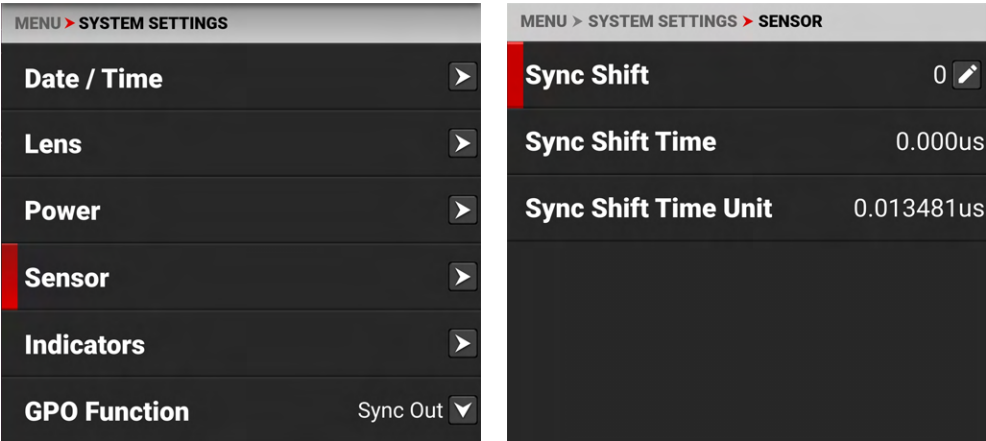


The Sensor menu includes:

ITEM	DETAILS
Sync Shift	Enter the desired amount of sync shift
Sync Shift Time	Displays the Sync Shift time in microseconds (μs)
Sync Shift Time Unit	Displays the units of microseconds (μs) used for the Sync Shift setting

SYNC SHIFT


Use Sync Shift to open the keypad and enter the number of Sync Shift Time Units you want to offset the sensor from the external sync signal. Use this setting to resolve synchronization issues on set such as when working with LED Volumes.

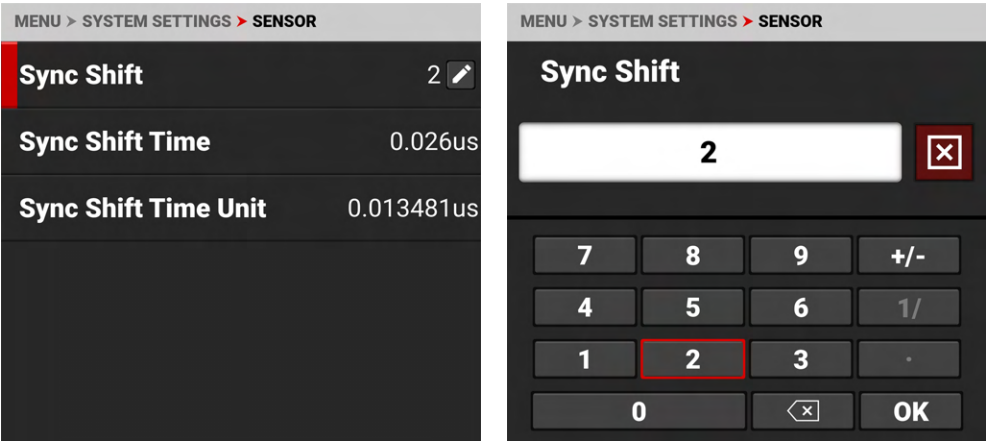

In this example, the Sync Shift is 2 x 0.013481 microseconds ≈ 0.026 microseconds.

INDICATORS

Use the Indicators menu to enable or disable sound and the tally light (refer to the **Camera Body** section for more information about the camera LEDs), and to select the record start indicator and record stop indicator sounds.

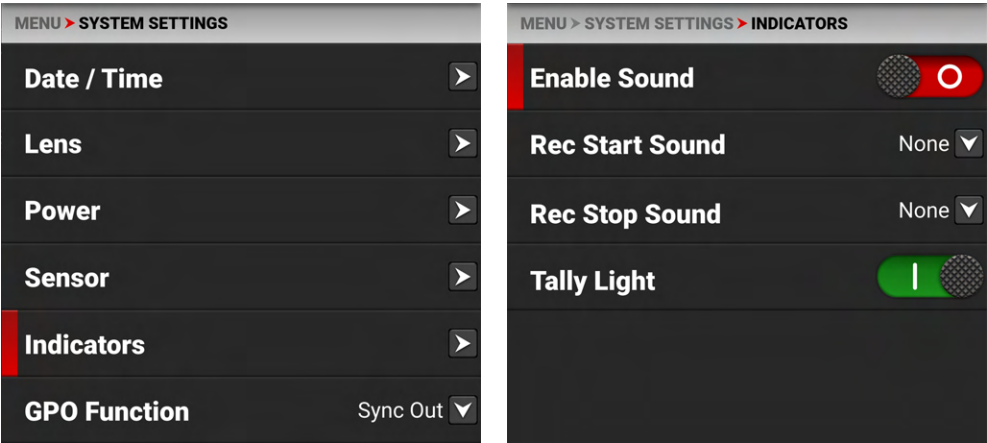


ENABLE SOUND

Use Enable Sound to allow the selected sounds to play.



REC START SOUND

Rec Start Sound allows you to select the sound to play when you begin a recording.

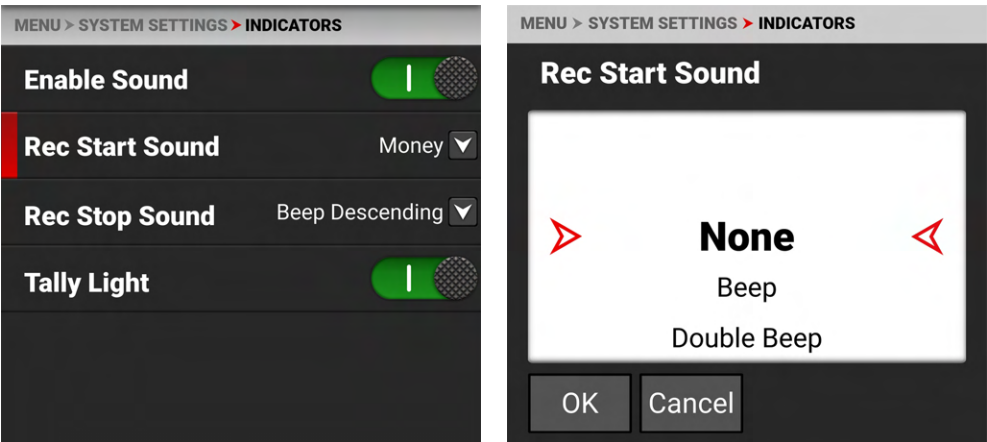


The sounds you can select include:

- None
- Beep
- Double Beep
- Beep Ascending
- Beep Descending
- Money
- Shutter

REC STOP SOUND

Rec Stop Sound allows you to select the sound to play when you end a recording.

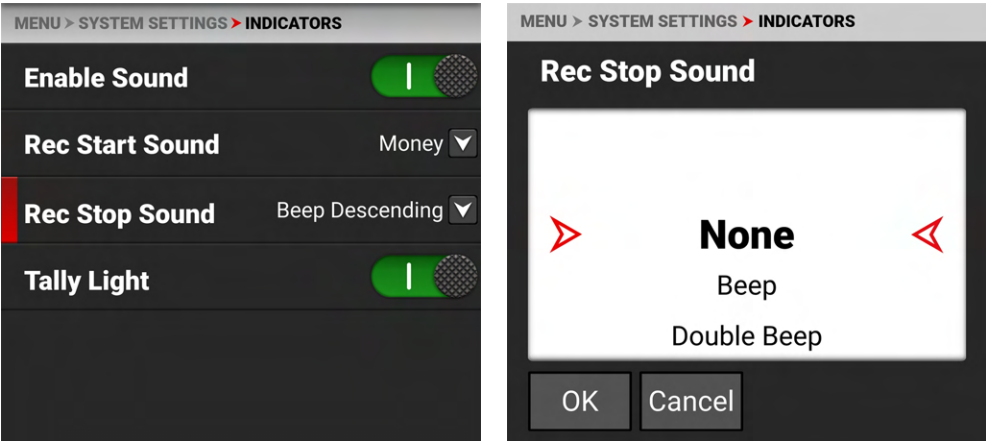

The sounds you can select include:

- None
- Beep
- Double Beep
- Beep Ascending
- Beep Descending
- Money
- Shutter

TALLY LIGHT


Use Tally Light to enable or disable the front recording tally LED.



For more information, refer to the [Camera Body](#) LED section.

GPO FUNCTION

Use the GPO Function menu to select the General Purpose Out function of the Extension port.

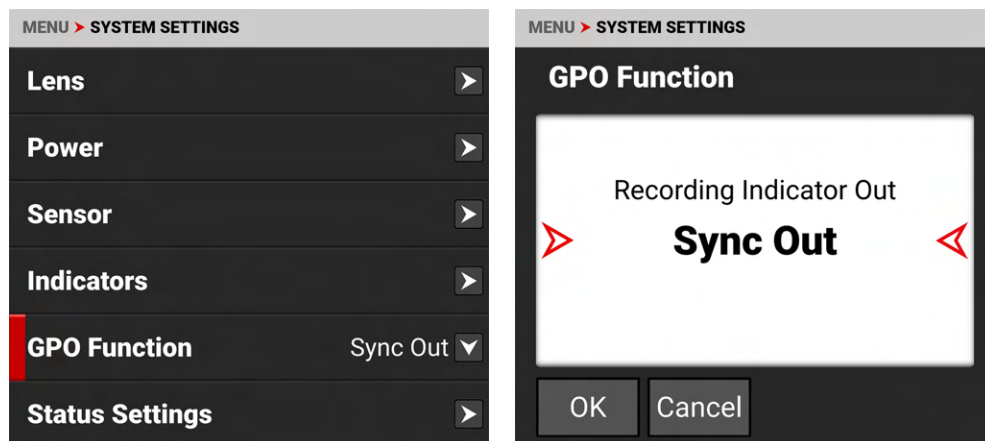

You can select the following General Purpose Out functions for the Extension port:

- Recording Indicator Out
- Sync Out

RECORDING INDICATOR OUT

The Recording Indicator Out function sends a signal out of the Extension port GPO pin when the camera is recording.


SYNC OUT

The Sync Out function sends a Sync signal out of the Extension port GPO pin.

For more information, refer to [Extension Port](#).

STATUS SETTINGS

Use the Status Settings menu to select the shutter display mode, aperture increment, and focus distance units displayed in the camera's menus.

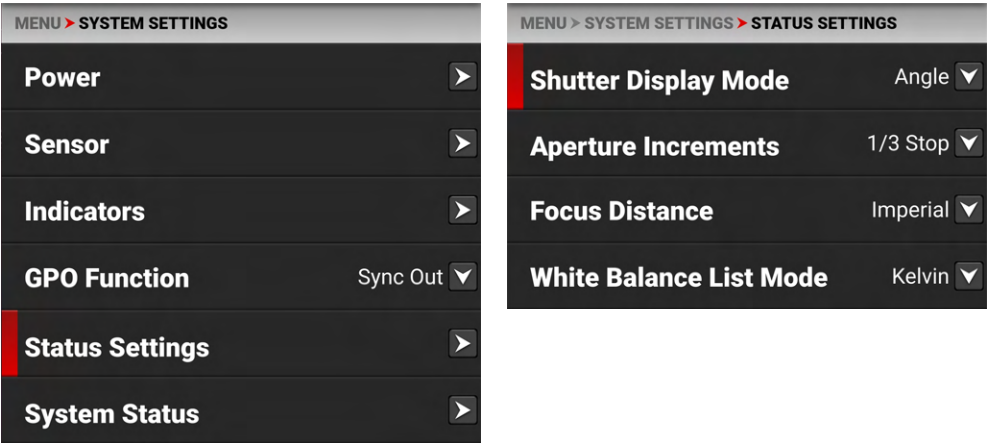


The Status Settings that you can configure include:

ITEMS	DETAILS
Shutter Display Mode	Select a time-fraction or an angle for the shutter menu display unit
Aperture Increments	Select 1/4 or 1/3 f-stop increments
Focus Distance	Select the focus distance units (Metric or Imperial)
White Balance List Mode	Select Kelvin or White Balance Presets
ND Display Mode	When attached, select ND filter Stops or Density display modes
ND Increments	When attached, select the ND increment size

SHUTTER DISPLAY MODE


Use Shutter Display mode to select the way that the camera displays the **Shutter** setting in the menu.

When select Angle, the **Shutter** menu displays the choices in degrees. When you select Time, the Shutter menu displays the choices in fractions of a second.

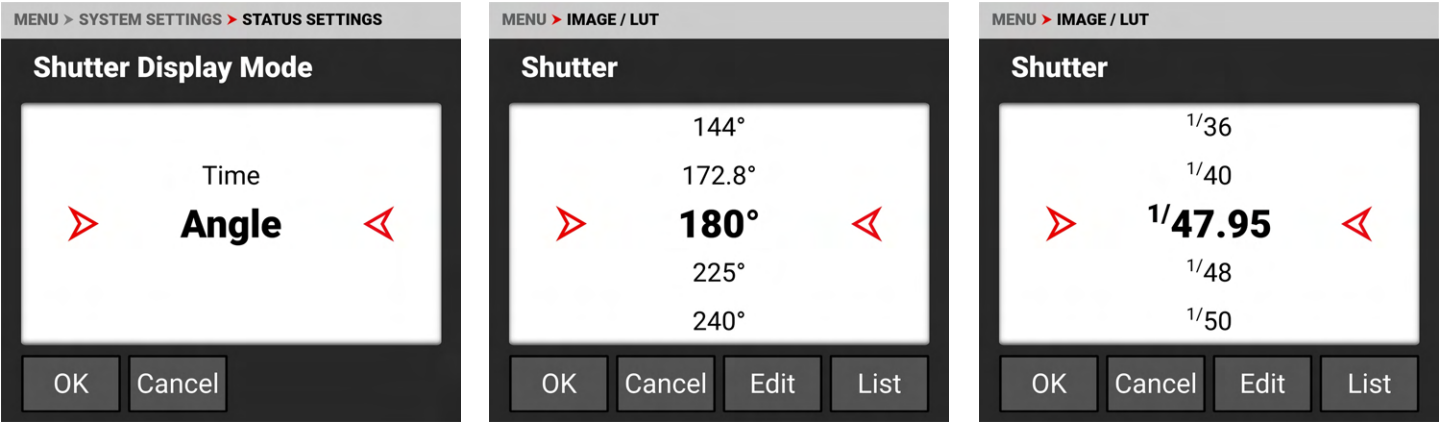


APERTURE INCREMENTS

Use Aperture Increments to select one fourth increments or one third increments for the camera f-stop settings. The default is 1/3 Stop.

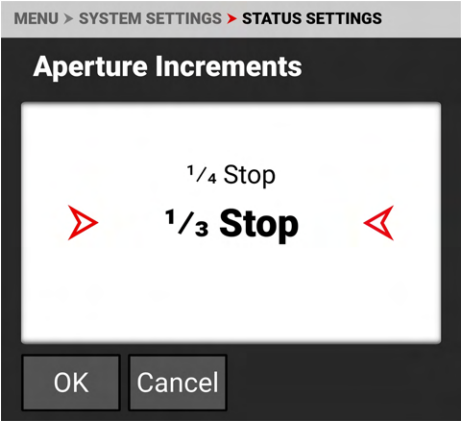


FOCUS DISTANCE

Use Focus Distance to select Imperial or Metric units for the **Lens** Focus Distance display. The default is Imperial.

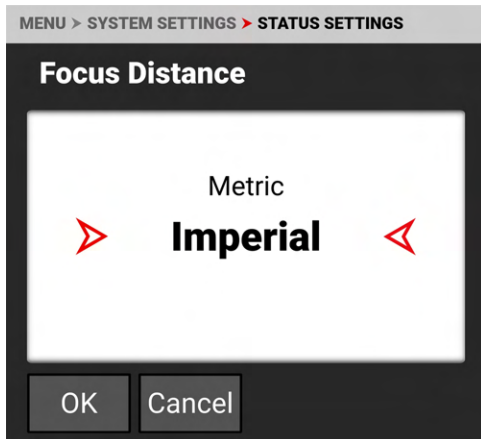


WHITE BALANCE LIST MODE

Use White Balance List Mode to select Kelvin or Presets for the White Balance Color Temperature menu. The default is Kelvin.

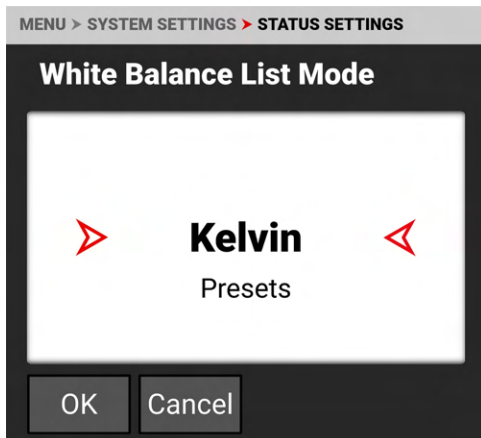


ND DISPLAY MODE

Use ND Display Mode to select Stops or Density display modes when displaying ND settings.

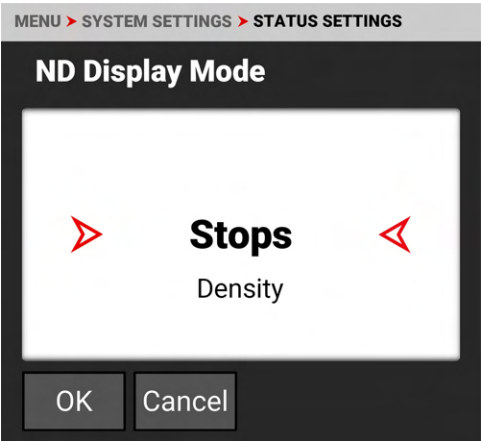


ND INCREMENTS

Use ND Increments to set the increment size for increasing or decreasing the ND stop.

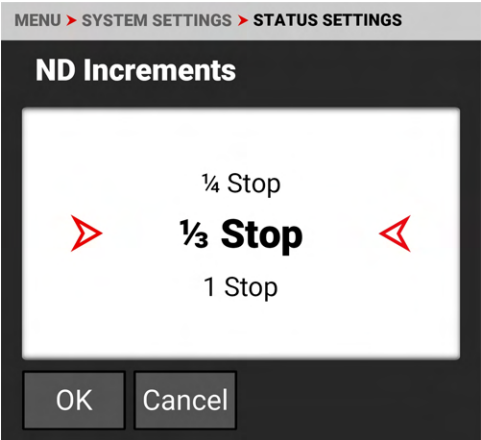

SYSTEM STATUS


Use the System Status menu to view camera information and to view temperature readings.

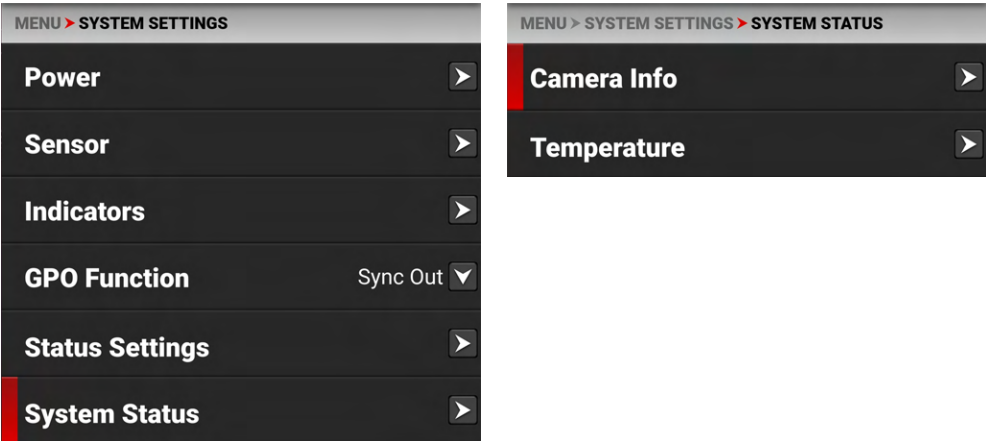

The system status information you can view includes:

ITEMS	DETAILS
Camera Info	Camera information
Temperature	Camera temperatures


CAMERA INFO

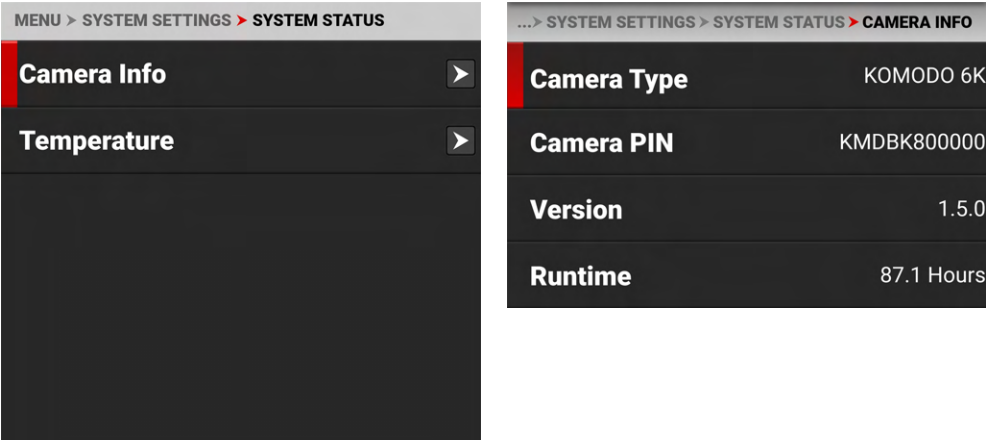

The camera information you can view includes:

ITEMS	DETAILS
Camera Type	Displays the camera description
Camera PIN	Displays the camera personal identification number (PIN)
Version	Displays the firmware version number installed on the camera
Runtime	Displays the total number of hours that the camera has run

TEMPERATURE

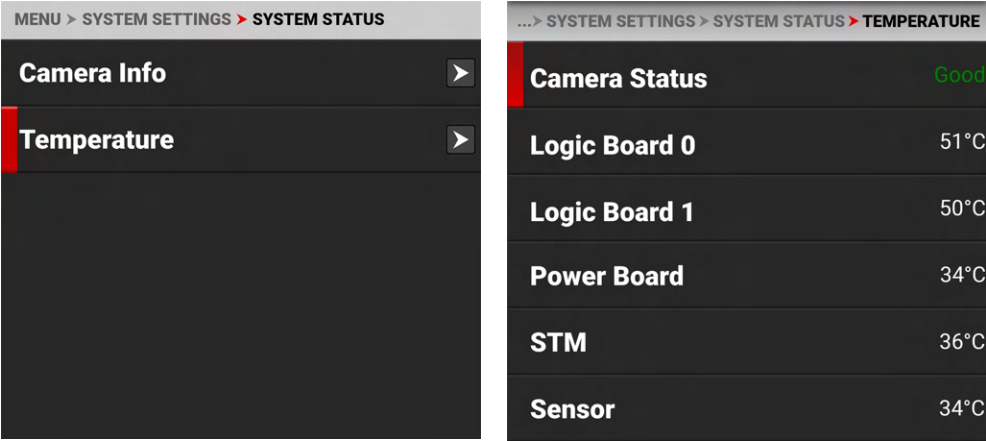


The camera temperatures you can view include:

ITEMS	DETAILS
Camera Status	Displays Good (green) or Overheating (yellow)
Logic Board 0	Displays the Celsius temperature of Logic Board 0
Logic Board 1	Displays the Celsius temperature of Logic Board 1
Power Board	Displays the Celsius temperature of the power IC board
STM	Displays the Celsius temperature of the power STM IC
Sensor	Displays the Celsius temperature of the sensor
Calibration Temperature	Displays the Celsius temperature of the sensor at the last calibration

LANGUAGE MENU

The Language menu contains the languages you can select for the user interface (UI).

From the Onboard LCD touchscreen menu, tap Language:

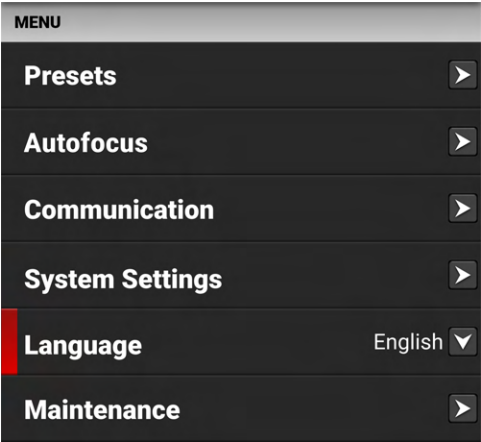



The languages you can select include:

- English
- Simplified Chinese
- French
- German
- Japanese
- Spanish

MAINTENANCE MENU

The Maintenance menu contains the settings you use to perform various maintenance tasks on your camera.

From the Onboard LCD touchscreen menu, tap Maintenance:

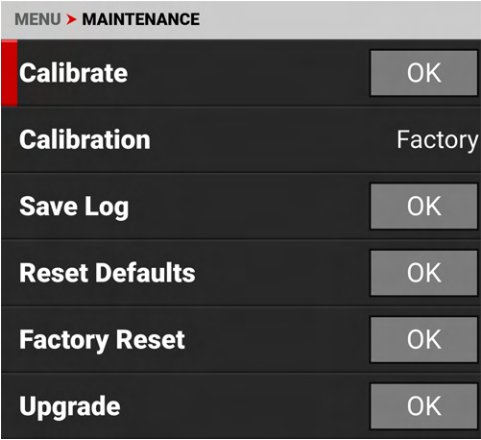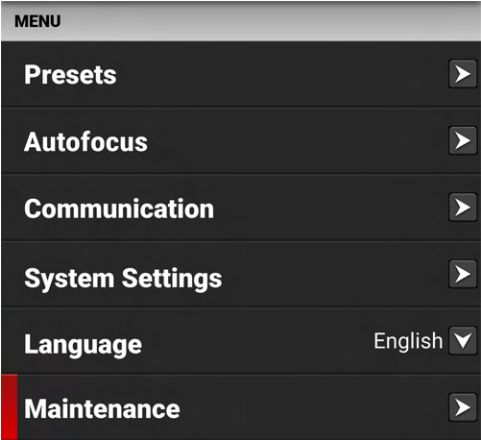


Use the Maintenance menu to perform the following camera maintenance tasks:


ITEM	DETAILS
Calibrate	Performs calibration
Calibration	List of calibration options
Save Log	Saves the camera log files to the media
Reset Defaults	Resets the camera settings to their default settings
Factory Reset	Restores the camera to the factory settings
Upgrade	Updates the firmware

CALIBRATE


Use Calibrate to start the camera calibration process and create your User calibration profile. Only calibrate the camera after it has reached its operational temperature. This occurs usually within ten minutes after you turn on the camera in the filming environment. Do not calibrate immediately after powering on.

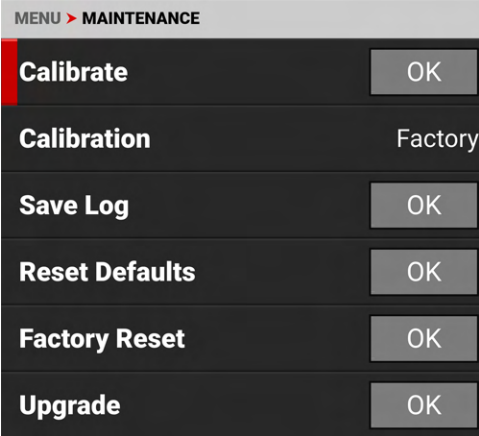

NOTE: Make sure that the mount cap is installed on the camera before you calibrate the camera. Tap OK on the touchscreen to begin calibrating the camera.

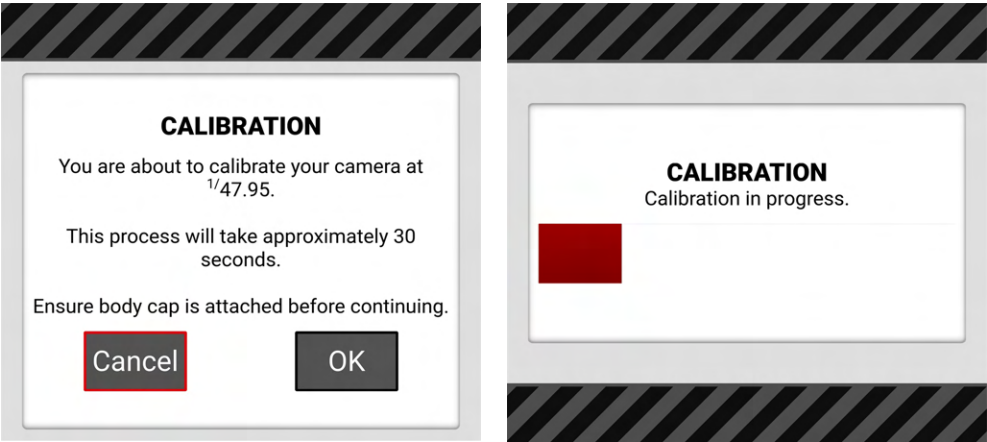


When the camera is finished calibrating, the touchscreen displays the Calibration status message:

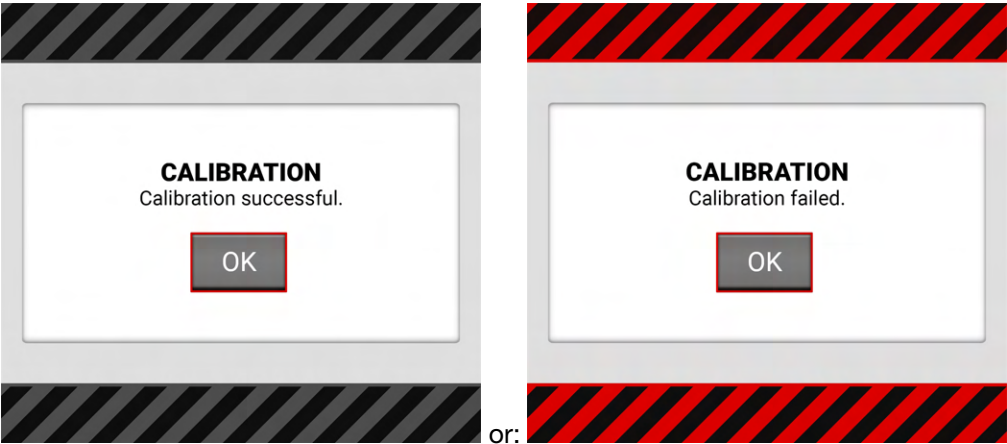

CALIBRATION

Use Calibration to select the active camera Calibration.

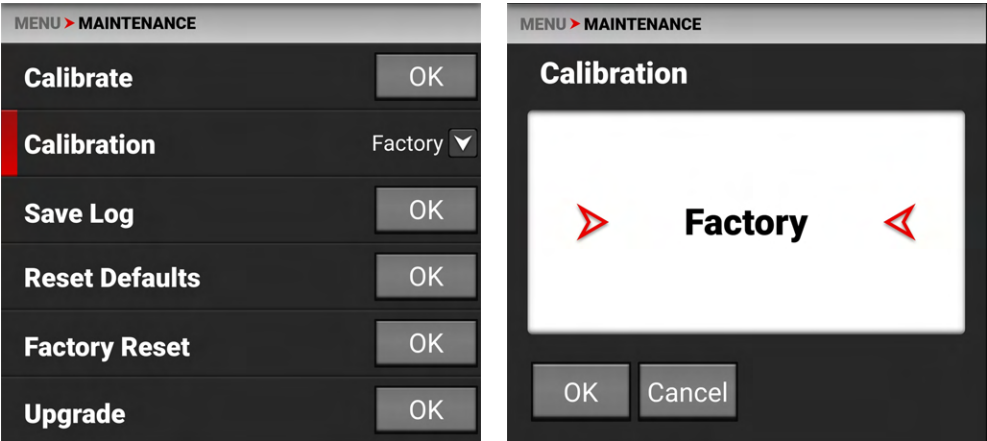


You should always select User calibration. The first time you calibrate the camera, the only choice is Factory. After you perform a calibration, the User calibration profile is added to the list and the camera makes it the default calibration. Every time you calibrate the camera, the User profile is updated. The only time the User profile is removed, is when you perform a Factory Reset.

If User calibration is not available, the camera defaults to Factory calibration. Calibrate the camera to generate the new User calibration profile.


SAVE LOG

Use Save Log to save the camera log to the media.

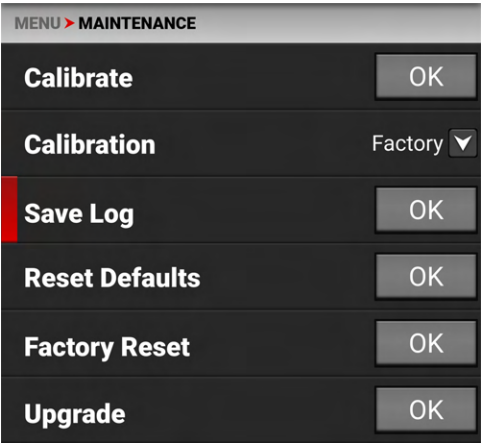


When the media is full, or missing, the camera will display an error message. When there is no error, the success message is displayed.

Error:

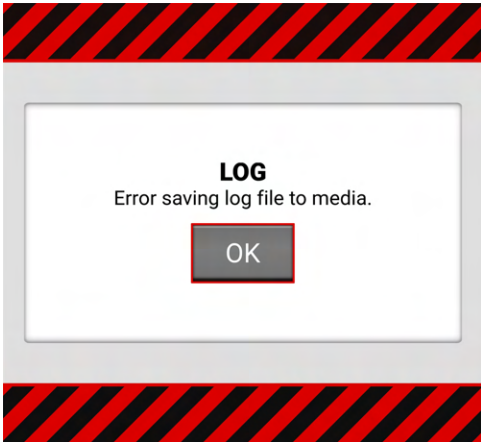


Success:

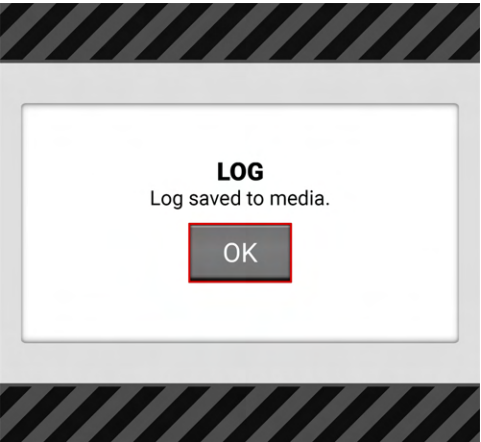

RESET DEFAULTS


Use Reset Defaults to reset the camera to the factory default settings.

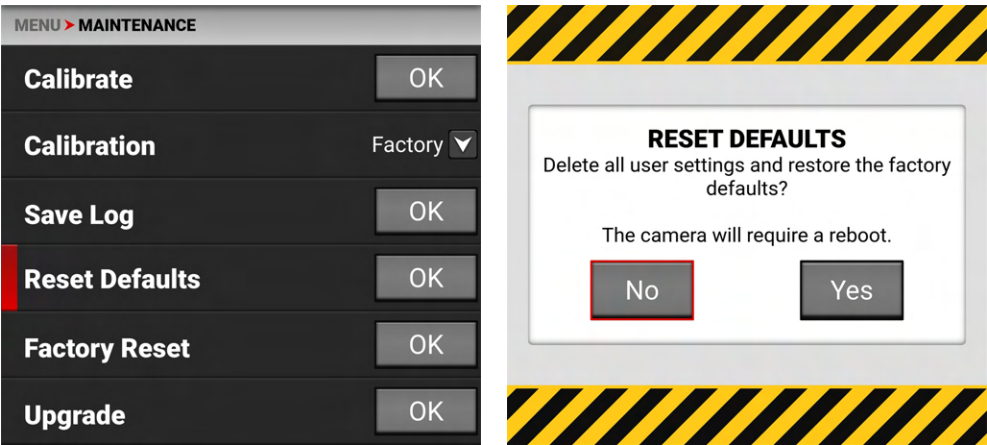

- NOTE:** Resetting the camera will delete all of your menu settings.
- NOTE:** The camera turns off, and then back on to complete the reset process.
- Tap Yes on the touchscreen to reset the camera menus to the default settings.

FACTORY RESET


Use Factory Reset to reset the camera to the factory settings.

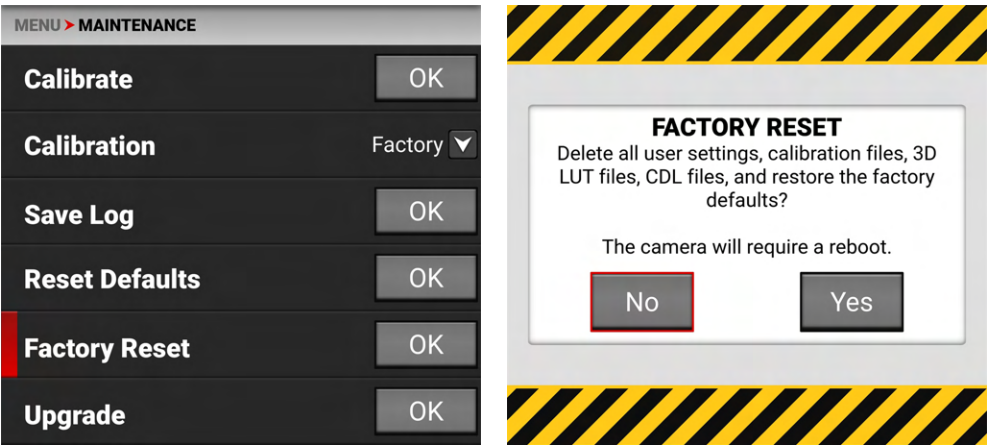

- NOTE:** Resetting the camera will delete all of your settings and remove all imported files. The camera turns off, and then back on to complete the reset process.
- Tap Yes on the touchscreen to reset the camera to the factory settings.

UPGRADE

Use Upgrade to perform a camera firmware update.

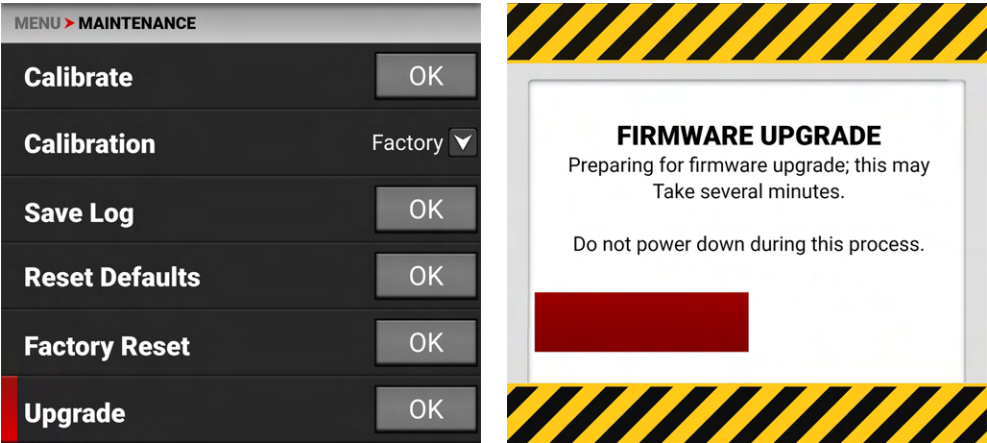

For more information about upgrading the firmware, refer to [Upgrading the Firmware](#).

5. HOW TO

This section describes how you can use the camera features.

WI-FI CONFIGURATION

The camera offers a wireless (802.11g) connection that provides communication support for third-party applications. As with all wireless devices, the communication range varies with the environment and any radio frequency (RF) interference that may be present. You can select a wireless frequency of 2.4 GHz or 5 GHz. For optimal performance, do not obstruct the antenna with any accessory, mounting plate, or mounting rail.


The camera uses **Ad-Hoc** mode to set up the camera as a Wi-Fi hot spot.

The camera uses **Infrastructure** mode to connect to existing Wi-Fi infrastructure.


CONNECTING WIRELESSLY TO AN EXISTING WI-FI NETWORK

This camera uses the WPA2 Wi-Fi protocol.


1. Navigate to the Wi-Fi menu **MENU > COMMUNICATION > Wi-Fi**.

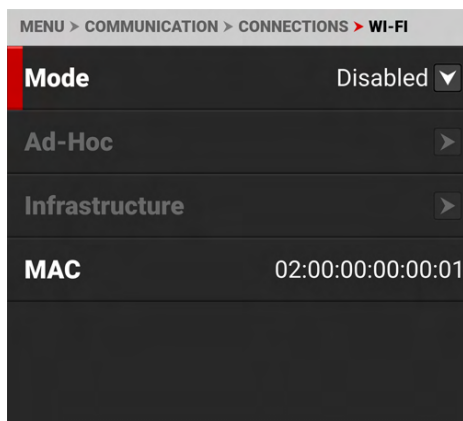


2. From the Mode option, select Infrastructure.

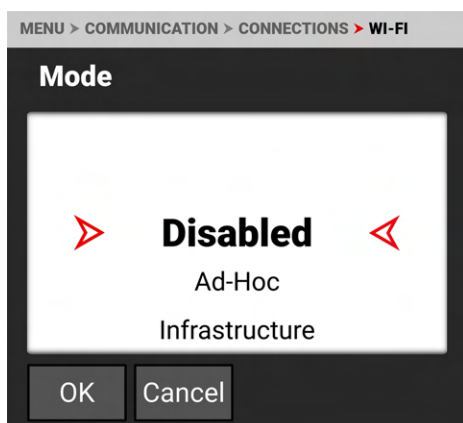


3. From the Infrastructure menu, select Networks:

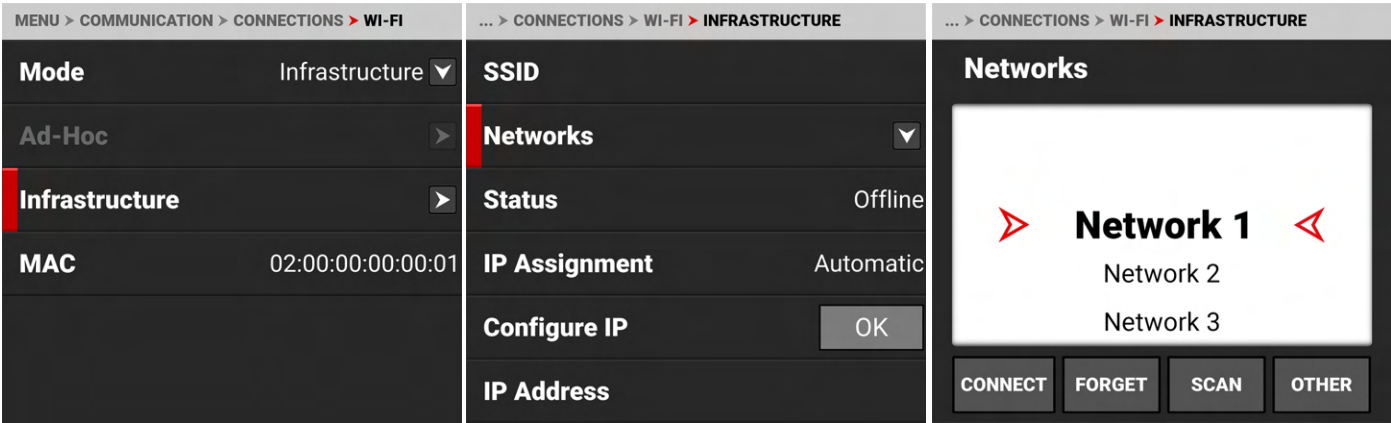

4. Select the network name from the Networks list menu:

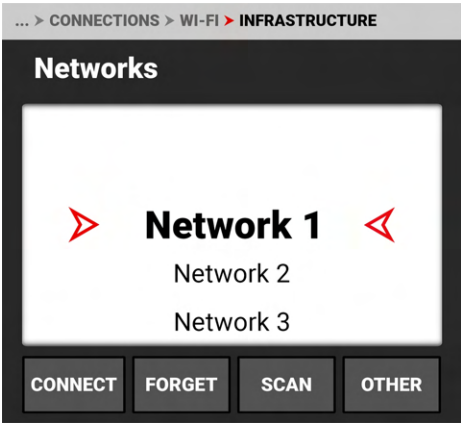


or tap SCAN to scan for available networks and update the Networks list:

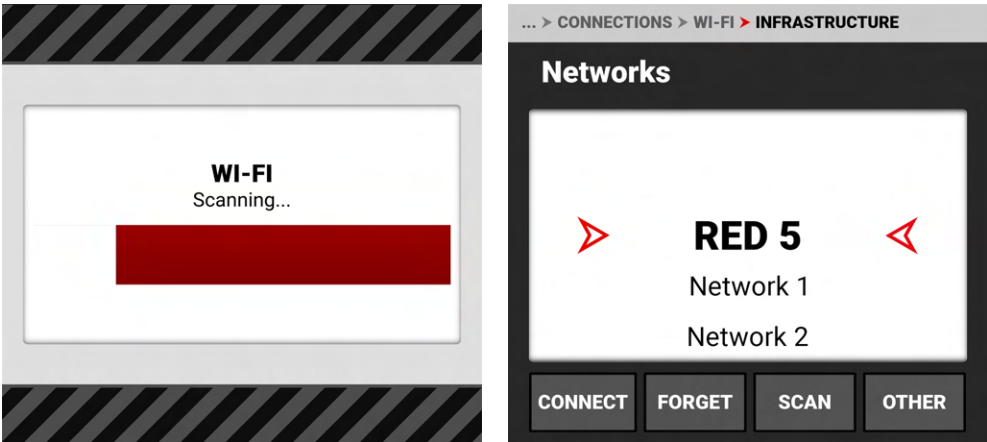


5. Tap CONNECT. The CONNECT screen displays:



6. Tap Passphrase. The Passphrase entry screen displays:

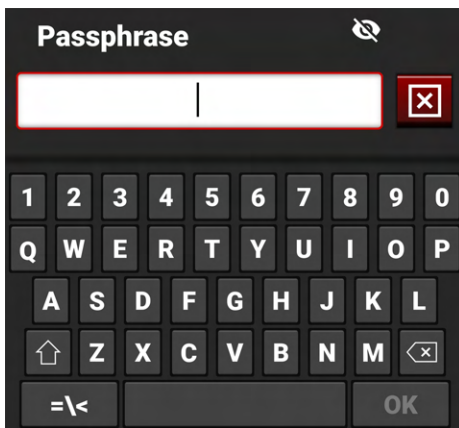


7. Enter the passphrase for the selected network. The passphrase must use a minimum of 8 characters.

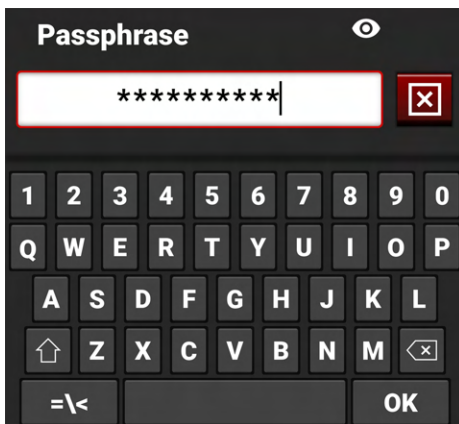

8. Tap OK on the completed Passphrase entry screen. The completed CONNECT screen displays.



9. Tap the Connect button. The camera connects to the selected network:

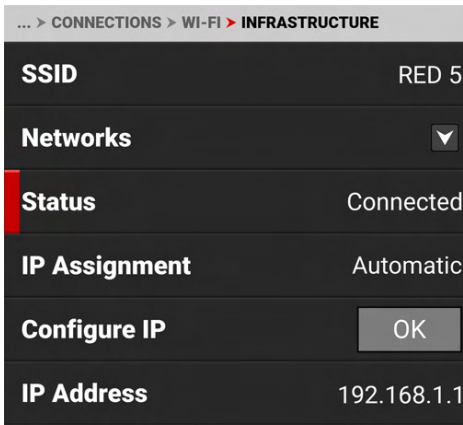

KOMODO LINK ADAPTOR

The **KOMODO Link Adaptor** offers a USB-C connection that provides communication support for Android devices, Apple devices, and Ethernet devices.

This section includes instructions for:

- **Android Configuration**
- **Apple Configuration**
- **Network Configuration**

ANDROID CONFIGURATION

The **KOMODO Link Adaptor** offers a USB-C connection that provides communication support for Android devices.

CONNECTING TO AN ANDROID DEVICE



You must install the **KOMODO Link Adaptor** before you can use USB-C to connect the camera to an Android device.

1. From the Google Play store, download the **RED Control Apps** to the Android device.





2. Connect the Android device to the camera with a USB-C cable.


3. Navigate to the KOMODO Communication menu and select KOMODO Link Adaptor.

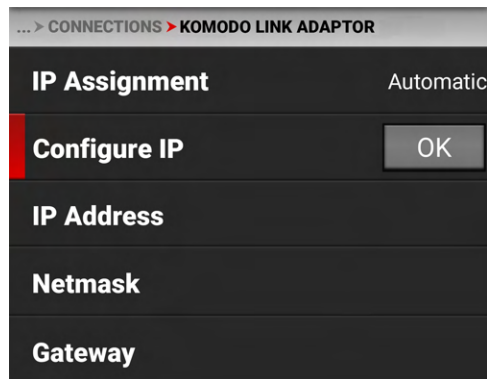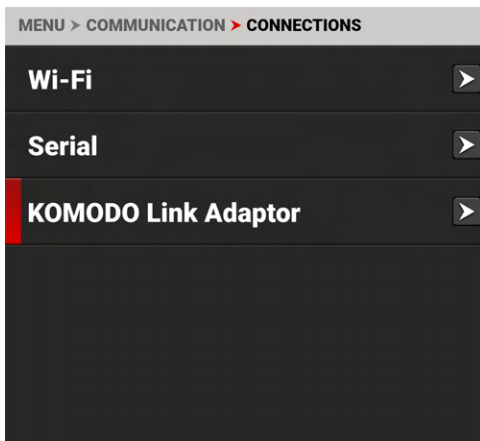


4. Open the Android device settings by tapping the Settings icon (gear).

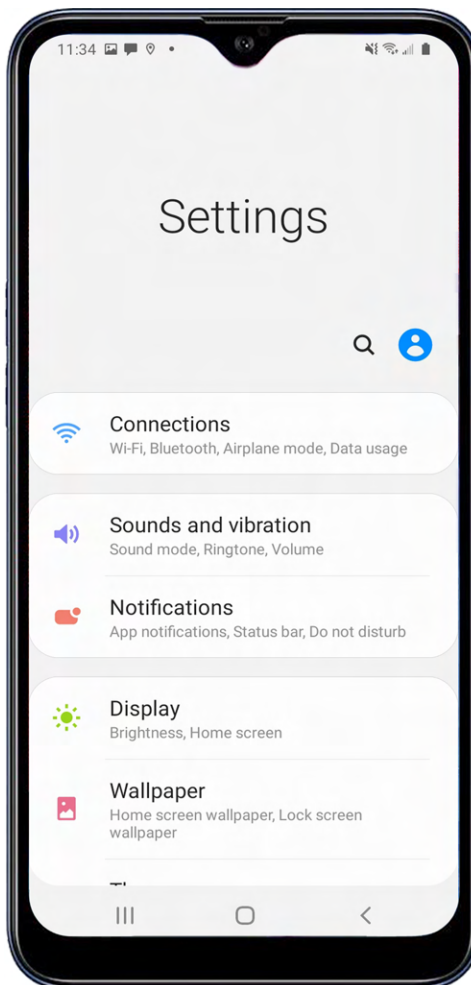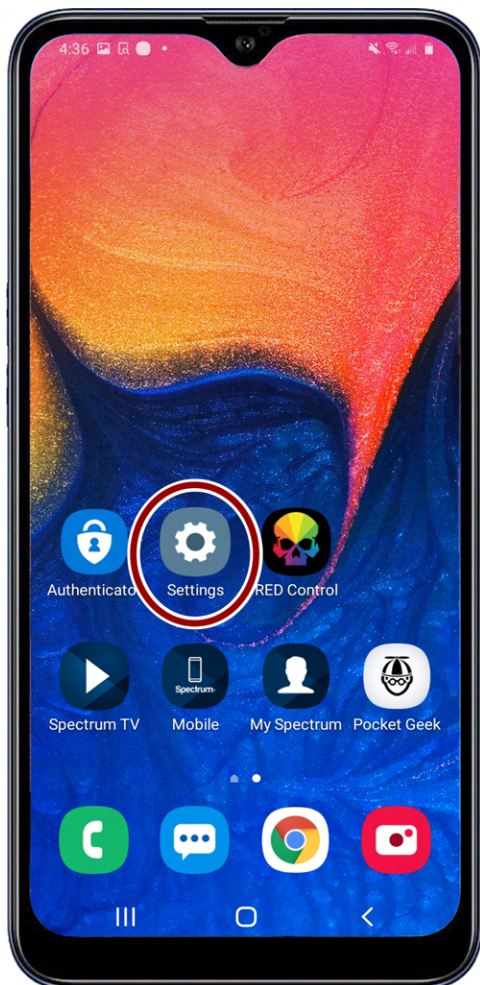

5. Select Connections.

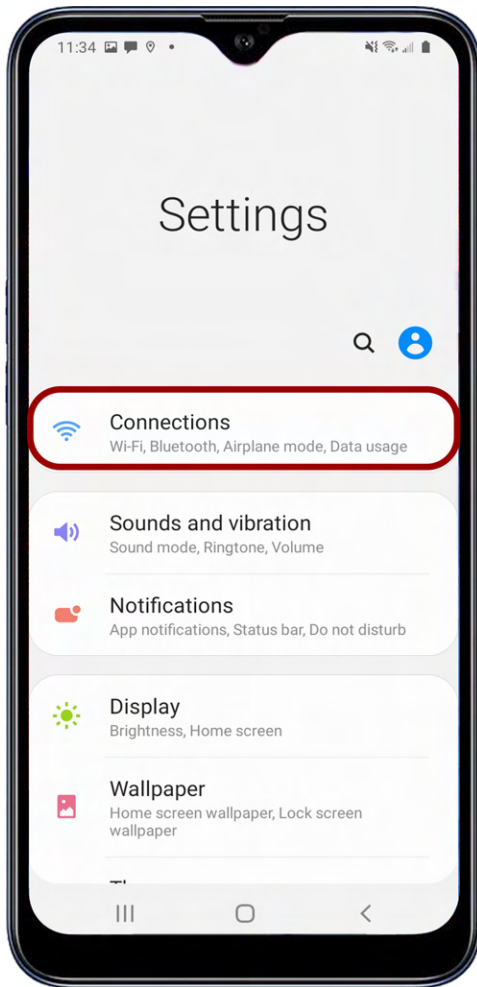


6. Select Mobile Hotspot and Tethering.

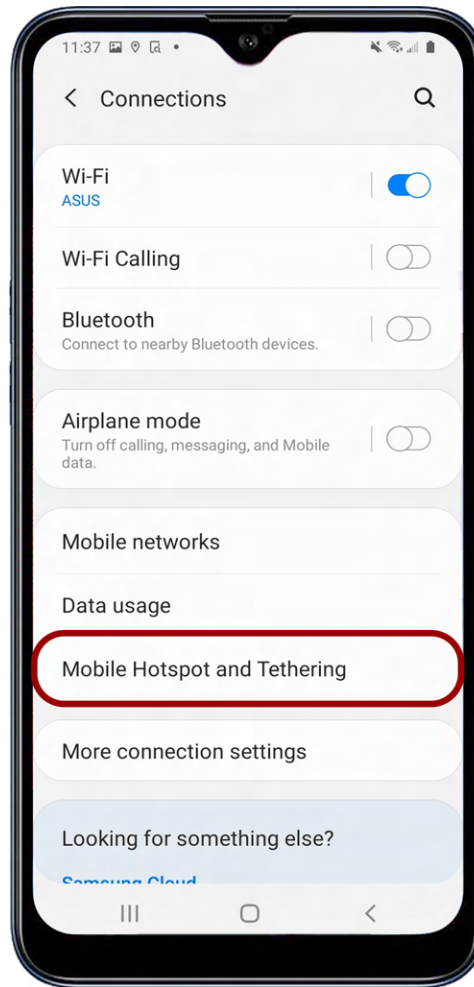

NOTE: Mobile Hotspot and Tethering is only available on Android devices with cellular capability.

7. Enable USB Tethering.

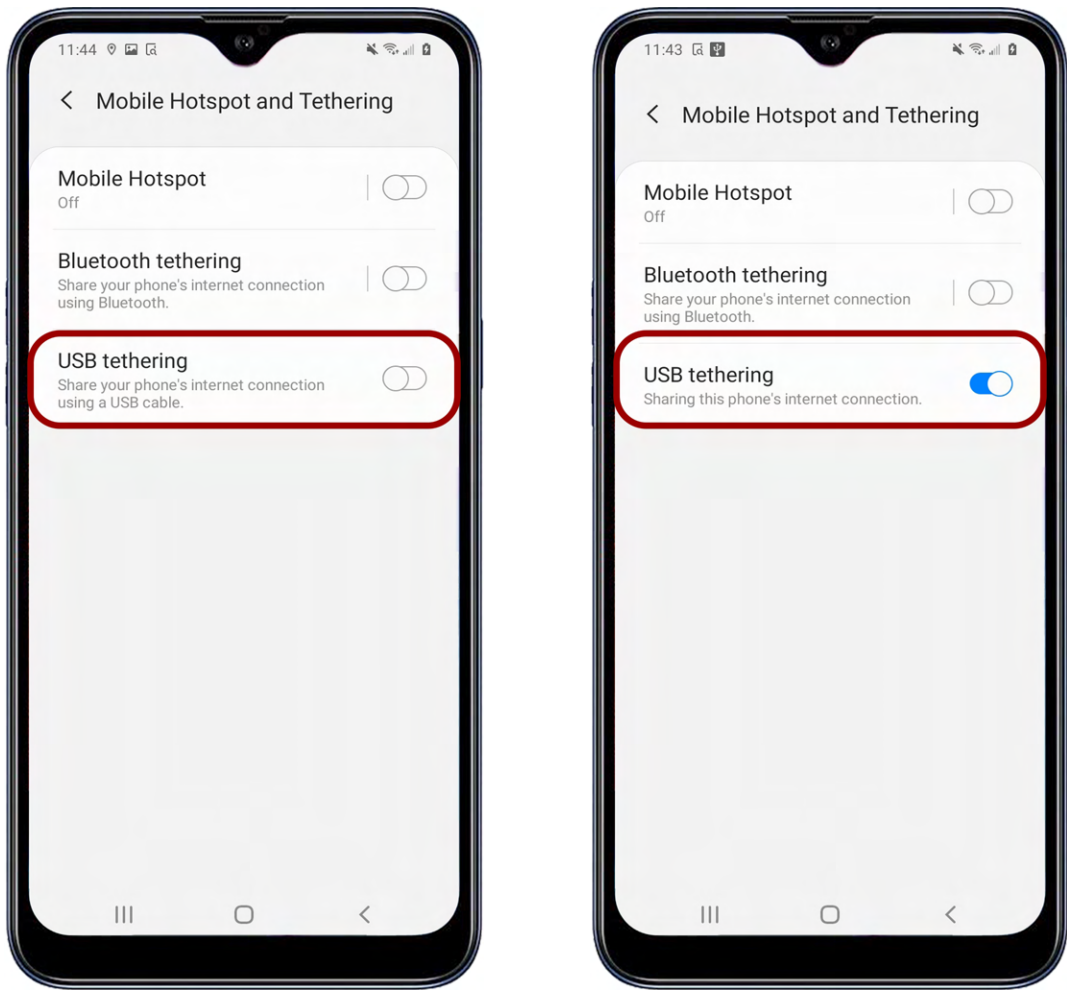


The camera displays the Android device's IP address in the KOMODO Link Adaptor screen:

... > CONNECTIONS > KOMODO LINK ADAPTOR	
IP Assignment	Automatic
Configure IP	OK
IP Address	192.168.42.88
Netmask	255.255.255.0
Gateway	192.168.1.22

8. From the Android device, tap the RED Control icon to open the RED Control app.



The RED Control app displays the camera connection icon.

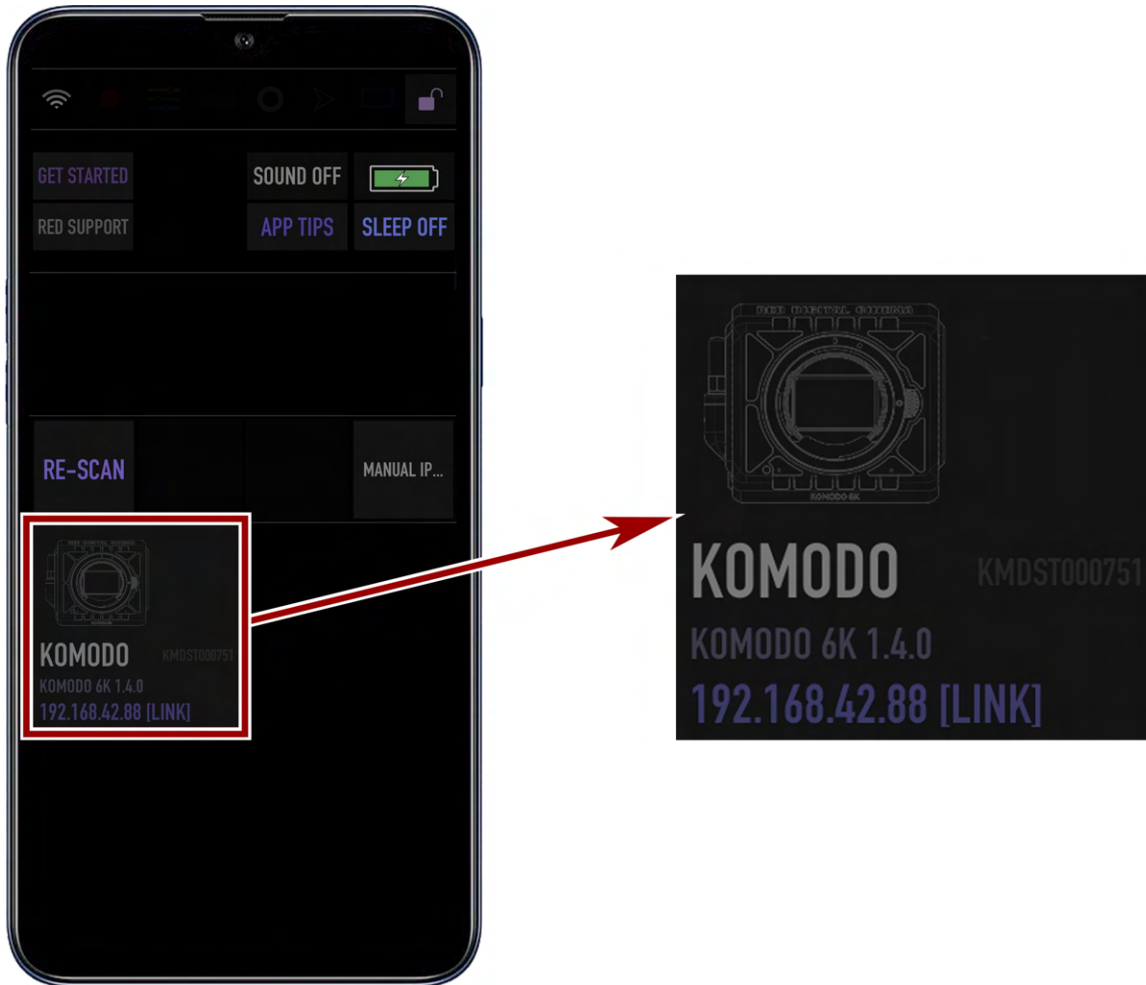

9. Tap the icon to open the RED Control app tools for the tethered camera.



From here you can use the RED Control Apps to monitor and control the camera.

APPLE CONFIGURATION

The **KOMODO Link Adaptor** offers a USB-C connection that provides communication support for Apple devices.

CONNECTING TO AN APPLE DEVICE

You must install the **KOMODO Link Adaptor** before you can use USB-C to connect the camera to an Apple device.



1. From the Apple store, download the **RED Control Apps** to the Apple device.

Note: Scroll to the bottom of the user agreement to accept the agreement.




2. Connect the Apple device to the camera with a USB-C cable.


3. Navigate to the KOMODO Communication menu and select KOMODO Link Adaptor.

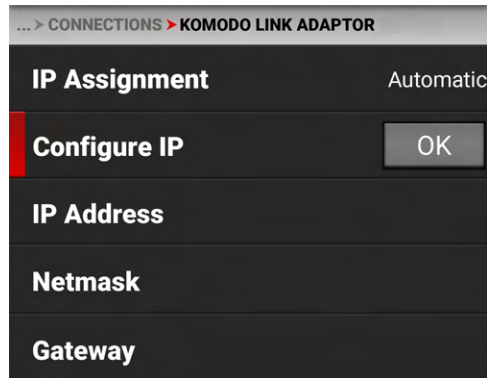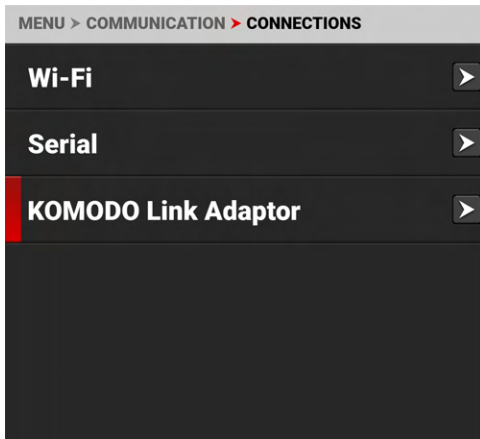


4. Open the Apple device settings by tapping the Settings icon.

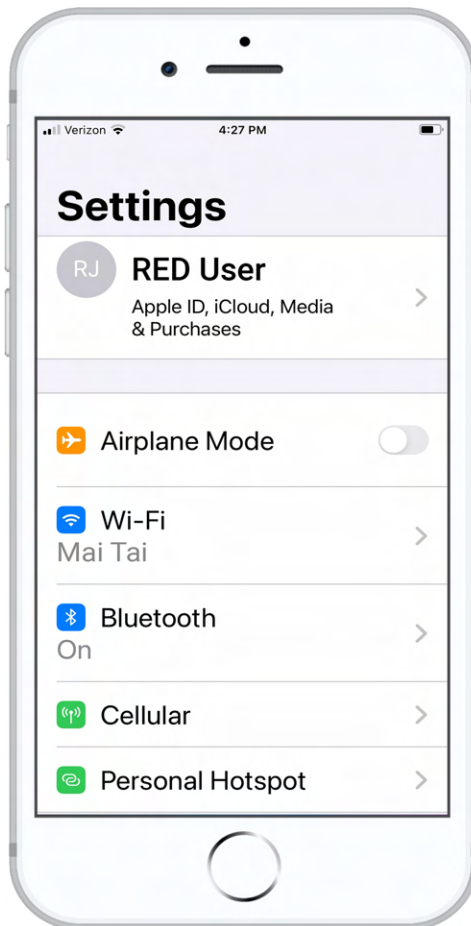


5. Select Personal Hotspot.

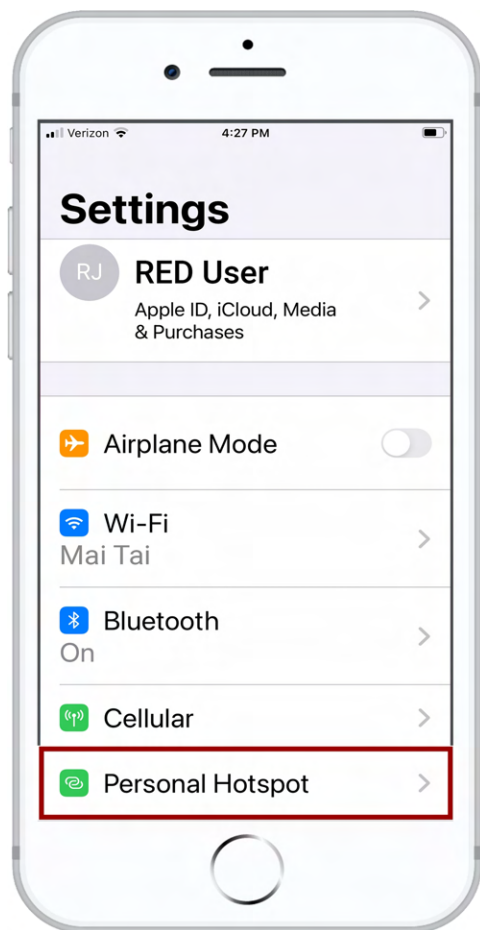

6. Allow others to join.

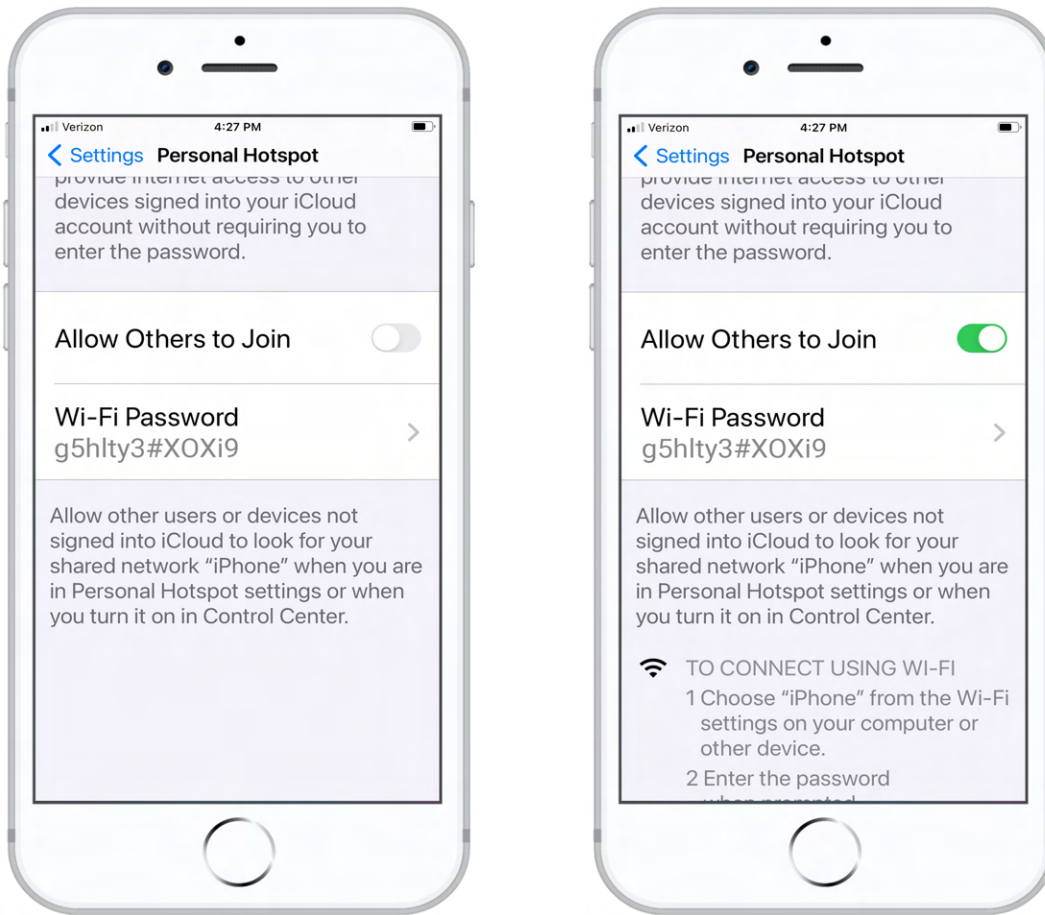

7. The Apple device prompts you to acknowledge that you trust the computer (camera).

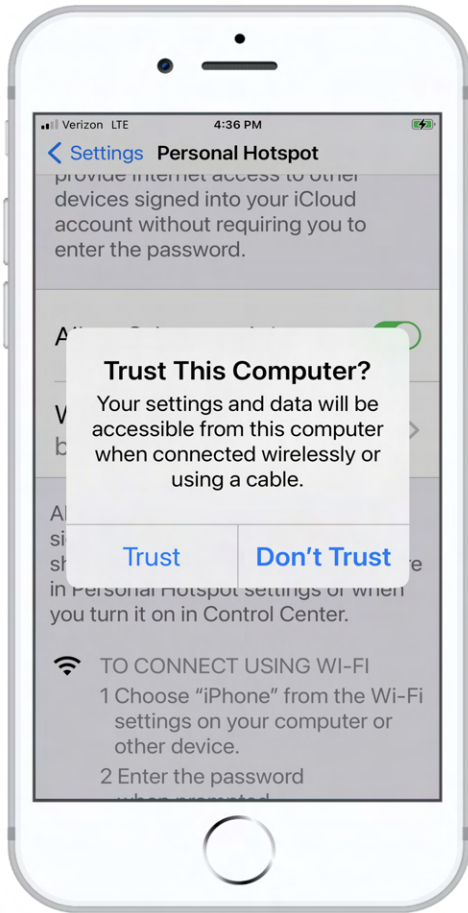

The camera displays the Apple device's IP address in the KOMODO Link Adaptor screen:

... > CONNECTIONS > KOMODO LINK ADAPTOR	
IP Assignment	Automatic
Configure IP	OK
IP Address	172.20.10.2
Netmask	255.255.255.240
Gateway	172.20.10.1


8. From the Apple device, tap the RED Control icon to open the RED Control app.



The RED Control app displays the camera connection icon. The word LINK is visible after the IP address.



9. Tap the icon to open the RED Control app tools for the connected camera.

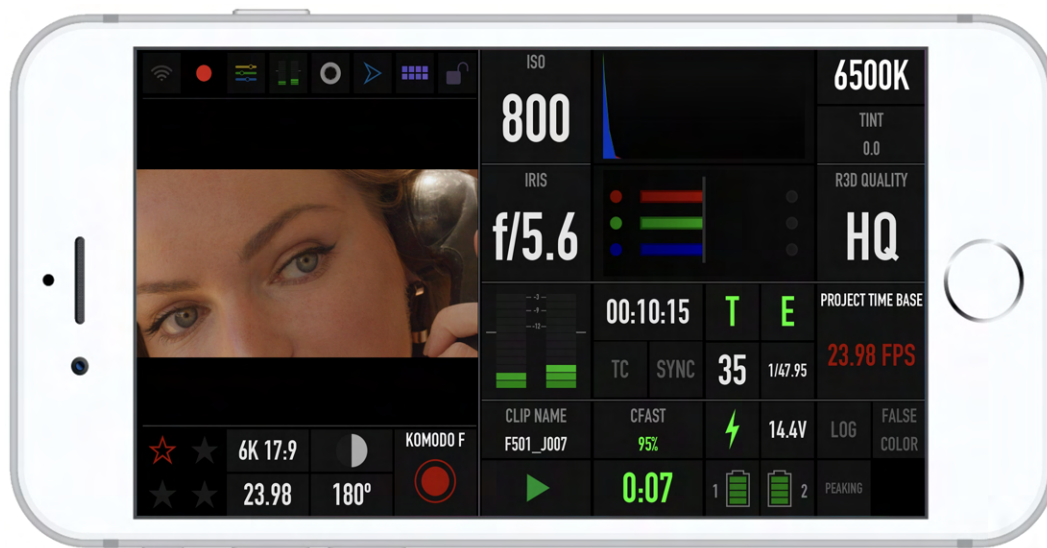

From here you can use the **RED Control Apps** to monitor and control the camera.


NETWORK CONFIGURATION

The **KOMODO Link Adaptor** offers a USB-C connection that provides communication support for Ethernet networks.


CONNECTING TO AN ETHERNET NETWORK

You must install the **KOMODO Link Adaptor** on the camera before you can use a USB-C to Ethernet adapter to connect the camera to an Ethernet network.


1. Connect the camera to the Ethernet network using the USB-C to Ethernet adapter.
2. From a Wi-Fi-enabled device, select the Wi-Fi connection to which the camera is connected.

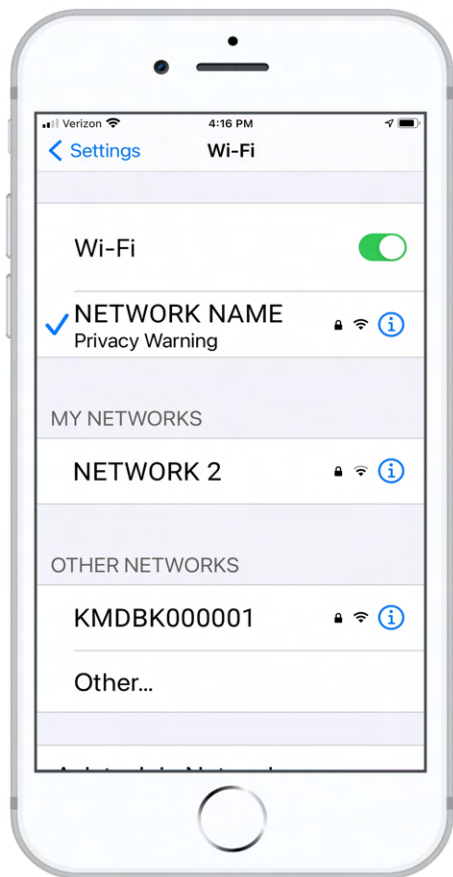


3. Open RED Control on the Wi-Fi-enabled device.

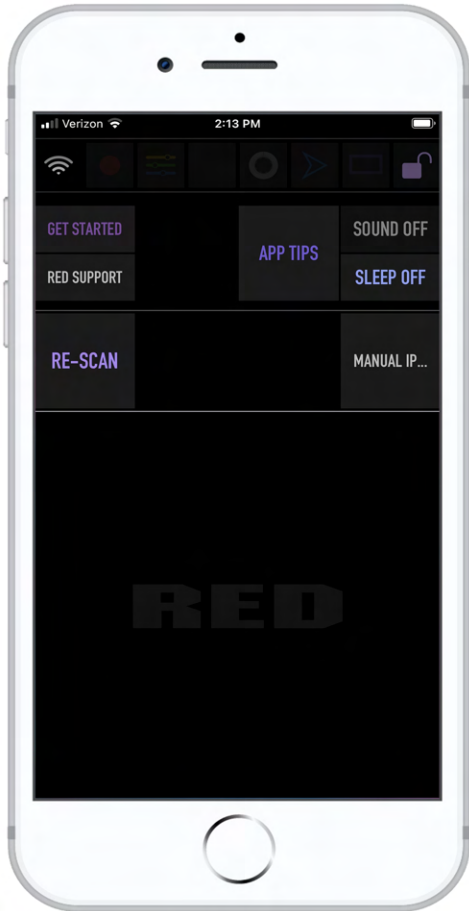


4. Tap RE-SCAN.
The camera icon displays.

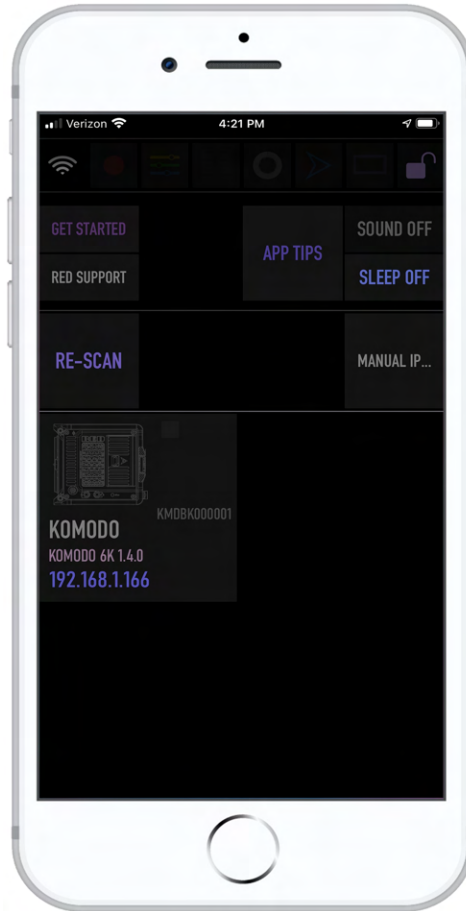


The camera icon displays the camera's Ethernet IP address:

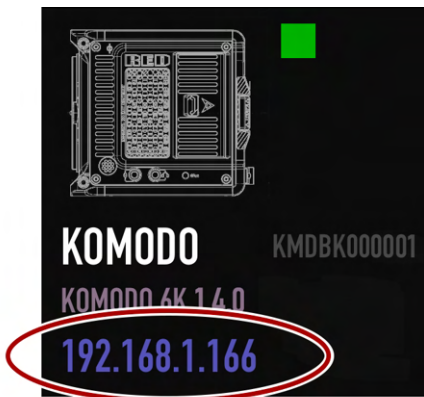

5. Tap the camera icon to open the RED Control app tools for the networked camera.

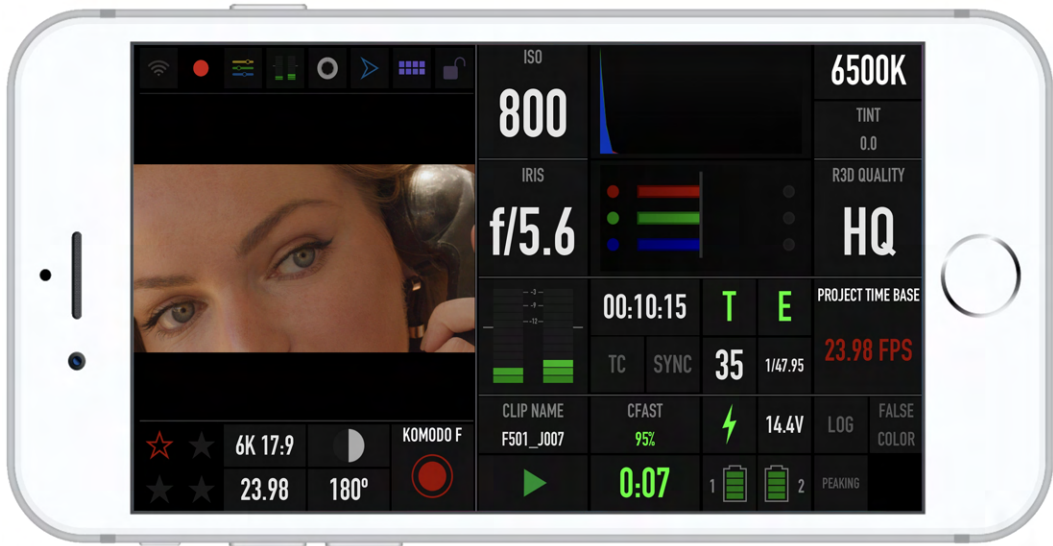

6. Open a browser from a computer connected to the Ethernet network.
7. In the browser address field, enter the camera IP address displayed on the RED Control camera icon. The RED Control tools are displayed in the browser.

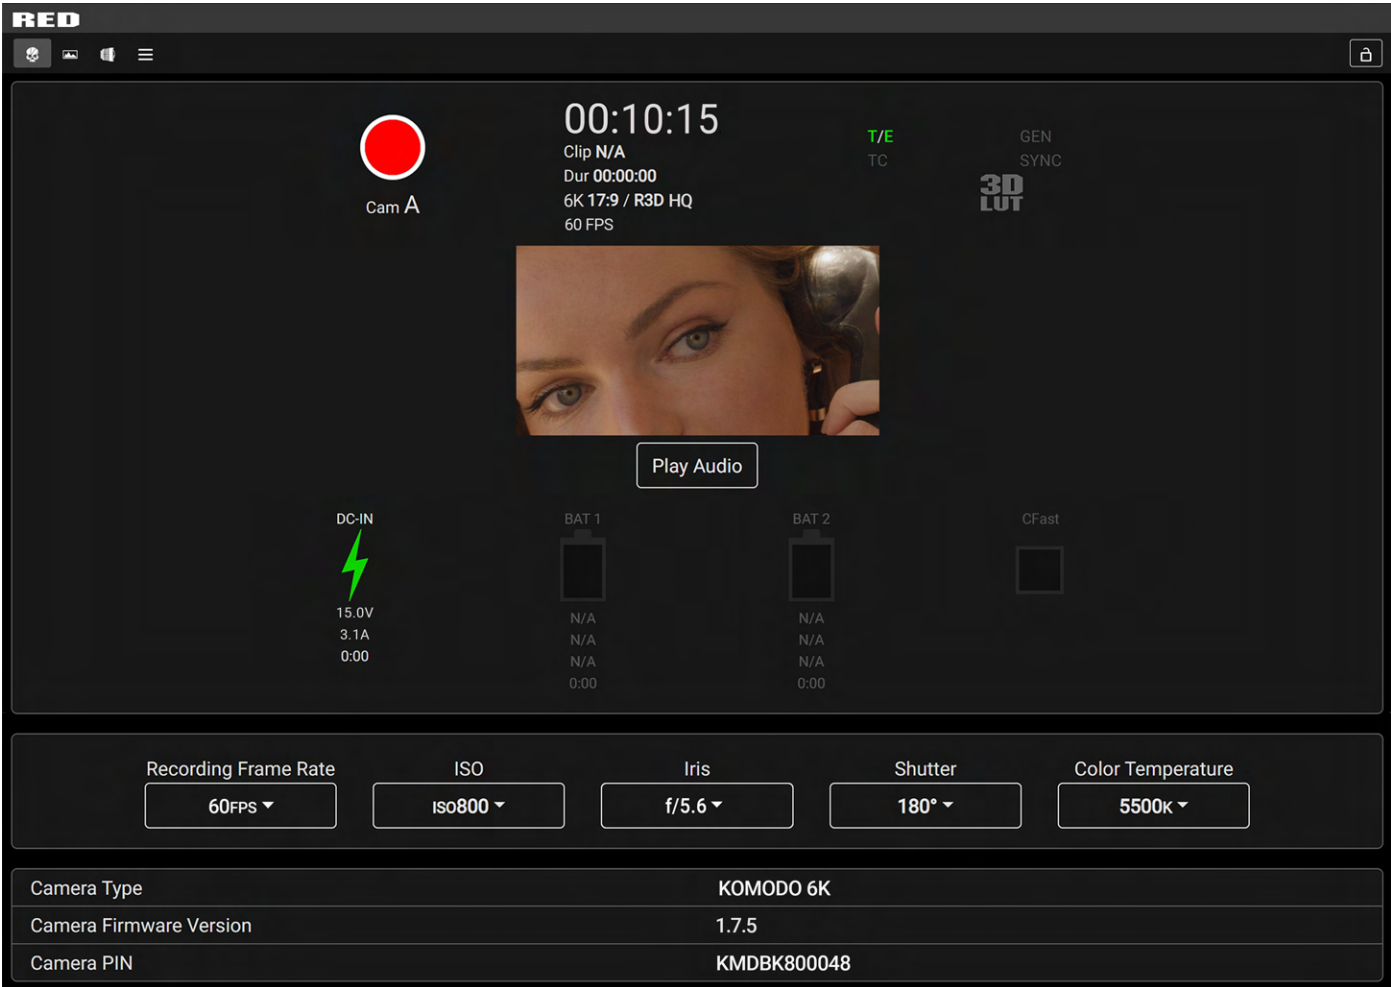

FTPS CONFIGURATION

The File Transfer Protocol Secure (FTPS) offers a fast and secure system for transferring data to and from the camera. FTPS is supported by firmware versions 1.5 and higher. FTPS is available when the camera is enabled and connected to a network over WiFi or through the KOMODO Link Adaptor's USB-C port to an Ethernet adaptor.

The settings for using FTPS on the camera include:


- **Protocol:** FTP or FTPS
- **Host:** [IP address of the camera]
- **Port:** 21
- **Encryption:** TLS/SSL Explicit encryption
- **Username:** [Username in FTPS menu settings]
- **Password:** [Password in FTPS menu settings]
- **Logon Type:** Normal

NOTE:


- File transfer speeds may vary depending on the strength of the signal (when using WiFi) and the amount of network traffic. For the fastest and most reliable data transfer, we recommend using a hard-wired connection.
- Steps may differ depending on which FTP software you wish to use, consult your software's user guide for additional assistance.
- When setting up FTP, make sure you use FTP or FTPS and not SFTP as these are different protocols.
- For security reasons, the FTPS host name and password are only displayed on the camera FTPS menu.
- Disabling encryption can increase transmission speeds.

CAMERA SET-UP

1. Connect your camera to the network with the desired connection method (Ad-Hoc, Infrastructure or USB-C) and verify the connection. A successful connection is confirmed when the camera displays an IP address in the WiFi or KOMODO Link Adapter settings menus.

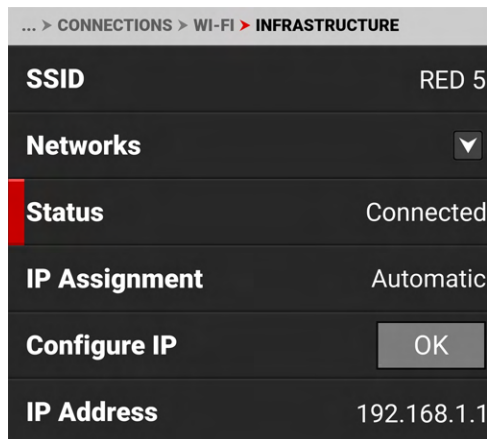


2. Navigate to Menu > Communication > Clients & Services > FTPS. Take note of the username and password. You can also enter a new password QR code.

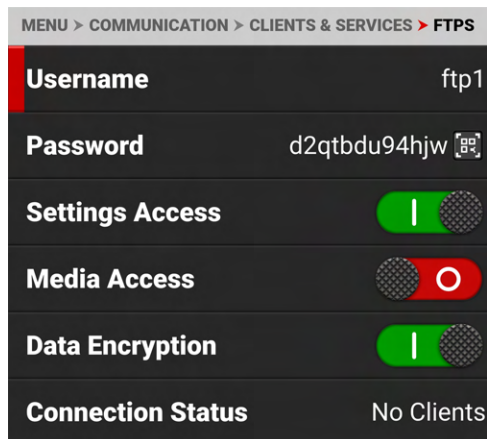

3. Enable the permissions you want users to have access to by toggling Settings Access or Media Access to the on or off position. The media folder will display as an empty folder on the FTP App when Media Access is disabled (off).
4. The camera is now set-up on FTPS.


SOFTWARE SET-UP (FILEZILLA)

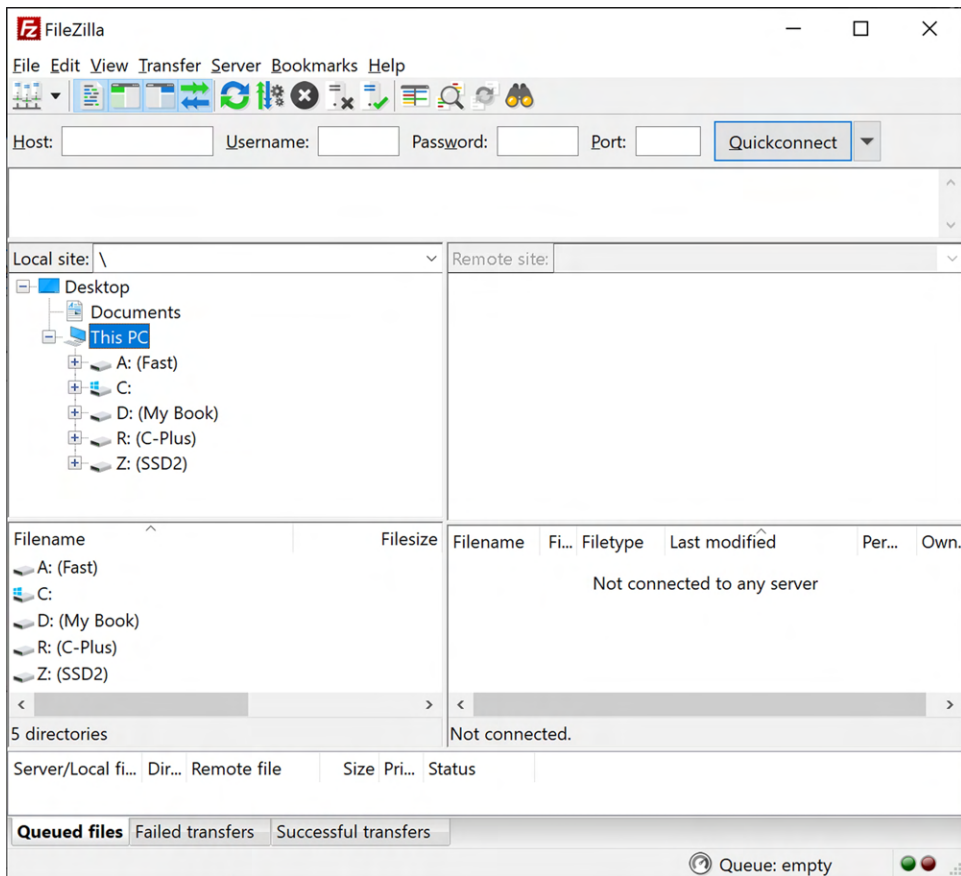


1. In FileZilla, enter the following settings:

- Host: *ftp://Camera's IP Address - Example: ftp://192.168.1.93*
- Username: Username displayed in the camera's FTPS menu
- Password: Password displayed in the camera's FTPS menu
- Port: leave blank

2. Press Quickconnect. Depending on the permissions you will now have access to the desired folders.

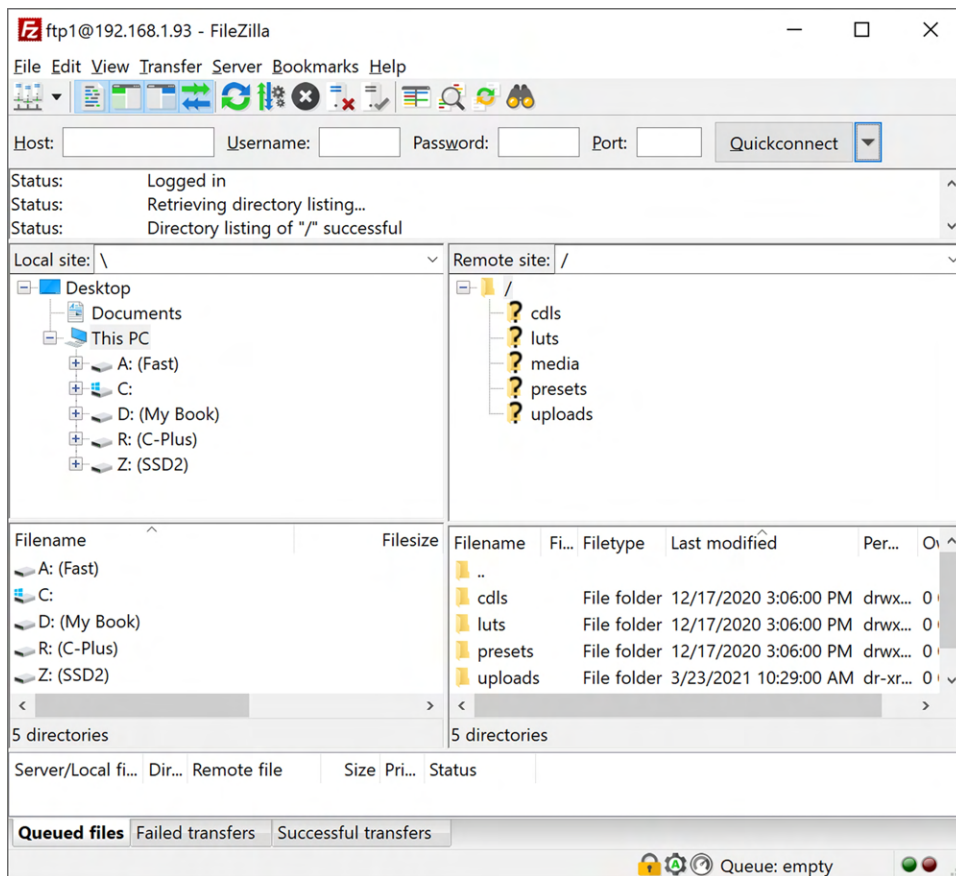

The camera FTPS menu Connection Status displays Connected:

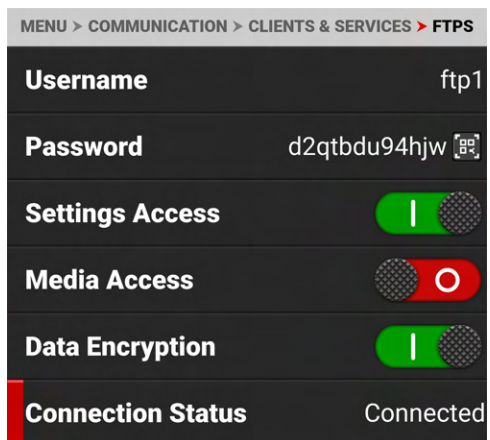

ADDITIONAL INFORMATION

When uploading files to the camera make sure that you use the 'upload' folder & then the desired sub-directory of luts, cdl, presets or upgrade. Media cannot be uploaded to the camera.

The data rate of the FTPS transfer with encryption maxes out at roughly Gigabit Ethernet speeds.

Estimated download time for a full 256 GB is approximately 47 minutes when using a wired connection.

MEDIA MANAGEMENT

This section explains how to use, record, format, and offload media for the camera.

WARNING: Do not attach a label to the media card. The heat generated by the media can weaken the label's adhesive, causing the label to detach inside of the camera. Labels can also diminish heat dissipation and cause excessive wear to the internal components. Removing a label from a media card can possibly deform the card body.


The camera supports exFAT as the file system for the media card to accommodate larger files and data rates. exFAT is supported both on macOS and MS Windows.

Format your media in the camera whenever possible (refer to [Media Best Practices](#)).

EJECTING (UNMOUNTING) MEDIA

IMPORTANT: To ensure data integrity, media must always be ejected (unmounted) prior to removal from the camera. This ensures that power is removed from the media and any open data files are closed. Failure to properly eject (unmount) media may result in lost data or corrupted files.

To eject (unmount) media from the camera, use the [LCD Touchscreen](#) and select **Menu > Media**.

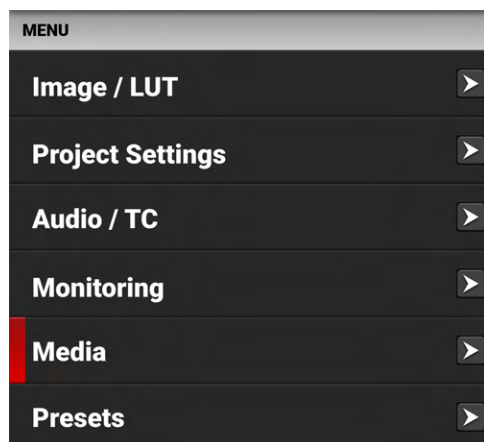


Tap the Eject OK button:



The Success message displays:



The media is now ejected (unmounted) and all media related items are grayed out in the menu.

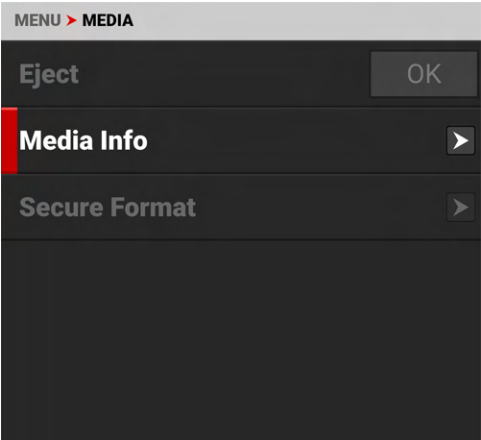

WARNING: The media can get extremely hot. Use caution when removing media.


Removing a media card without ejecting (unmounting) first does not damage the media, however, it does increase the risk of file corruption. It is good practice to eject the media before removing or disconnecting. Ejecting the media provides the following benefits:

- Protects the integrity of your recorded data
- Mounts clips instantly to your workstation in post-production.

INSERTING THE MEDIA


The camera contains a covered compartment on the right side where you insert the CFast media card.

WARNING: Do not attach a label to the CFast media card. The heat generated by the media can weaken the label's adhesive, causing the label to detach inside of the camera. Labels can also diminish heat dissipation and cause excessive wear to the internal components. Removing a label from a CFast media card can possibly deform the card body.

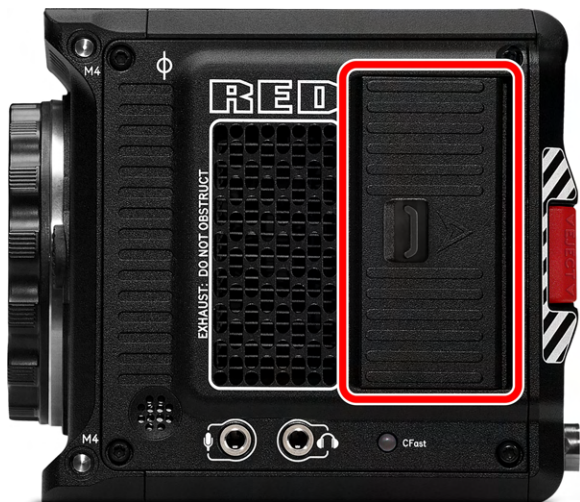

INSERTING THE MEDIA CARD

1. Slide the media door latch back, and open the media door.

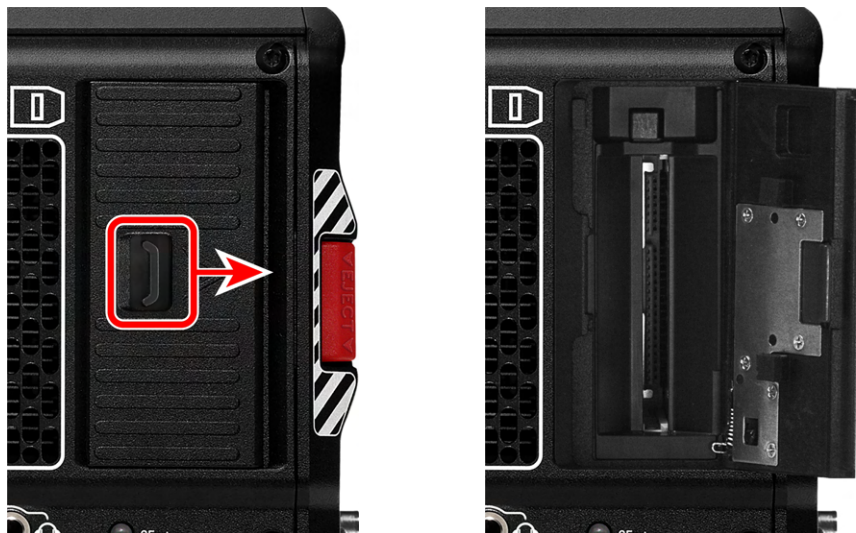


2. Insert the CFast media card in the slot with the top of the card facing toward the front of the camera. Insert the card until it is firmly seated.
3. Close the media door and make sure that the door latch clicks.
4. If needed, format the CFast media card. Refer to [Secure Format](#) for more information.

REMOVING THE MEDIA CARD


NOTE: Do not remove the CFast card while the camera is recording or formatting media. Refer to [Media Management](#) for more information.

WARNING: The media can get extremely hot. Use caution when removing media.

1. If the camera is on, go to **Menu > Media** and select **Eject**.
2. Slide the media door latch back and open the media door.

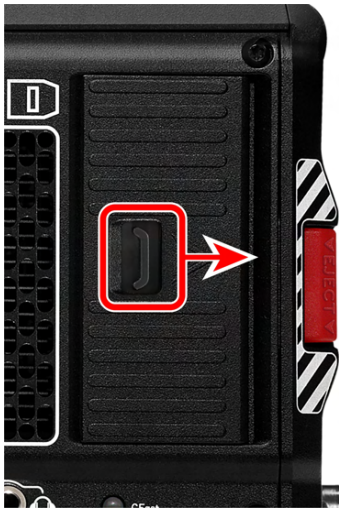

3. Press the card eject button above the CFast media card.

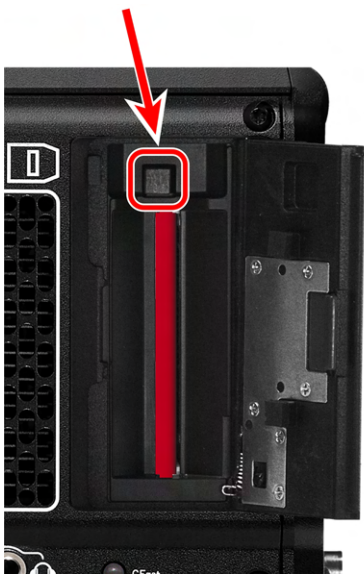

4. Let the CFast media card cool before gently pulling the card out of the slot.

WARNING: The media can get extremely hot. Use caution when removing media.

5. Close the media door and make sure that the door latch clicks.

SECURE FORMAT

A secure format is a low-level format that rebuilds the media card file system. A secure format erases all data on the card.

Perform a secure format when the camera is reporting media-related errors.


PERFORMING A SECURE FORMAT

CAUTION: Ensure all data is backed up before formatting a card. **Data erased during formatting cannot be recovered.**


WARNING: The media can get extremely hot. Use caution when removing media.

To perform a secure format, follow the instructions below:

1. Go to **MENU > MEDIA > SECURE FORMAT:**

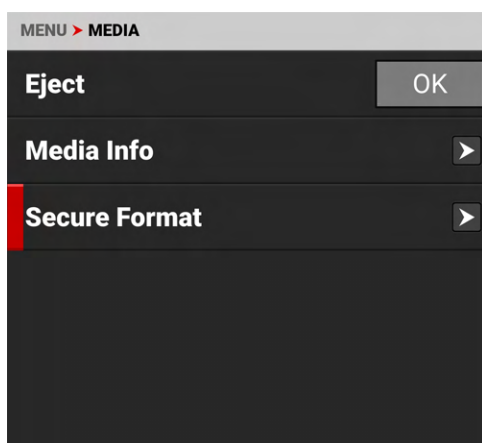

2. From the Secure Format menu, select the desired **Camera ID**, **Camera Position**, **Reel Number** and **Edgecode**. Tap the **Format** button to start the Secure Format process:

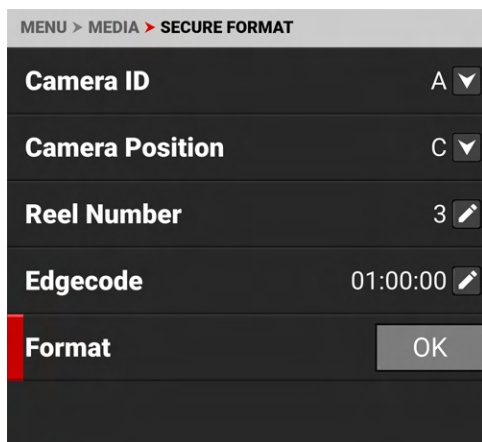

The confirmation message displays:



3. Tap Yes to begin formatting.



FORMATTING MEDIA ON A COMPUTER

RED recommends that you only format your media card from a computer when you cannot mount the media to the camera (refer to [Media Best Practices](#) for more information).

MEDIA INFORMATION

Use the [Media Info](#) menu to display the media card information.

Media information includes the following:

SETTING	DETAILS
Status	Displays the media card status
Model Number	Displays the media card model number
Serial Number	Displays the media card serial number
Firmware Version	Displays the media card firmware version
Percentage Remaining	Displays the media card's remaining storage*
Time Remaining	Displays the recording time remaining on the media card*

* with the current project settings

FILE SYSTEM

The camera formats the media card using the exFAT file system. Both Mac® and Windows®-based computers support media cards with this system. Refer to the documentation for your operating system to determine whether there are any limitations to its file system support.

CLIP NAMING CONVENTION

When you record a clip, the camera creates a unique name for the clip folder that uses the format described in the table below:

ITEM	DETAILS	EXAMPLE
Camera ID	The letter assigned to the camera (refer to Camera ID)	A
Reel ID	The reel number assigned to the media (refer to Reel Number)	004
Camera Position	The camera position letter (A-Z) followed by three digits starting with 001 (refer to Camera Position)	C001
Month	Month that the clip is recorded (refer to Date / Time)	12
Day	Day that the clip is recorded (refer to Date / Time)	04
Two Characters	Two random alphanumeric characters generated by the camera to prevent any possibility of duplicates	6M
.RDC	Clip folder extension	.RDC

For example, a sequence of clip folders within a media folder on Camera A may look like this:

- A001_C001_12046M.RDC
- A001_C002_1204CE.RDC
- A001_C003_1204R5.RDC

CLIP METADATA

The following metadata is recorded for each frame of each clip:

- Audio Data
- Broadcast Wave File (BWF)
- Clip
- Configuration, Camera Name, Network, Model, Model ID, Serial Number
- Copyright
- Date and GMT
- Filename
- Firmware Version
- Frame Guides
- Jamsync Setting
- Lens and Shutter Speed/Angle Parameters
- Lens Name, Brand, ID, Near Focus, Far Focus
- Location
- LTC User Bits (3 32-bit word reg-dump from ISP)
- Media Serial Number
- Production Name
- REDCODE®
- Reel
- Scene
- Stereo Setup
- Take
- Timecode
- Unit

MEDIA BEST PRACTICES

This section describes best practices to ensure that your media cards continue to provide reliable storage and fast data rates. Following these best practices may prevent your media card from becoming fragmented, which can lead to data integrity errors.

- The only files that should be saved from your computer to your media card are Preset files, Firmware Upgrade files, and LUTs. DO NOT save other files, folders, or applications to your media.
- DO NOT back up your hard drive to the media card. When using a Mac, the system may ask if you want to back up your files to the media card using Time Machine; DO NOT use the media card as a backup disk.
- DO NOT delete clips off of your media card using a computer. Delete clips only by formatting your media card in-camera. For more information about formatting your media card, refer to [Secure Format](#).
- DO NOT format your media card using a computer, unless the media card cannot mount to the camera. For more information, refer to [Secure Format](#).
- When ejecting the media card from a computer, ensure that the icon has completely disappeared from the Finder window (Mac) or from Windows Explorer (Windows) before removing the media card. Sometimes, the pop-up saying that the media card has ejected displays too early.
- When the reader has a write-protect switch (such as the [RED CFast 2.0 Reader](#)), it is recommended that you set the card reader to write-protect when uploading clips to prevent connected devices from adding any unwanted data to your media card.

INDEXING ON A MAC

NOTE: You can use the RED media reader with Write-Protect to prevent the Mac OS from indexing your media card.

Most newer versions of the Mac OS automatically index all external drives when you connect them. This includes when you connect media cards.

Indexing makes the connection process take longer. While the media card connects to the Mac, DO NOT remove the card. Indexing writes hidden files to the media card. When you insert an indexed media card in the camera, it can take the camera a while to recognize the hidden files and connect to the media card. While waiting for the media card to connect, DO NOT remove the card or turn off the camera. After the camera successfully connects to the media card, perform a secure format to remove the hidden files. For more information, refer to [Secure Format](#).

RED MONITOR INTERFACE CABLE

The DSMC3™ RED® Touch 7.0" LCD monitor includes a custom RED Monitor Interface (RMI) cable that provides communication between the RMI and the monitor.

Where this cable attaches to the RMI and the monitor, there are special locking features that keep the cable from accidentally detaching.

NOTE: The RMI cable is attached to the monitor at an angle, as shown in the image.

To unlock the cable locks, rotate the RMI cable lock and slide the monitor cable lock, as shown in the image:



NOTE: The USB-C-style DSMC3™ RMI cable is a custom-Pinned cable, which is not compatible with standard USB-C cable ports (including the rear camera USB-C port). The EXP ports on the RMI are for future use and are not currently supported.

Optional RED Monitor Interface (RMI) cables:

- 10" DSMC3™ RMI Cable
- 18" DSMC3™ RMI Cable
- 39" DSMC3™ RMI Cable

MONITORING


The camera provides several methods for monitoring the image. These monitoring methods include:

- Onboard LCD touchscreen
- **DSMC3™ RED® Touch 7.0" LCD**
- SDI output to a monitor
- RED Control over Wi-Fi to iOS or Android devices
- RED Control over KOMODO Link Adaptor to iOS or Android devices
- KOMODO Link Adaptor over a USB-C to Ethernet adapter to a computer
- 1080 M-JPEG Live Stream

ONBOARD LCD TOUCHSCREEN

The Onboard LCD touchscreen provides a live image from the camera sensor. By using the Monitoring Tools menu, you can display guides, exposure tools, focus tools, and a magnified image.

Tap on the Exposure meter to open the Monitoring tools.

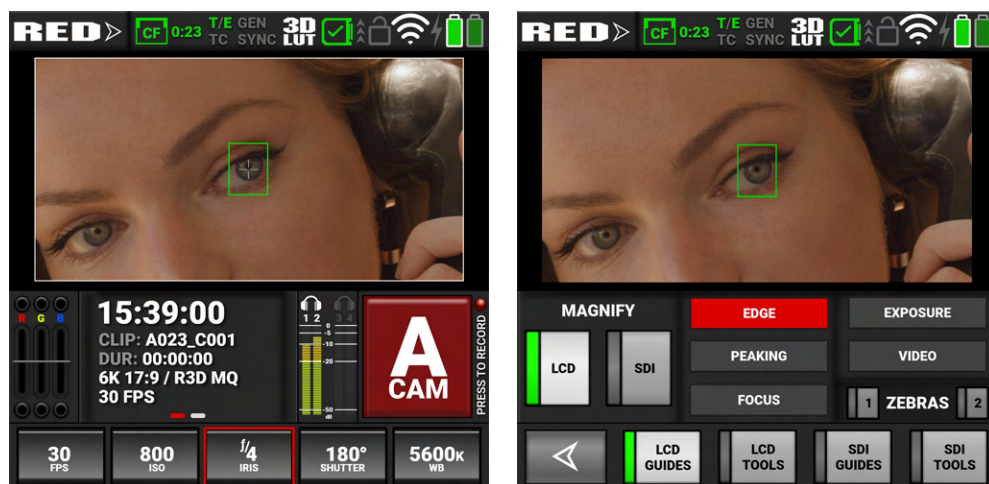

In this example the LCD magnification and LCD guides are enabled. The Autofocus rectangle is also displayed.

SDI OUTPUT TO A MONITOR

The SDI port provides a 12G SDI signal, which allows you to view the camera image on a 4K SDI monitor at up to 60 fps.

Use the Monitor menu to select the settings for SDI output, Tools, and Guides (refer to [Monitoring Menu](#)

WARNING: Under certain circumstances, it is possible for an SDI connector to incur damage when connected to an accessory and powered without using shielded cables. RED recommends only using high quality, shielded BNC cables that are rated for 12G-SDI signals and only using shielded power cables for powering SDI accessories.

Make sure power is connected to the SDI accessory at all times before you connect the BNC to the camera.

Ungrounded power from SDI accessories can damage the camera's SDI port. To avoid this possible damage, attach the power source to the accessory before attaching it to the BNC cable. When using RED Approved Third Party battery plates, unplug the BNC cable prior to hot swapping.

When possible, avoid using P-Tap (also known as D-Tap) cables to power accessories. To avoid damage when using P-Tap/D-Tap, it's imperative that the connect/disconnect sequence (below) is followed precisely.

BNC ATTACHMENT INSTRUCTIONS

When attaching SDI accessories:

1. Connect a power source to the SDI accessory; power on the SDI accessory.
2. Ensure a power source is connected to the camera. This ensures both are grounded prior to connecting the BNC. The camera's power state does not have an impact on SDI attachment sequence.
3. Connect the BNC cable to the accessory, then to the camera.

When detaching an accessory mounted to an SDI output, ensure that you remove the BNC connection to the camera before removing power to the SDI device:

1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Disconnect the power source from the SDI accessory.

When you need to swap out a battery on an accessory mounted to the camera's SDI port, you must:

1. Shutdown the SDI accessory.
2. Disconnect the BNC cable from the camera.
3. Replace the battery on the SDI accessory.
4. Connect the BNC cable to the camera.
5. Power on the SDI accessory.

For more information, refer to [Preventing Damage to SDI Outputs](#).




Figure: SDI monitor with SDI Advanced Mode enabled

SDI port specifications:

- Integrated 12G-SDI with 6G-SDI, 3G-SDI, and 1.5G-SDI modes
- 12G-SDI: Up to 4096 × 2160 10-bit 4:2:2 for 60p
- 6G-SDI: Up to 4096 × 2160 10-bit 4:2:2 for 30p
- 3G-SDI: Up to 2048 × 1080 10-bit 4:2:2 for 60p
- 1.5G-SDI: Up to 2048 × 1080 10-bit 4:2:2 for 30p and 24p
- SMPTE Timecode
- HANC Metadata
- 24-bit 48 kHz Audio

You can enable or disable the image magnification, the focus and exposure tools, and the guides displayed on images sent to the SDI monitor by using the Monitoring tools (refer to [Monitoring Tools](#)).

Tap on the Exposure meter to open the Monitoring tools.

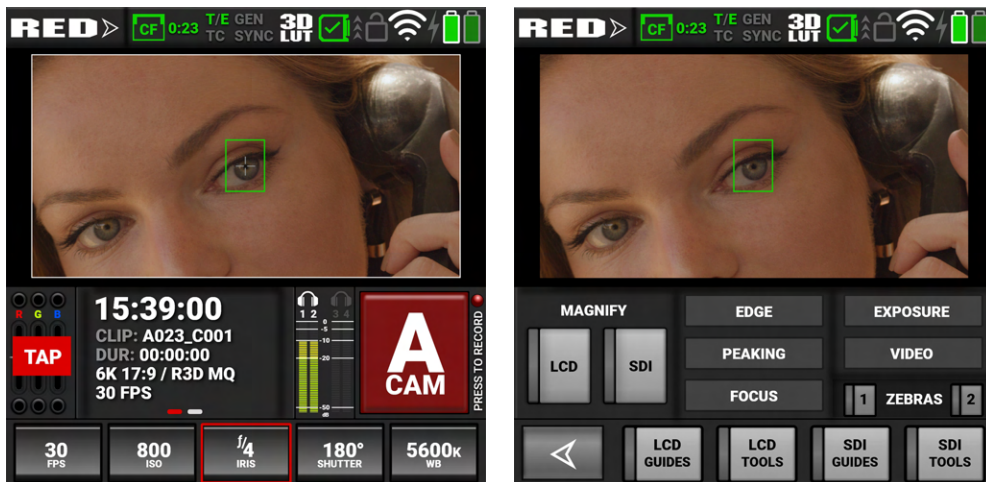

You can enable the following monitoring tools on SDI:

- Magnify
- SDI Guides (refer to **Guides**)
- SDI Tools (refer to **Tools**)

RED CONTROL

RED Control allows you to use Wi-Fi to connect to the camera and send monitor images to iOS and Android devices.

NOTE: You must enable live streaming under **MENU > MONITORING > LIVE STREAM** to enable the image feed.

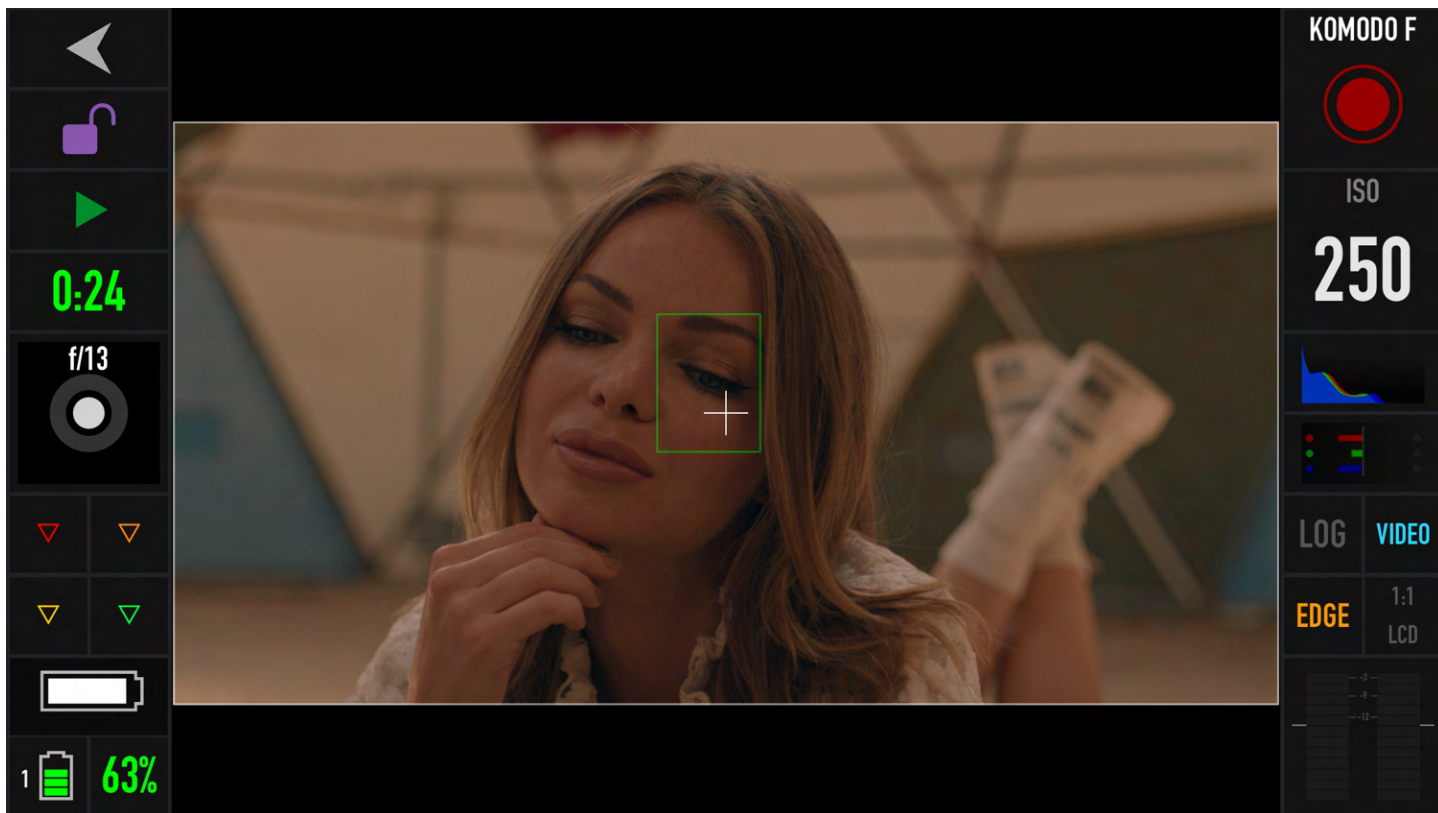


Figure: RED Control phone monitor over Wi-Fi

KOMODO LINK ADAPTOR

The KOMODO Link Adaptor allows you to use a USB-C cable to connect to the camera and send monitor images in real-time to USB-C devices.

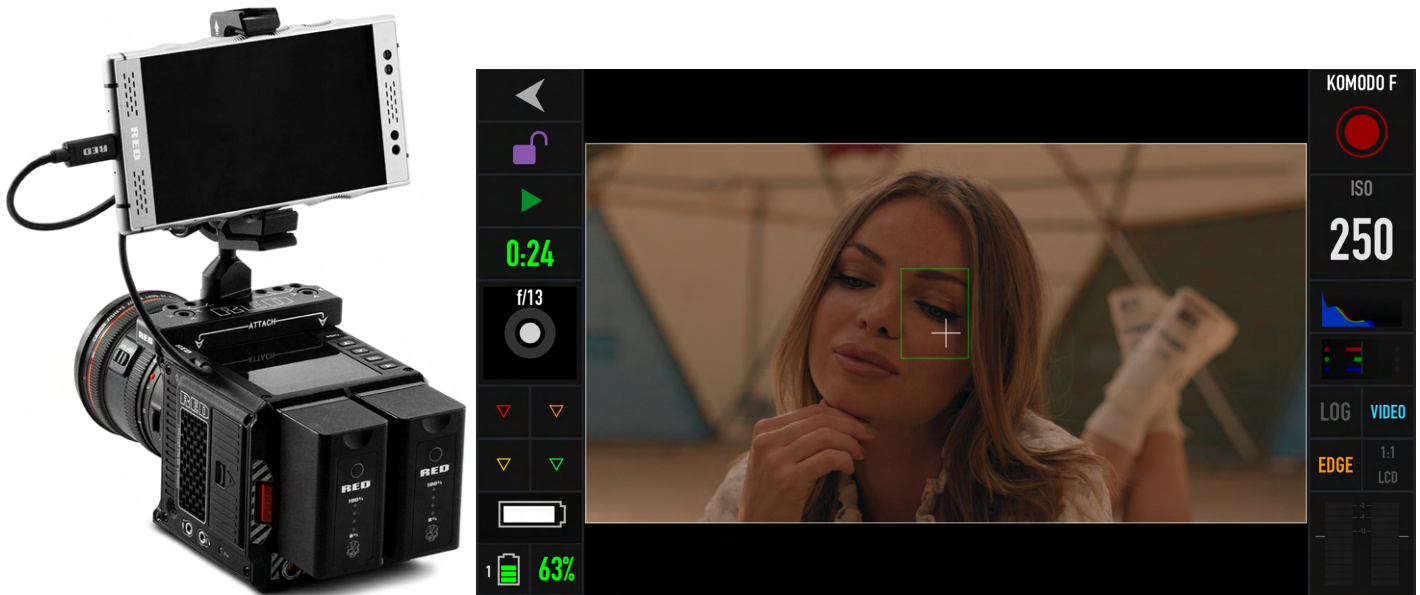


Figure: KOMODO Link Adaptor connected to an Android phone with RED Control

With the use of an Ethernet to USB-C adapter, you can also connect Ethernet devices.

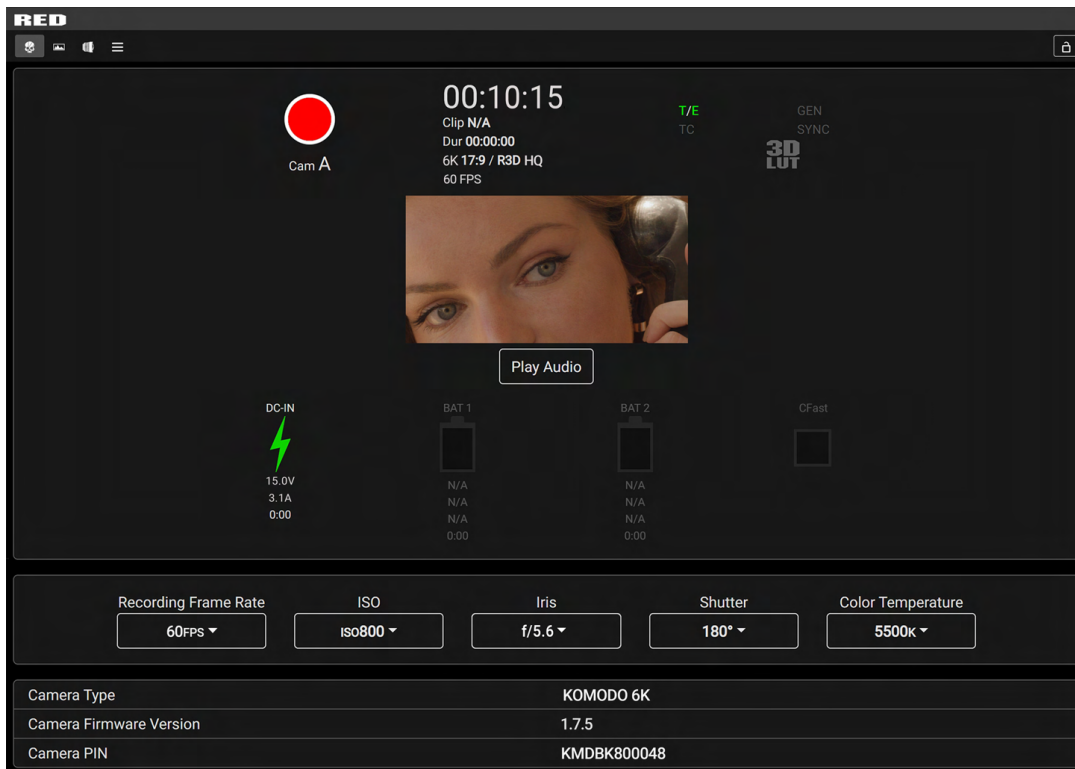


Figure: USB-C Adaptor connected to an Ethernet web browser

You can add :9090 to the end of the URL in your browser to bring up an image-only feed for remote viewing.

NOTE: You must enable live streaming under **MENU > MONITORING > LIVE STREAM** to enable the image feed.

EXPOSURE

The camera offers multiple tools to determine the current image exposure levels and provides the tools to adjust the exposure to the desired levels.

When using the R3D file format, you can correct color temperature and ISO settings at any time. The aperture and exposure time however, are two of the parameters that you cannot corrected later in R3D files.

NOTE: ProRes file format burns in ISO and White Balance, and does not allow you to adjust these settings post-recording like you can with the R3D format.

While the correct exposure is always an artistic decision, there are best practices for capturing the most dynamic range while also allowing post production to preserve the intended image information.

The goal is to reduce clipping in the bright and dark parts of the image as much as possible. Otherwise the sensor information is lost in the overexposed and underexposed areas.

The primary tool for determining the exposure levels is the histogram. It shows the exact luminance levels of the red, green, and blue pixels after you apply the ISO and White Balance settings. Monitors have their own color gamuts and brightness levels which makes the monitor less than optimal for determining the camera's exposure levels.

This camera includes a full **Histogram** and a simple RGB raw pixel exposure meter, which allows you to determine proper exposure regardless of the set ISO or camera look (for more information refer to **LCD Touchscreen**).

The full histogram provides information about how the brightness is distributed in the image. This allows you to see how close a scene is to clipping in the light and dark areas, which makes it easy to choose aperture, exposure, and ND filters solutions accordingly.

**Example of overexposure
with histogram and exposure meter:**



**Example of underexposure
with histogram and exposure meter:**



**Example of a balanced exposure
with histogram and exposure meter:**



FALSE COLOR EXPOSURE TOOLS

While the histogram provides information about the brightness distribution and clipping of the image, it does not show you the areas in the image that are near, or that have reached, clipping. For this, the camera provides image overlays that provide false colors to indicate precise exposure levels.

FALSE COLOR EXPOSURE MODE

The False Color Exposure mode overlay provides information where the image is close to clipping or already clipping in the highlights (red), midtones (green), and shadows (purple). For more information, refer to [False Color Exposure Mode](#).

Example of Exposure Mode:



FALSE COLOR VIDEO MODE

The False Color Video mode provides more gradual information about the brightness in different parts of the image. This is helpful when you want to expose skin color at the right level, while ignoring the fact that backgrounds might be overexposed or underexposed (refer to [False Color Video Mode](#)).

Example of Video Mode:



FALSE COLOR GIO SCOPE MODE

Gio Scope mode displays a color overlay on top of a desaturated RAW sensor image, identifying 16 increments within the dynamic range of the sensor. The RGB settings (color temperature, ISO, LUT, etc.) are not used by this mode.

Each number (1 to 16) indicates a different increment of dynamic range. Number 16 represents the top increment, and is broken up into 1/8th sub-increments to show highlight roll-off. Each 1/8th increment is represented by a different shade of red, ranging from light red (less light) to dark red (most light, clipping).

FOCUS

Focus, like **Exposure** and **Recording Frame Rate** is a property that cannot be fixed easily in post-production. To make sure the camera is focused correctly when you begin recording, it is important to rely on focus tools that do not rely on the visibility on the LCD Touchscreen or a monitor.

The camera interface includes the focus tools you can use to reach the desired image focus (refer to **Peaking**).

FOCUS PEAKING MODE

The Focus Peaking mode applies a sharpening filter to the image that emphasizes edges of the subject in focus.

Example of Focus Peaking:



EDGE PEAKING MODE

The Edge Peaking mode hides the image and only shows the edges. This provides the best visual representation of the subject that is currently in focus.

Example of Edge Peaking mode:



PEAKING PEAKING MODE

The Peaking Peaking mode emphasizes the edges, and it also highlights them by using a selectable color.

Example of Peaking Peaking mode:



TIMECODE

Timecode provides a mechanism to reference frames from the camera's recorded clips to other devices like cameras and audio recorders. Some devices can also gather other data like lens metadata or camera orientation that is referenced by Timecode to merge the data back together in post-processing.

KOMODO provides two separate Timecode concepts: Time of Day (TOD) and Edgecode. Both TOD and Edgecode are stored in the R3D file. The user can select which Timecode displays on the **LCD Touchscreen** by setting the preference in **Timecode Display Mode**.


TIME OF DAY

TOD Timecode reflects the time and date the camera recorded each frame. KOMODO synchronizes the TOD Timecode to an external Timecode generator (when one is connected to the **Extension Port**) or synchronizes to the internal real-time clock of the camera.


SETTING UP TOD TIMECODE

To set up TOD Timecode on the camera, perform the following:

1. Open the Audio / Timecode menu: **MENU > AUDIO / TC**:

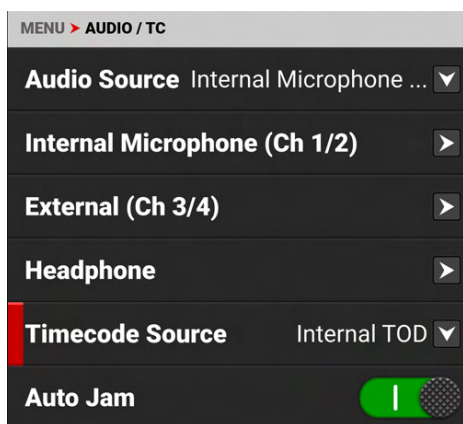


2. Select Timecode Source. The Timecode Source menu opens:

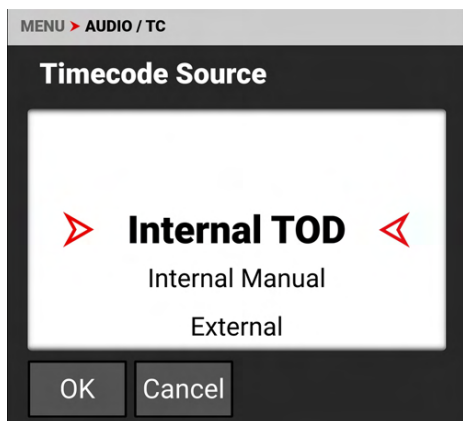

3. Select Internal TOD to use the camera's internal real time clock, select Internal Manual to specify a starting time for the internal clock, or select External to use an external Timecode generator connected to the **Extension Port**.

4. When you select Internal TOD, you can use the **Auto Jam** switch to enable the camera to automatically synchronize the Timecode to the camera's internal clock.

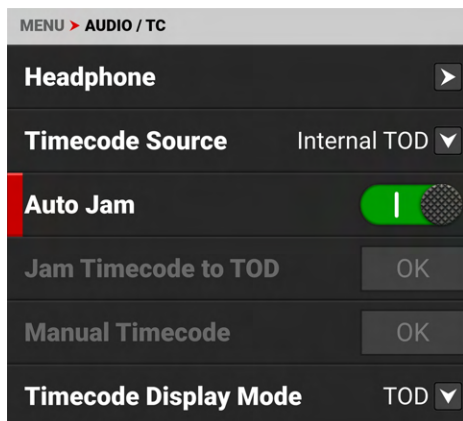

The camera displays the Timecode on the **LCD Touchscreen**



NOTE: The timecode is reset when the camera is turned off, unless an external power source remains connected and powered.

EDGECODE

Edgecode only advances while the camera is recording frames. Each frame is sequential. When the media is replaced, the new media starts the timer over. You can set the Edgecode timer manually by using the **Secure Format** menu.


SETTING UP EDGECODE TIMECODE

To set up Edgecode Timecode on the camera, perform the following:


1. Open the Audio / Timecode menu: **MENU > AUDIO / TC**:



2. Swipe the touchscreen up to scroll down to Timecode Display Mode:

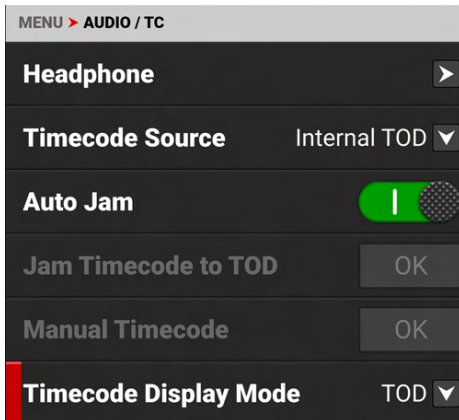

3. Select Timecode Display Mode. The Timecode Display Mode menu opens:

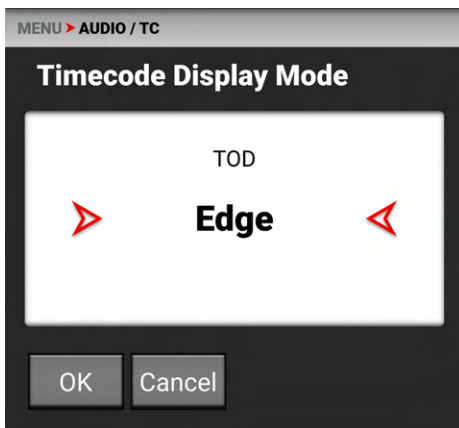

4. Select Edge and tap OK to use Edgecode. The camera displays the Edgecode on the **LCD Touchscreen**



ZEBRA MODES

Use Zebra mode to enable and adjust the upper and lower values for two (2) independent zebra indicators. Use Zebra 1 for highlight exposure, and use Zebra 2 for mid-tones or shadows. Zebras are disabled by default.

For more information, refer to the [Exposure with RED Cameras: False Color and Zebra Tools](https://www.red.com/red-101/exposure-false-color-zebra-tools) article, available at www.red.com/red-101/exposure-false-color-zebra-tools.

ENABLING THE ZEBRA 1 INDICATOR

1. Go to **MENU > MONITORING > TOOLS** and select **ZEBRA 1**.
2. Set a Low IRE of 98.
3. Set a High IRE of 100.

Areas of the image exposed within the IRE range are indicated by red diagonal lines at -45° .

The default settings are Low IRE = 98 and High IRE = 100.

ENABLING THE ZEBRA 2 INDICATOR

1. Go to **MENU > MONITORING > TOOLS** and select **ZEBRA 2**.
2. Set a Low IRE of 41.
3. Set a High IRE of 48.

Areas of the image exposed within the IRE range are indicated by green diagonal lines at 45° .

The default settings are Low IRE = 41 and High IRE = 48.

ZEBRA OVERVIEW

Zebra is a specialty mode that is capable of showing up to two customized overlays with arbitrary IRE ranges. Unlike the other two modes, Zebra indicators appear as diagonal stripes, they are fully configurable, and they have the advantage of preserving a full-color base image.

With traditional video cameras, many used a single zebra to indicate highlight detail. It would often be set at 70% (70 IRE), in part because this is where a white piece of paper would begin to have minimal texture when rendered using a typical contrast curve. Skin tones or skies would be exposed to appear just darker or brighter than these lines. If enabled, a second zebra would typically indicate either mid-tones or shadows. For deep shadows, you can set the second indicator to below 10% intensity or 10 IRE, and set the first indicator to highlights above 85 IRE.


However, as with other IRE-based modes, Zebra mode is only applicable for the current ISO settings (such as with SDI output), not for the raw image data. If anything is changed in post-production, the indicators won't be representative of the final output tones. In those situations, Zebra mode is more of a preview and output brightness tool than an exposure tool.

PRE-RECORDING CONTENT

This section explains how to use the Pre-Record feature.


To start pre-recording, press the **Record** button.

The LCD changes from the Ready appearance to the Pre-Record appearance:

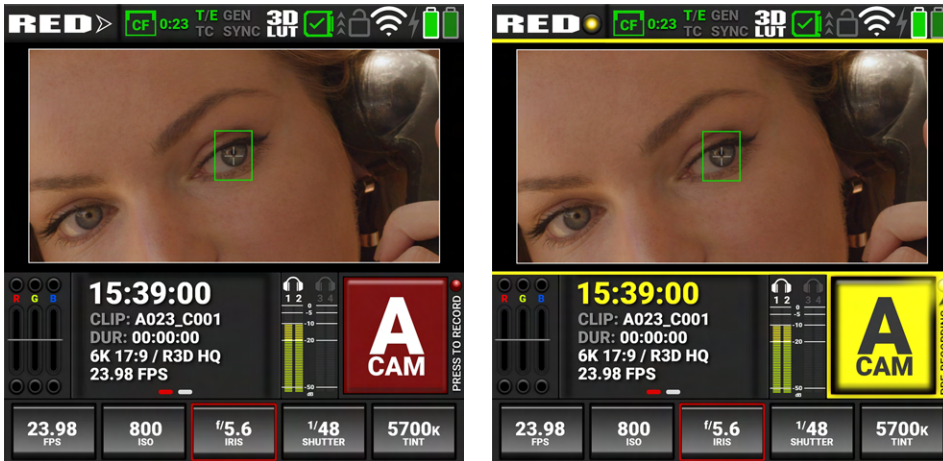

Press the **Record** button again to start recording.

When you start recording, the appearance of the LCD changes from the Pre-Record appearance to the Record appearance:

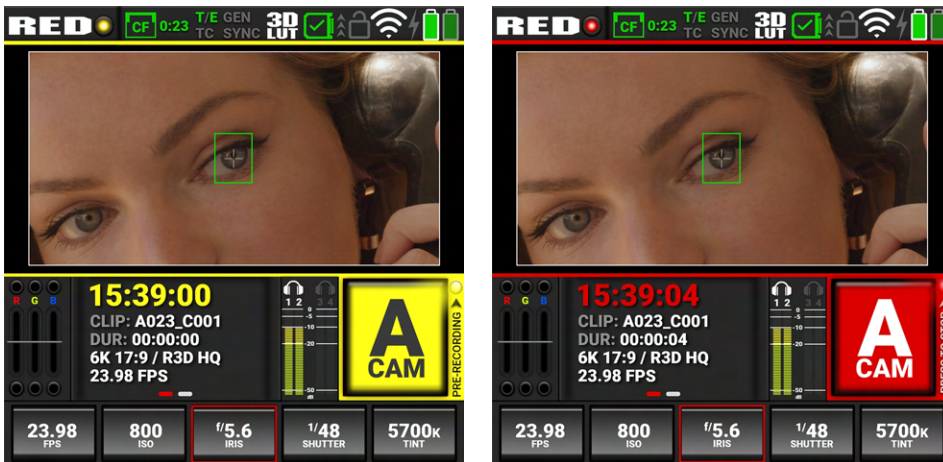

The camera adds the Pre-Record clip to the beginning of your recording.

You can touch and hold the record button on the Onboard LCD to stop Pre-Record. You can also assign physical buttons on the camera to Pre-Record Stop to stop and erase the current Pre-Record segment, or Pre-Record Toggle to completely disable or enable the Pre-Record function.

For information about enabling and configuring Pre-Record, refer to [Pre-Record](#).

CALIBRATING THE SENSOR

Sensor calibration is a process during which the camera optimizes image quality by ensuring that pixel sensitivity remains consistent throughout the sensor.

WHEN TO CALIBRATE THE SENSOR

Calibration is recommended:

- When shooting in an environment where the temperature is significantly different (+/- 30° F...) from the current calibration. The T in the T/E Status Bar indicator will turn yellow (refer to [Status Bar](#) for more information)
- After an extreme change in exposure time (+/- 1/2 sec). The E in the T/E Status Bar indicator will turn yellow (refer to [Status Bar](#) for more information)
- After each firmware upgrade
- When you have any image quality concerns

UPGRADING THE FIRMWARE

You can receive the best performance from your camera by installing the latest firmware. Make a habit of frequently visiting RED Downloads at www.red.com/downloads to check for new versions of camera firmware, updated operation guides, and post-production software.

VERIFYING THE FIRMWARE VERSION

To view the firmware version that is currently installed on your camera, open **Menu > System Settings > System Status > Camera Info**:

... > SYSTEM SETTINGS > SYSTEM STATUS > CAMERA INFO	
Camera Type	KOMODO 6K
Camera PIN	KMDBK800000
Version	1.7.5
Runtime	87.1 Hours

Version displays the currently installed camera firmware. A higher number reflects a newer release.

UPGRADING THE FIRMWARE


Install the most recent firmware. Unless otherwise specified in the release notes, you do not need to upgrade to any firmware in between your current version and the most recent version available online.

You can upgrade the firmware by using an upgrade folder copied to a media card, or you can upgrade over an Ethernet connection.


NOTE: You must calibrate the sensor after upgrading the camera. For more information, refer to [Calibrating the Sensor](#).

UPGRADING FROM A MEDIA CARD

1. Download the most recent firmware for your camera from RED Downloads at www.red.com/downloads.
2. Unzip the firmware zip file.
3. In the unzipped folder, navigate to the **upgrade** folder.
4. Copy the **upgrade** folder and its contents to the root level of the media card directory.
5. Unmount the media card from your computer and remove the media card from the media reader.
6. Insert the media card in the camera. The camera detects the upgrade folder and prompts you to upgrade the firmware.
7. From the camera UI, navigate to **Menu > Maintenance**.

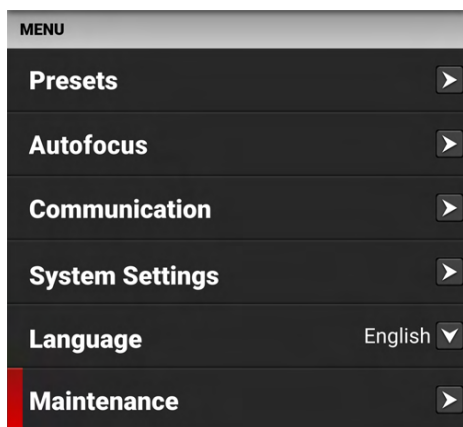

8. From the Maintenance menu, navigate down to Upgrade and tap OK.

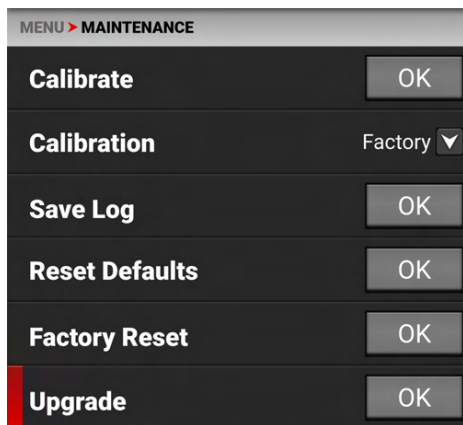

The Firmware Upgrade confirmation screen displays:



9. Tap **Upgrade** to confirm. The Firmware Upgrade progress screen displays:




During the upgrade, the fans run at high speed and the following occurs:

- The camera displays the **SHUTTING DOWN** screen and reboots
- The camera restarts and displays the **UPGRADING** screen
- The camera displays the **INITIALIZING** screen
- The camera displays the **FIRMWARE UPGRADE** progress screen:




The Firmware Upgrade success message screen displays with a **RESTART** button:

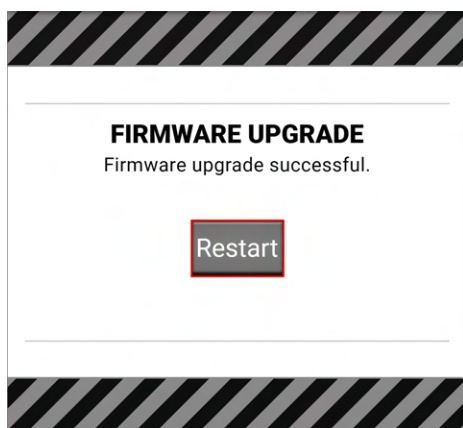

10. Tap **Restart**. The camera displays the **SHUTTING DOWN** screen and reboots again.

11. The camera restarts displaying the Start screen, the **INITIALIZING** screen, and then the Software License Agreement (SLA) displays:

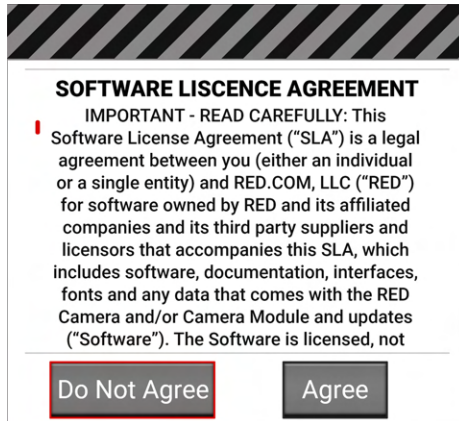

12. Tap **Agree**. If you do not agree to the SLA, the camera cannot be used. The SLA continues to display until it is accepted.
13. Recalibrate the camera before recording. Refer to the [Calibration](#) section and [Calibrating the Sensor](#) for more information.

UPGRADING THE DSMC3™ RED® TOUCH 7.0" LCD FIRMWARE

You can receive the best performance from your DSMC3™ RED® Touch 7.0" LCD monitor by installing the latest firmware. Make a habit of frequently visiting RED Downloads at www.red.com/downloads to check for new versions of DSMC3™ RED® Touch 7.0" LCD firmware, updated operation guides, and post-production software.

UPDATING AUTOMATICALLY THROUGH THE CAMERA

When a newer firmware is detected on the camera, the DSMC3™ RED® Touch 7.0" LCD will prompt you on each boot to update the monitor. Follow the on-screen prompts to update the monitor.

UPDATING MANUALLY THROUGH SmallHD

When a newer monitor firmware is available directly from SmallHD, there are two ways you can upgrade the DSMC3™ RED® Touch 7.0" LCD firmware.

UPGRADE DIRECTLY FROM THE DSMC3™ RED® TOUCH 7.0" LCD

1. Download the DSMC3™ RED® Touch 7.0" LCD upgrade .bin file directly from downloads.smallhd.com, to the root directory of a 2, 4, 8, or 16 GB SD card.
2. Insert the SD card in the monitor.
3. From the DSMC3™ RED® Touch 7.0" LCD Settings Panel, initiate the update.

UPGRADE THROUGH THE CAMERA

1. Download the DSMC3™ RED® Touch 7.0" LCD upgrade .bin file directly from downloads.smallhd.com.
2. Create a folder named "smallhd" on the root of the camera's media card.
3. Copy the firmware file to the "smallhd" folder.
4. Insert the card in the camera, and initiate the update through the Settings Panel of the DSMC3™ RED® Touch 7.0" LCD.

NOTE: This method requires that the monitor be on at least firmware version 5.0.0 to work. If the monitor is on OS4, use the *Directly from the DSMC3™ RED® Touch 7.0" LCD* firmware upgrade method.

SYSTEM MAINTENANCE

All RED products are designed for rugged durability, but precision instruments demand proper care. Follow the instructions in this section to clean, maintain, and store your devices.

WARNING: DO NOT rinse or immerse the camera or other accessories in water. Keep dry at all times.

WARNING: DO NOT use soaps, detergents, ammonia, acetone, alkaline cleaners, abrasive cleaning compounds, or solvents. These substances may damage lens coatings and electronic circuitry.

WARNING: DO NOT use an excess of cleaning solution.

WARNING: DO NOT reuse swabs or wipes.

WARNING: DO NOT attempt to clean the sensor or optical cavity for any reason. If the sensor becomes dirty, submit a Support ticket at <https://support.red.com>.

WARNING: DO NOT attempt to modify, dismantle, or open the camera, lens, or other accessory as doing so may expose you to electric shock and serious injury. There are no user-serviceable parts inside. Alteration or repairs made to the camera or accessories, except by a RED authorized service facility, voids all warranties.

WARNING: Use caution with compressed air and gas dusters, since the high pressure, oily residue, cold air, particulates, and moisture may cause damage. You may use a filtered, non-residue gas duster to clean non-critical areas, such as around the fans and other recesses on the exterior of the camera. Damage to the camera or other components of the camera system caused by using compressed air or gas dusters is not covered under warranty.

WARNING: DO NOT use compressed air and gas dusters on the sensor or on any optics.

WARNING: DO NOT use compressed air and gas dusters on or around the integrated microphones on the front of the camera.

EXTERIOR SURFACES

Use a filtered, non-residue gas duster to clean non-critical areas, such as around the fans and other recesses on the exterior of the camera.

Clean with a dry lint-free cloth. When cleaning your camera and accessories, remember that the devices are not waterproof and moisture can damage electronic circuitry.

STORAGE

WARNING: DO NOT store the camera or accessories in any place with extreme temperatures, direct sunlight, high humidity, severe vibration, or strong magnetic fields.

ONBOARD LCD SCREEN

This section explains how to clean the Onboard LCD screen.

APPROVED LCD SCREEN CLEANERS

Use only the following products to clean the Onboard LCD screen:

- Ionized rubber air bulb
- Delkin Devices Sensor Solution®
- Lens swabs
- Dry optical wipes

NOTE: Before cleaning the screen with swabs or wipes and a cleaning solution, ALWAYS use an ionized rubber air bulb to remove any solid particles. Cleaning the screen without removing solid particles increases the risk of scratching the screen.

PROHIBITED LCD SCREEN CLEANERS

DO NOT use any of the items listed below to clean the Onboard LCD screen. These products have not been tested on RED products and may cause damage or streaking.

- Windex • Solvents • Gas dusters • Compressed air • Rubbing alcohol • Isopropyl alcohol
- Third-party cleaning kits • Pancro Professional Lens Cleaner (or equivalent)
- Pre-packaged lens cleaner containing any additives, such as detergent, anti-static compounds, or fragrance.

WARNING: Damage to the Onboard LCD screen or other components of the camera system caused by using prohibited cleaners is not covered under warranty.

WATER DAMAGE

If your device has come in contact with water or you suspect water damage, submit a Support ticket at <https://support.red.com> immediately.

WARNING: DO NOT attempt to power any device that may have water damage.

WARNING: DO NOT place the device in a container of rice, silica gel, or desiccant packets in an attempt to dry the device.

6. TROUBLESHOOTING

GENERAL TROUBLESHOOTING TIPS

This section describes general troubleshooting tips:

1. Confirm the Firmware version currently installed on your camera. Each firmware release contains bug fixes and other improvements. You may be experiencing a bug resolved in a later release.
 - You can find this under **Menu>System Settings>System Status>Camera Info**.
 - To confirm and download the latest firmware version, visit red.com/downloads.
 - If your current firmware is out-of-date, please upgrade to the latest release build found on red.com/downloads.
2. Reboot the camera by powering it off and back on.
3. Test the camera by installing an alternate or recently formatted media card.
4. Ensure that all of the cables and connections are fully seated and locked in place (if applicable).
5. Remove all attached accessories, RED and third-party. Ensure all contacts are clean, undamaged, and free of debris before remounting. Try booting the camera using the AC power adaptor without any accessories attached to determine whether the issue persists before reattaching any accessories.
6. Try rebooting the camera again after reattaching the accessories. If the camera boots without accessories and the symptom reoccurs after reattaching, try adding the accessories one at a time to isolate the root cause. This helps narrow down root causes to specific accessories and helps to ensure that a bad connection is not the source of the issues.
7. Perform a Reset Defaults. This will restore all camera settings back to factory default settings and reduce the possibility that applied settings caused the issue.

You can find this under **Menu>Maintenance>Reset Defaults**.

8. As a last resort, perform a Hard Restore. This will restore all camera settings back to factory default settings but goes a step further to clear camera internal memory.
 - a. Remove all attached accessories, RED and third-party, leaving only an AC power adaptor attached.
 - b. Turn the camera off.
 - c. Press and hold the REC button and at the same time switch the power ON.
 - d. Continue to hold the REC button until the camera finishes booting and the license agreement displays.

This completes the hard restore.

CONTACT SUPPORT

If your camera continues to misbehave after you have performed these troubleshooting steps, submit a request for Technical Support. Include the following with the request:

- A detailed description of the issue and events that led up to its occurrence, including steps to replicate.
- A description of the rate of occurrence confirming whether the symptom is rare, intermittent, or continuous.
- A freshly saved camera Log File. The Log File can be saved through **Menu>Maintenance>Save Log**. Refer to [Save Log](#) for more information.
- Please confirm the firmware version currently installed. You can find the firmware version number under **Menu>System Settings>System Status>Camera Info**.
- A short video detailing the issue that is occurring, showing your camera setup and all attached accessories.
- A detailed list of accessories (RED and third-party), lens, and modules attached at the time the issue occurred.
- A description of how the camera and attached accessories were powered when the issue first occurred.

STATUS ICONS

The following is a table of the camera's status icons.

ICON	DESCRIPTION
	The CFast 2.0 media card is good ( and recording time remaining)
	The media card is missing
	The media card is incompatible
	The sensor temperature (T) and exposure (E) calibration are good
	The sensor temperature (T) requires calibration
	The sensor exposure (E) requires calibration
	Gray indicates that no Timecode generator signal is detected
	Green indicates that the Timecode source is connected and jammed
	Red indicates that the Timecode source is connected and not jammed
	White indicates that the Timecode source is jammed and not connected
	Yellow indicates that the Timecode source is cross-jammed (at a different Project Time Base)
	Gray indicates that no Genlock signal is detected
	Green indicates that the camera is receiving and is locked to a Genlock signal
	Red indicates that the camera is receiving and is not locked to a Genlock signal
	Gray indicates that no synchronization is detected
	Green indicates that the camera's sensor is synchronized with Timecode and that the camera's output is synchronized with a Genlock signal
	Yellow indicates that the camera's sensor is NOT synchronized with Timecode and that the camera's output is synchronized with a single camera or a Genlock signal
	Gray indicates that no 3D LUTs are in use
	White indicates that the camera is using a 3D LUT
	Camera temperature is good
	Camera overheating warning
	Camera overheating

ICON	DESCRIPTION
	Camera shutting down
	Gray indicates no FTPS data is transferring
	Green arrows indicate FTPS data is transferring
	Gray and open indicates that the camera LCD is unlocked
	White and closed indicates that the camera LCD is locked
	Gray and empty indicates that no Wi-Fi signal is detected
	White bars indicate the strength of the Wi-Fi signal detected (Infrastructure)
	White antenna indicates that Wi-Fi signal is broadcasting (Ad-hoc)
	Gray indicates that no DC power is connected
	Green indicates that the camera is receiving DC power
	Gray indicates that no battery is connected
	White indicates that the battery is connected and green shows the relative level of charge remaining
	Yellow indicates 10 minutes of power remaining
	Red indicates less than 5 minutes of power remaining
	Gray question mark indicates no communication with the battery and no power
	White question mark indicates no communication with the battery and power
	Gray exclamation point indicates error communicating with the battery and no power

A. MECHANICAL DRAWINGS

NOTE: Dimensions are shown in mm.

FRONT VIEW

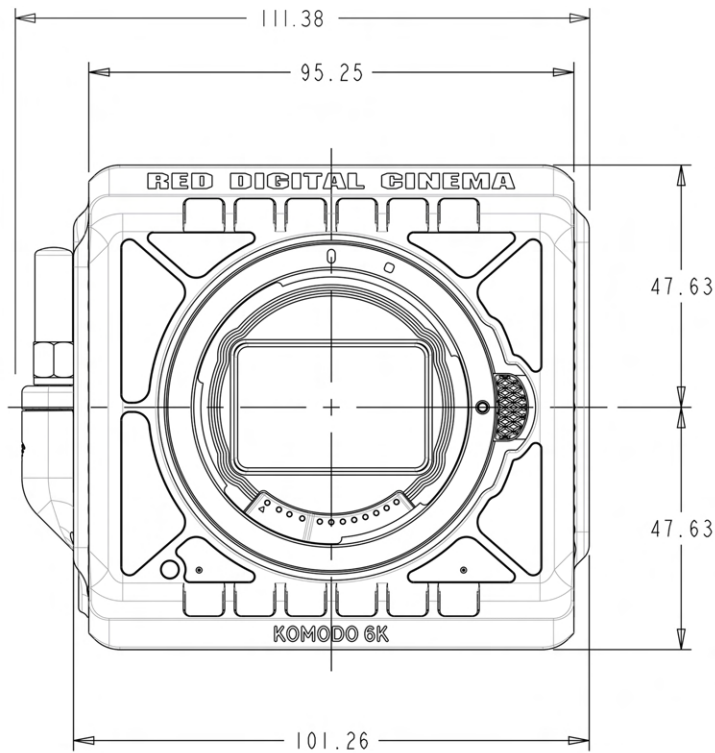


Figure: Camera Front View

BACK VIEW

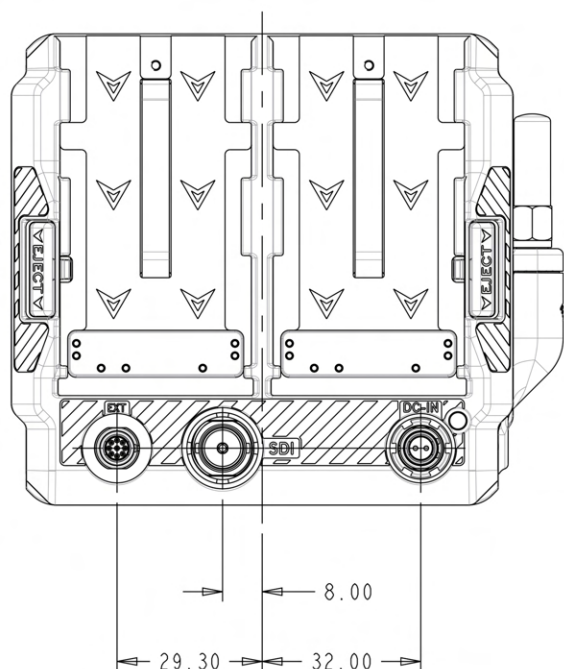


Figure: Camera Back View

RIGHT SIDE VIEW

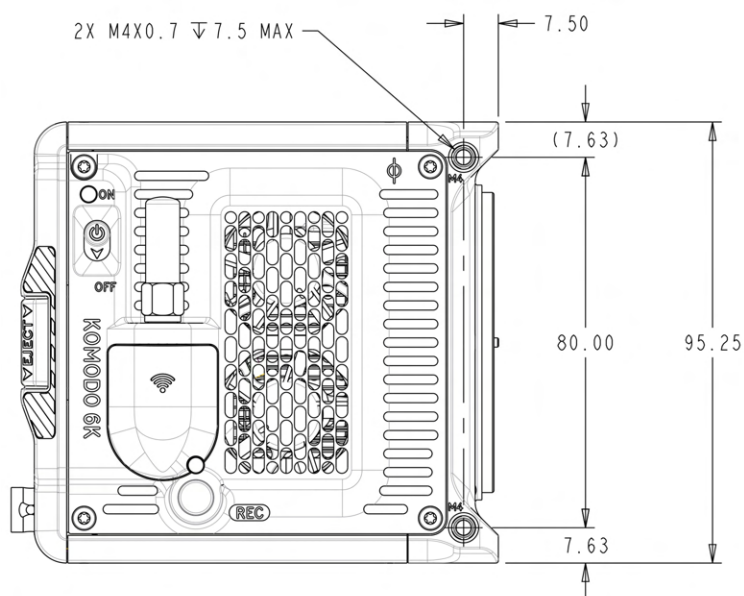


Figure: Camera Side View (Right)

LEFT SIDE VIEW

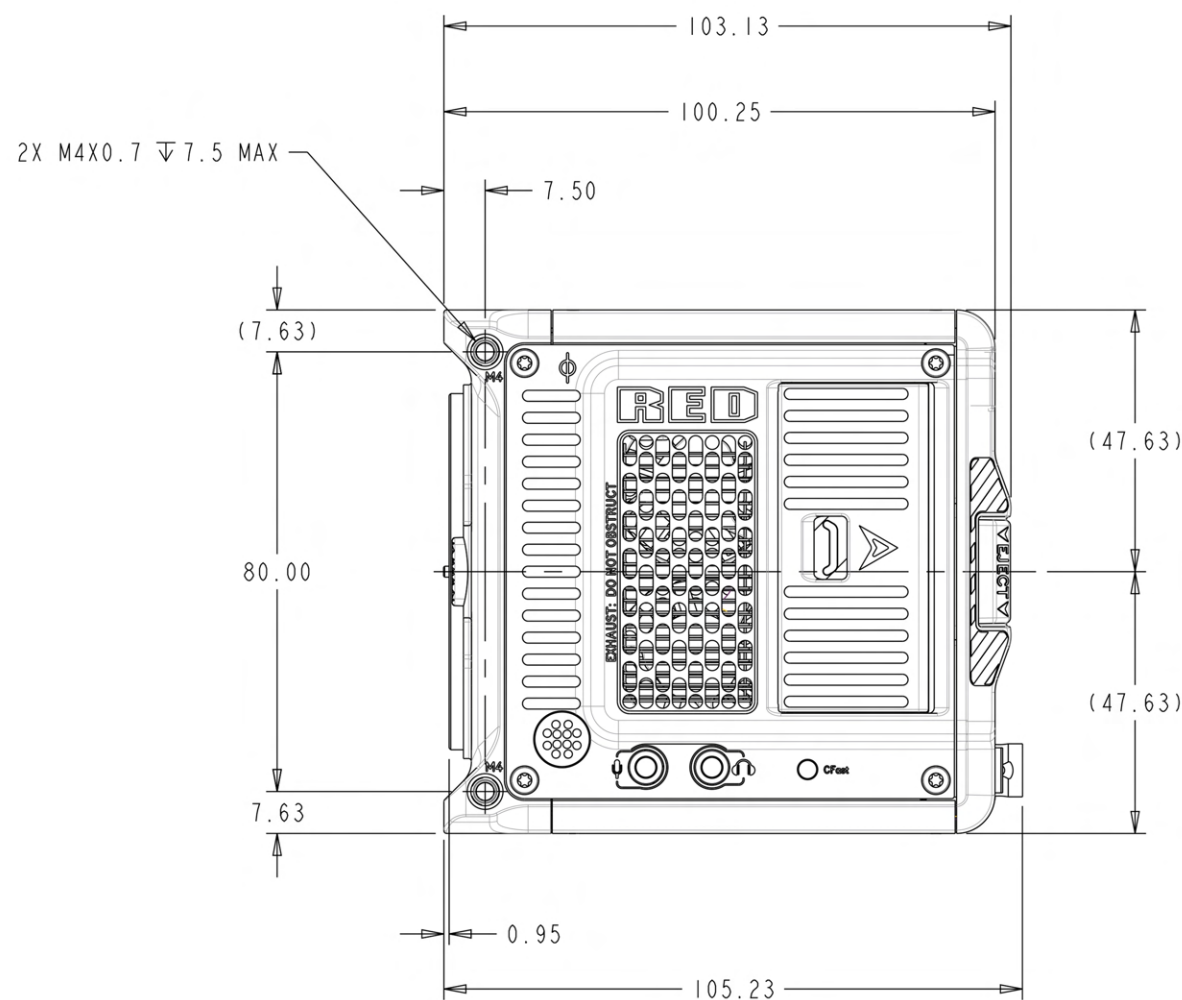


Figure: Camera Side View (Left)

TOP VIEW

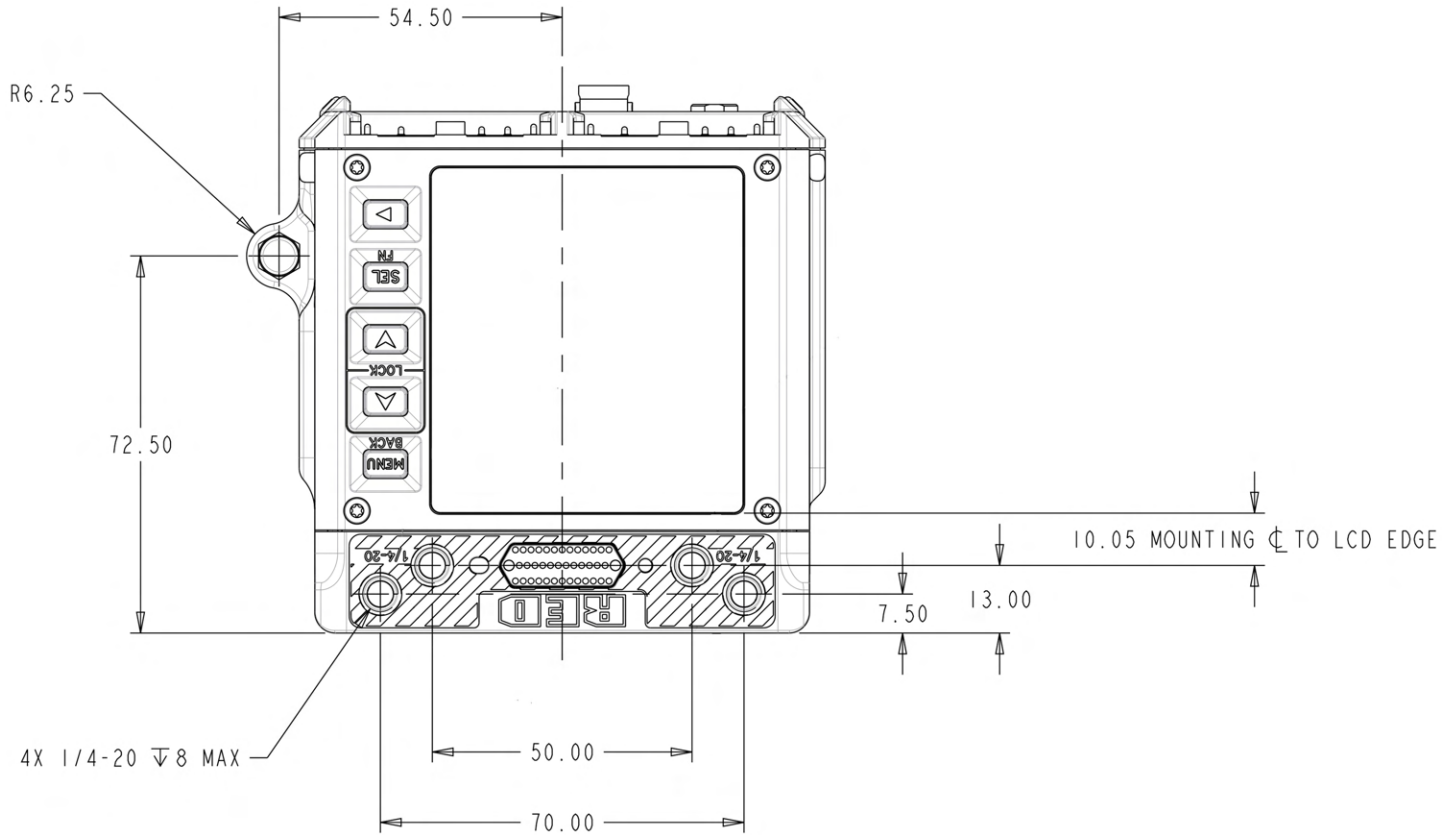


Figure: Camera Top View

BOTTOM VIEW

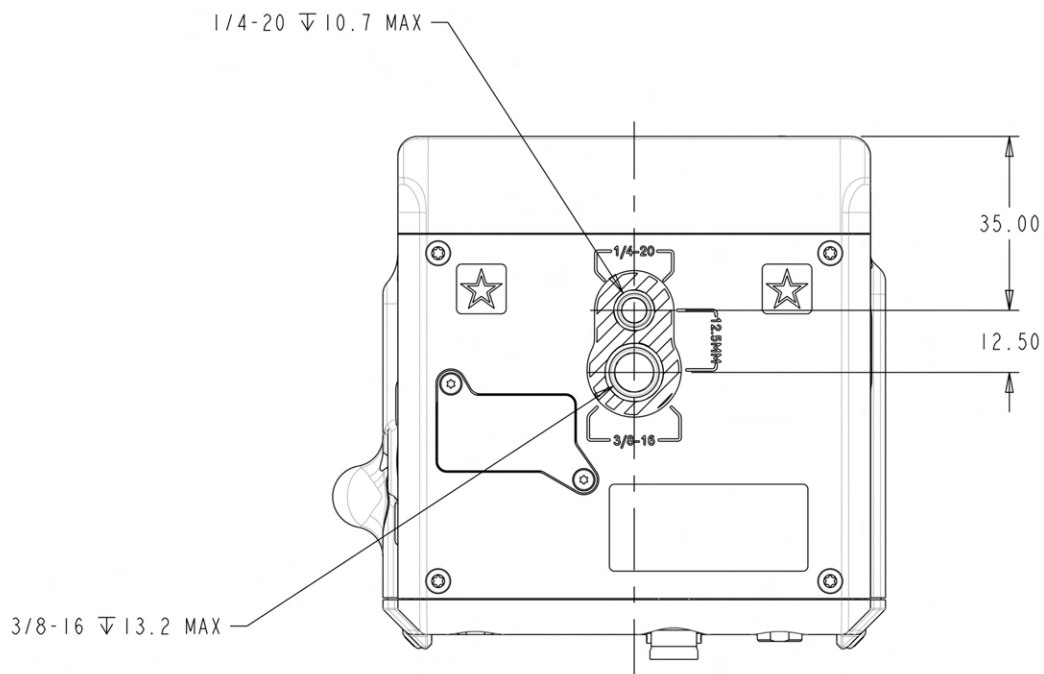


Figure: Camera Bottom View

EXTENSION PORT

The Extension port is located on the back of the camera body.



The 9-pin 0B ODU Extension port supports RS-232 RX, RS-232 TX, and a General Purpose Input (GPI) trigger (active-low switch closure), General Purpose Output (GPO), Timecode, and Genlock. The connector also offers auxiliary 5 Volt power out, with a maximum sustained current draw of 500 mA.

To operate the GPI contact closure style trigger, short pin 6 (GPI) to pin 9 (ground).

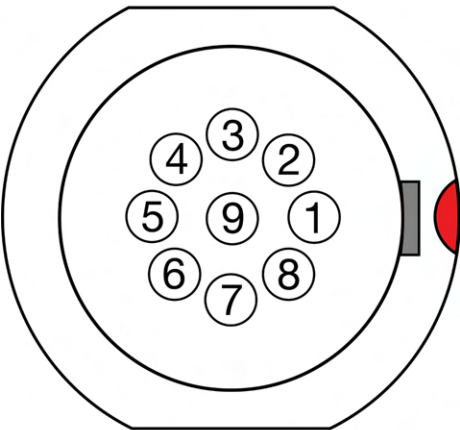


Figure: Front Face of the Extension port (Looking at the Camera)

NOTE: The required mating connector is 9-pin 0L Straight Plug Connector (ODU, part# SX0L0X-P09MCC0-0001).

9-PIN 0B ODU AUXILIARY PORT PINOUT

PIN	SIGNAL	DESCRIPTION
1	5 V AUX	5 Volt AUX (500 mA Max) enabled using the Power menu
2	Timecode Out	Timecode Out – SMPTE 12M
3	GPO	General Purpose Out, Tally or Sync, 3.3 Volt Logic Level
4	UART TX	RS-232 Transmit
5	UART RX	RS-232 Receive
6	GPI	General Purpose In, 3.3 Volt Logic Level ¹
7	Timecode In	Timecode In – SMPTE 12M
8	Genlock	Tri-Level Genlock In (SMPTE 296M and 274M)
9	GND	Signal and Power Ground

1. The signal path includes a resistor pulling the signal high, which is designed to work with a closure switch connected to GND.

DC-INPUT

The DC-IN port is located on the back of the camera body.



Connect the 2-pin 0B ODU DC power Adaptor plug to this port to provide the camera with continuous DC power. The RED power Adaptor provides DC power to operate the camera and to recharge the attached Batteries.

NOTE: The camera cannot charge batteries while it is turned on.

SPECIFICATIONS

The 2-pin 0B connector accepts unregulated (+) 7 to 17 Volts (V) Direct Current (DC) power.

The power consumption guidelines are:

- The camera uses between 20 Watts and 24 Watts of power in its basic configuration
- Additional power may be necessary based on ambient temperature and changes to camera firmware in future updates (up to an additional 5 Watts)
- Up to an additional 8 Watts might be required for additional accessories attached to the top pogo port and the EXT port
- Maximum power consumption is not expected to exceed 37 Watts

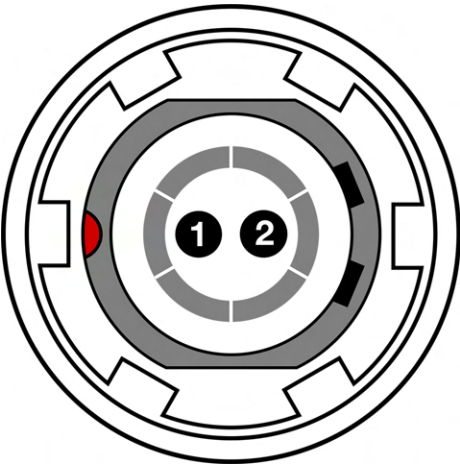


Figure: Front Face of DC-IN Port (looking at the back of the camera)

NOTE: The required mating connector is a 2-pin 0B Straight Plug Connector (ODU, part# SX0LCX-P02LJG0-0001).

ODU 0B 2-PIN CONNECTOR

PIN	SIGNAL	DESCRIPTION	DIRECTION
1	7 to 17 Volts DC	Power to the camera and batteries	In
2	GROUND	Common ground	N/A

CTRL (RS-232 CONTROL)

The CTRL port is located on the back of the **KOMODO Expander Module**.



Connect to this port to provide communication between the camera and external devices.

SPECIFICATIONS

The 4-pin 00B CTRL Connector supports RS-232 remote control for 3D camera communication and third-party metadata ingest applications.

The General Purpose Out (GPO) tally presents 3.3 V at a maximum of 0.04 A between pins 1 and 3. When used as a record tally, the rising edge of the pulse indicates the start of record, and the falling edge represents the end of record.

For more information about controlling the camera using RS-232, download the [RCP2 documentation](#).

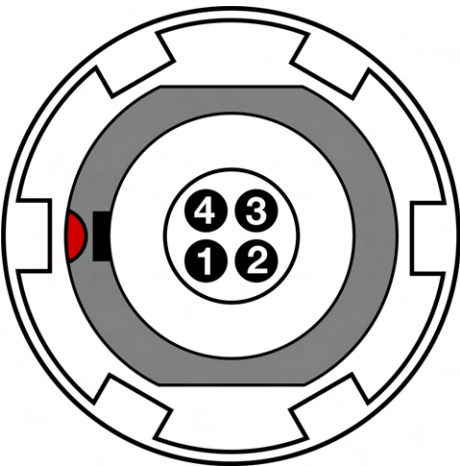


Figure: Front Face of CTRL Port (looking at the back of the **KOMODO Expander Module**)

ODU 00B 4-PIN CONNECTOR

PIN	SIGNAL	DESCRIPTION	DIRECTION
1	GROUND	Common ground	N/A
2	232 RX	RS-232 receive	In
3	SS/GPO	Shutter sync and general purpose output	Out
4	232 TX	RS-232 transmit	Out

B. TECHNICAL SPECIFICATIONS

Technical specifications reflect both current and projected information. Everything is subject to change.

KOMODO® CAMERA

SPECIFICATION	DESCRIPTION
Sensor Type	KOMODO® 19.9 MP, Super 35 mm Global Shutter, CMOS
Effective Pixels	6144 x 3240
Sensor Size	27.03 mm × 14.26 mm (Diagonal: 30.56 mm)
Dynamic Range	16+ stops
Mount Type	RF mount with electronic communication Accepts Canon RF mount-based lens adapters for diverse lens choices Supports Canon EF with full electronic communication using compatible Canon RF mount adapters ¹
Max Data Rates	Up to 280 MB/s using RED Pro CFast or other qualified CFast 2.0 media cards ¹
REDCODE® RAW Maximum Frame Rates	40 FPS at 6K 17:9 (6144 × 3240) 50 FPS at 6K 2.4:1 (6144 × 2592) 48 FPS at 5K 17:9 (5120 × 2700) 60 FPS at 4K 17:9 (4096 × 2160) 120 FPS at 2K 17:9 (2048 × 1080)
Playback Frame Rates (Project Time Base)	23.98, 24, 25, 29.97, 30, 50, 59.94, and 60 FPS, at all resolutions
Best Available REDCODE® Settings	REDCODE HQ, MQ, and LQ at 6K 17:9 (6144 × 3240) up to 40 FPS REDCODE HQ, MQ, and LQ at 4K 17:9 (4096 × 2160) up to 60 FPS REDCODE HQ, MQ, and LQ at 2K 17:9 (2048 × 1080) up to 120 FPS
REDCODE® RAW Acquisition Formats	6K 17:9 (6144 × 3240), 2:1, 2.4:1, 16:9, and anamorphic 2x, 1.8x, 1.6x, 1.5x, 1.3x, 1.25x 5K 17:9 (5120 × 2700) 4K 17:9 (4096 × 2160) and 16:9 2K 17:9 (2048 × 1080)
Apple® ProRes	4K (4096 × 2160) at ProRes 422 HQ and ProRes 422 up to 60 fps 2K (2048 × 1080) at ProRes 422 HQ and ProRes 422 up to 120 fps
Construction	Aluminum Alloy
Weight	2.10 lb without the body cap and the CFast 2.0 media card
Battery Type	Two slots for REDVOLT BP batteries
DC Power	+7 to +17 V DC using the integrated 2-pin DC-Input port
Operating Temperature	0° C to 40° C (32° F to 104° F)
Storage Temperature	-20° C to 50° C (-4° F to 122° F)
Relative Humidity	0% to 85% non-condensing
Color Management (Monochrome excluded)	Image Processing Pipeline 2 (IPP2) Supports 33×33×33 3D LUTs Supports import of CDLs
Audio	Integrated dual channel digital mono microphones, uncompressed, 24-bit 48 kHz Additional dual channel by using the integrated 3.5 mm audio jack, uncompressed, 24-bit 48 kHz

KOMODO® CAMERA

SPECIFICATION	DESCRIPTION
Autofocus	Contrast and Phase Detect
Remote Control	Wi-Fi for camera control and media access through an interchangeable dual band (2.4 GHz or 5 GHz) antenna mounted to a female RP-SMA connector. ² Genlock, Timecode In, GPIO and Ctrl (RS-232) using the integrated 9-pin EXT Port. Wired camera control and media access through the KOMODO Link Adaptor, using USB-C or Gigabit Ethernet (compatible USB-C to Ethernet adapter ¹ required) allowing camera control and live MJPEG preview video feed ²
Monitor Outputs	Integrated 12G-SDI with 6G-SDI, 3G-SDI, and 1.5G-SDI modes with 10-bit 4:2:2 bit depth 12G-SDI: Up to 4096 × 2160 4:2:2 for 60p 6G-SDI: Up to 4096 × 2160 4:2:2 for 30p 3G-SDI: Up to 2048 × 1080 4:2:2 for 60p 1.5G-SDI: Up to 2048 × 1080 4:2:2 for 30p and 24p SMPTE Timecode, HANC Metadata, and 24-bit 48 kHz Audio
Monitor Options	Integrated 2.9" 1440 x 1440 touchscreen LCD with preview and camera control Wireless live preview video feed through 2.4 GHz or 5 GHz Wi-Fi for framing

SOFTWARE

RED Control App	Access full camera controls and live preview from Android and iOS devices. Available from the Apple App Store and Google Play Store. RED Control works wirelessly or wired over USB-C, using the KOMODO Link Adaptor (sold separately)
-----------------	--

1. For more information on approved mount adaptors, lenses, batteries, accessories and CFast 2.0 cards, refer to [RED Third-Party Accessories](#)

2. Secure media and file access over FTPS requires camera firmware 1.5.0 or higher

C. ACCESSORIES

The following is a list of camera accessories. Some are optional, depending on the package you purchase:

- RED Pro CFast 2.0 Media
- RED CFast 2.0 Reader
- Batteries
- KOMODO Link Adaptor
- Outrigger Handle
- KOMODO® Wing Grip
- KOMODO Expander Module
- RED Control Apps



BATTERIES

The camera has two battery slots for REDVOLT BP batteries. The camera also accepts Canon BP-900 series batteries. The left battery slot (facing the back of the camera) has priority over the right battery slot. Refer to **Power Priority** for more information.

The camera charges the batteries when the camera is off and a power cable is connected.

WARNING: Use RED-compatible batteries only.

This camera is designed to achieve optimum performance when used with RED-compatible batteries. For a list of RED-compatible batteries, refer to **RED.COM**.

RED shall not be liable for any damage to this product and/or accidents such as malfunction, fire, etc., caused by the failure of incompatible batteries (e.g., a leakage and/or explosion of a battery pack). Please note that repairs arising out of the malfunction of incompatible batteries will not be covered by the warranty for repairs.

Using the batteries with an incompatible battery charger or product may result in malfunction or accidents for which RED cannot be held liable.

REDVOLT BP

Battery Type: Rechargeable Lithium-ion battery

Operating Temperature: 10° C~45° C (50° F~113° F)

Rated Voltage: 7.2 V

Capacity: 6300 mAh / 45 Wh

Dimensions: Height: 2.78 in. (70.5 mm), Width: 1.52 in. (38.7 mm), Depth: 1.71 in. (43.5 mm)

Weight: 7.8 ounces



CANON BP-955



Battery Type: Rechargeable Lithium-Ion battery

Operating Temperature: 32° - 104° F (0° - 40° C)

Rated Voltage: 7.4 V DC

Capacity: 5200 mAh typical / 4900 mAh (37 Wh) minimum

Dimensions: Width=1.504", Height=2.773", Depth=1.7"

Weight: 7.8 ounces

4 LEDs indicate the remaining battery life.

CANON BP-975



Battery Type: Rechargeable Lithium-Ion battery

Operating Temperature: 32° - 104° F (0° - 40° C)

Rated Voltage: 7.4 V DC


Capacity: 7800 mAh typical / 7350 mAh (55 Wh) minimum

Dimensions: Width=1.504", Height=2.773", Depth=2.45"

Weight: 11.3 ounces

As much as 50% more recording time than the BP-955. 4 LEDs indicate the remaining battery life.

RED PRO CFAST 2.0 MEDIA

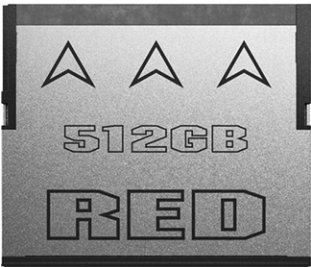

The RED Pro CFast 2.0 media provides reliable recording for the KOMODO 6K and KOMODO ST digital cinema cameras. This CFast 2.0 card features data rates up to 280 MB/s and a durable build that is both X-ray and magnet proof. Each card is resistant to extreme temperatures, humidity, shock, and vibration.

ITEM	DETAILS
Type	CFast 2.0 Media
Capacity - 512 GB	512,110,190,592 bytes
Operating temperature	32° F to 158° F (0° C to 70° C)
Operating humidity	5% to 95%, non-condensing
Storage temperature	-40° F to 185° F (-40° C to 85° C)
Shock resistance (operating)	50 g
Vibration resistance (operating)	16 g at 10 Hz to 2000 Hz
Weight	Approximately 0.02 lb (9 g)
Dimensions	Height: 1.43 in. (36.4 mm)
	Width: 1.69 in. (42.8 mm)
	Depth: 0.14 in. (3.6 mm)

RED CFAST 2.0 READER



The RED CFast 2.0 Card Reader provides a fast USB-C connection with the capability of write-protect.

Set the Write-Protect switch to the Lock position to prevent connected devices from adding any unwanted files to your CFast 2.0 card.

NOTE: You can use the RED CFast 2.0 card reader with Write-Protect to prevent the Mac OS from indexing your CFast 2.0 card. For more information refer to the How To section ([Media Best Practices](#)).

KOMODO-X™ RF TO PL WITH ELECTRONIC ND ADAPTER PACK



The RED® KOMODO-X RF to PL with Electronic ND Adapter Pack includes two filters; A clear filter for when no ND is needed and an Electronic ND Filter with a 2-7 stop range. It features precise control of 1/4, 1/3 or full stop increments which allows choosing the exact exposure without compromising the intended aperture.

Each clear and electronic ND filters thickness are measured and paired together to ensure no back focus shifts when switching between filters.

ND can be controlled via the integrated buttons on the Electronic ND Filter, onboard LCD, DSMC3™ RED® Touch 7.0" LCD, RED Control, RED Control Pro, web interface, or any other RCP2 compatible remote control, allowing for easy access to exposure no matter how the camera is configured.



Supporting Cooke /i lens communication and record triggering, the RF to PL Adapter w/ Electronic ND expands the functionality of the camera's native RF lens mount for professional applications. Constructed of a titanium core, the shimmable RF to PL Adapter is resistant to environmental temperature changes, providing consistent and precise back focus.

The RED KOMODO RF to PL Adapter w/ Electronic ND Filter Adapter Pack includes both the KOMODO® Side Ribs and Adapter Support Brackets to provide additional rigidity and a native-like mount experience.

COMPATIBILITY: Only compatible with KOMODO and KOMODO-X.

KOMODO POWER ADAPTOR

The KOMODO 45-Watt AC power Adaptor connects to the camera's **DC-Input** port to provide DC power for operating the camera and for recharging the attached **Batteries**.



The camera charges the batteries when the camera is off and the power Adaptor is connected.

KOMODO LINK ADAPTOR



The KOMODO® Link Adaptor provides KOMODO with a USB-C interface to extend the usability of the camera. Directly connect the KOMODO Link Adaptor to an iPhone or Android device, and experience a live preview with minimal latency using the RED Control app. Attach a USB-C to Ethernet adapter (not included) to the KOMODO Link Adaptor and you can remotely control the camera using an Ethernet-connected device.

Remote control allows you to:

- Access the camera remotely over long distances
- Transfer data over FTPS
- Connect to the camera when Wi-Fi is not an option
- Control a wired camera array (through the use of RCP2 API commands)

NOTE: The KOMODO Link Adaptor is mounted on the top front of the camera, which prevents the mounting of the KOMODO Outrigger Handle.

For more information, refer to the How To section ([KOMODO Link Adaptor](#)).

OUTRIGGER HANDLE

The Outrigger Handle offers a low profile, 360° adjustable ergonomic pistol grip and integrated Record Start/Stop button. Mounted to the Top Handle Port on your camera, the Outrigger Handle provides comfort, stability, and additional 1/4-20 mounting points for your peripheral camera components. The built-in Record button puts Start/Stop functionality right at your fingertips. You are always ready to capture the perfect shot.



The Outrigger Handle is ideal for shooters who use one hand on the handle for grip and record button access, and the other for lens adjustments or support.

KOMODO® WING GRIP

The KOMODO Wing Grip offers comfort and utility for carrying or shooting with your KOMODO.



Featuring an ergonomic machined grip with tactical 1/4-20 mounting points. It is lightweight and offers a seamless low-profile hand-held option.

The KOMODO Wing Grip is a simple handle and that provides extra mounting options for your camera.

KOMODO EXPANDER MODULE

The KOMODO Expander Module provides extra hardware mounting points and connections for GPI, Genlock, Timecode, and CTRL (RS-232 control).



The KOMODO Expander Module connects to the camera through the **Extension Port**.


#	CONNECTOR	CONNECTOR TYPE	DETAILS
1	Module cable	9-pin 0B ODU	Attaches to the back of the Camera Body
2	GPI	BNC	Connection for remote trigger
3	Genlock	BNC	Connection for external Genlock device
4	Timecode	BNC	Connection for external Timecode device
5	CTRL	4-pin 00B ODU	CTRL (RS-232 Control) port for external RS-232 connection

RED CONTROL APPS


The RED Control apps provides remote and tethered access to the camera from a device. Access is available through Wi-Fi, USB-C, and Ethernet.

RED CONTROL

The RED Control app is free through the Google Play store and the Apple App store.

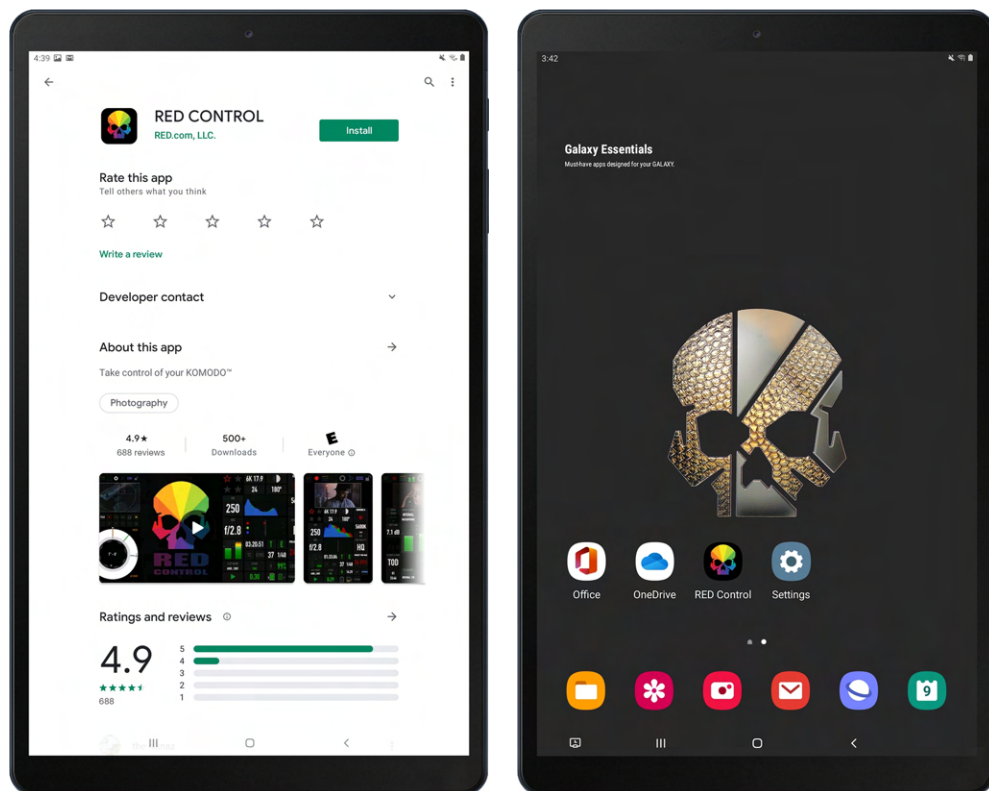

The RED Control app allows you to control all of the KOMODO features while viewing the image.

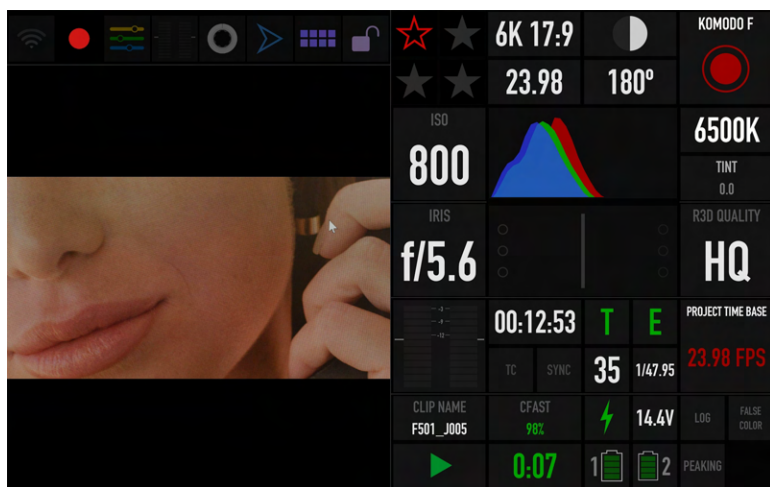

For more information about connecting the camera to RED Control, refer to the How To section ([KOMODO Link Adaptor](#)).

RED CONTROL PRO

RED Control Professional allows you to control multiple RED DSMC3 cameras from an Apple iPad or an Apple Mac. RED Control Pro is a licensed application available from the [Apple App Store](#).

